



[home](#) > [tech info](#) > [air purging](#)

TUFF TORQ SERVICE PARTS CATALOG: AIR PURGING

AIR PURGING PROCEDURE FOR HYDROSTATIC TRANSMISSION

1. Check oil level.
2. Place vehicle's drive axle on jack stands with wheels off floor.
3. Start engine and operate at low idle speed.
4. Repeat opening and closing bypass (tow) valve while alternately depressing forward and reverse pedal(s).
5. When vehicle starts to move, increase engine speed.
6. Repeat quick starts and panic stops until transaxle gives full response.
7. Remove jack stands while placing vehicle's wheels on floor.
8. Recheck and top-off oil level.

[Corporate Home](#)[Service](#)[Press](#)[Videos](#)[Terms & Conditions](#)[Contact Us](#)[Join Mailing List](#)

© Tuff Torq Corporation 2008 All Rights Reserved