



Illustrated Parts List

Model Series

121R00

TYPE NUMBERS

0001, 0002, 0003, 0004, 0110, 0111, 0112, 0385, 0411, 1339.

TABLE OF CONTENTS

Air Cleaner	8
Blower Housing	5
Camshaft	2
Carburetor	9
Carburetor Overhaul Kit	9
Controls	10
Covers/Guards	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Exhaust System	7
Flywheel	5
Fuel Supply	6
Gasket Set - Engine	4
Gasket Set - Valve	3
Governor Spring	10
Ignition	11
Lubrication	6
Operator's Manual	2
Piston/Rings/Connecting Rod	2
Rewind Starter	5
Sump	4
Thermostat	10
Valves	3
Warning Label	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL







 


 

REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL




1036 EMISSIONS LABEL


1330 REPAIR MANUAL

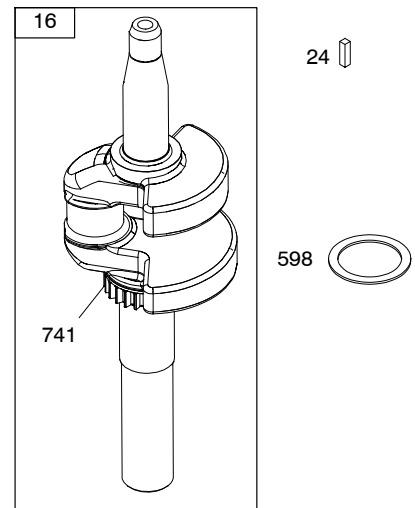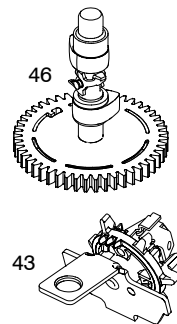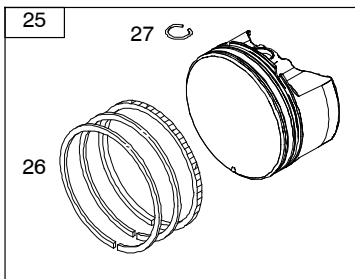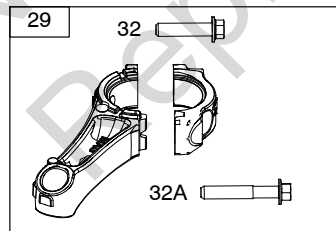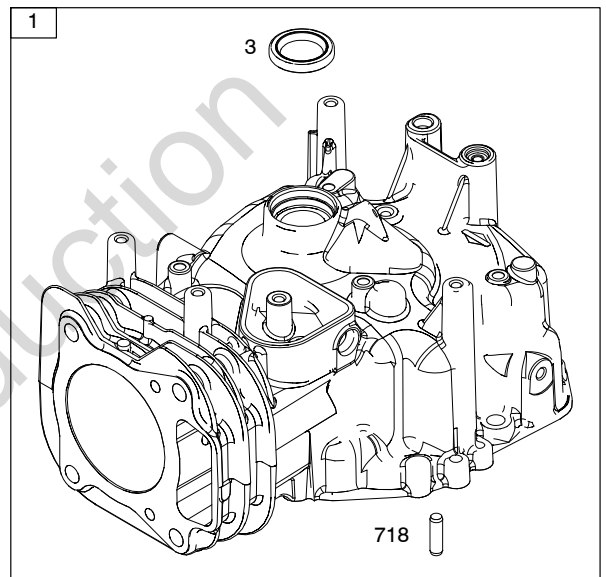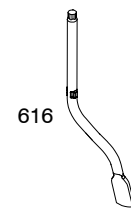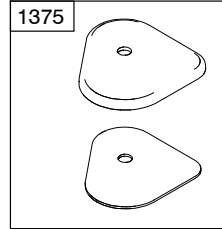


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

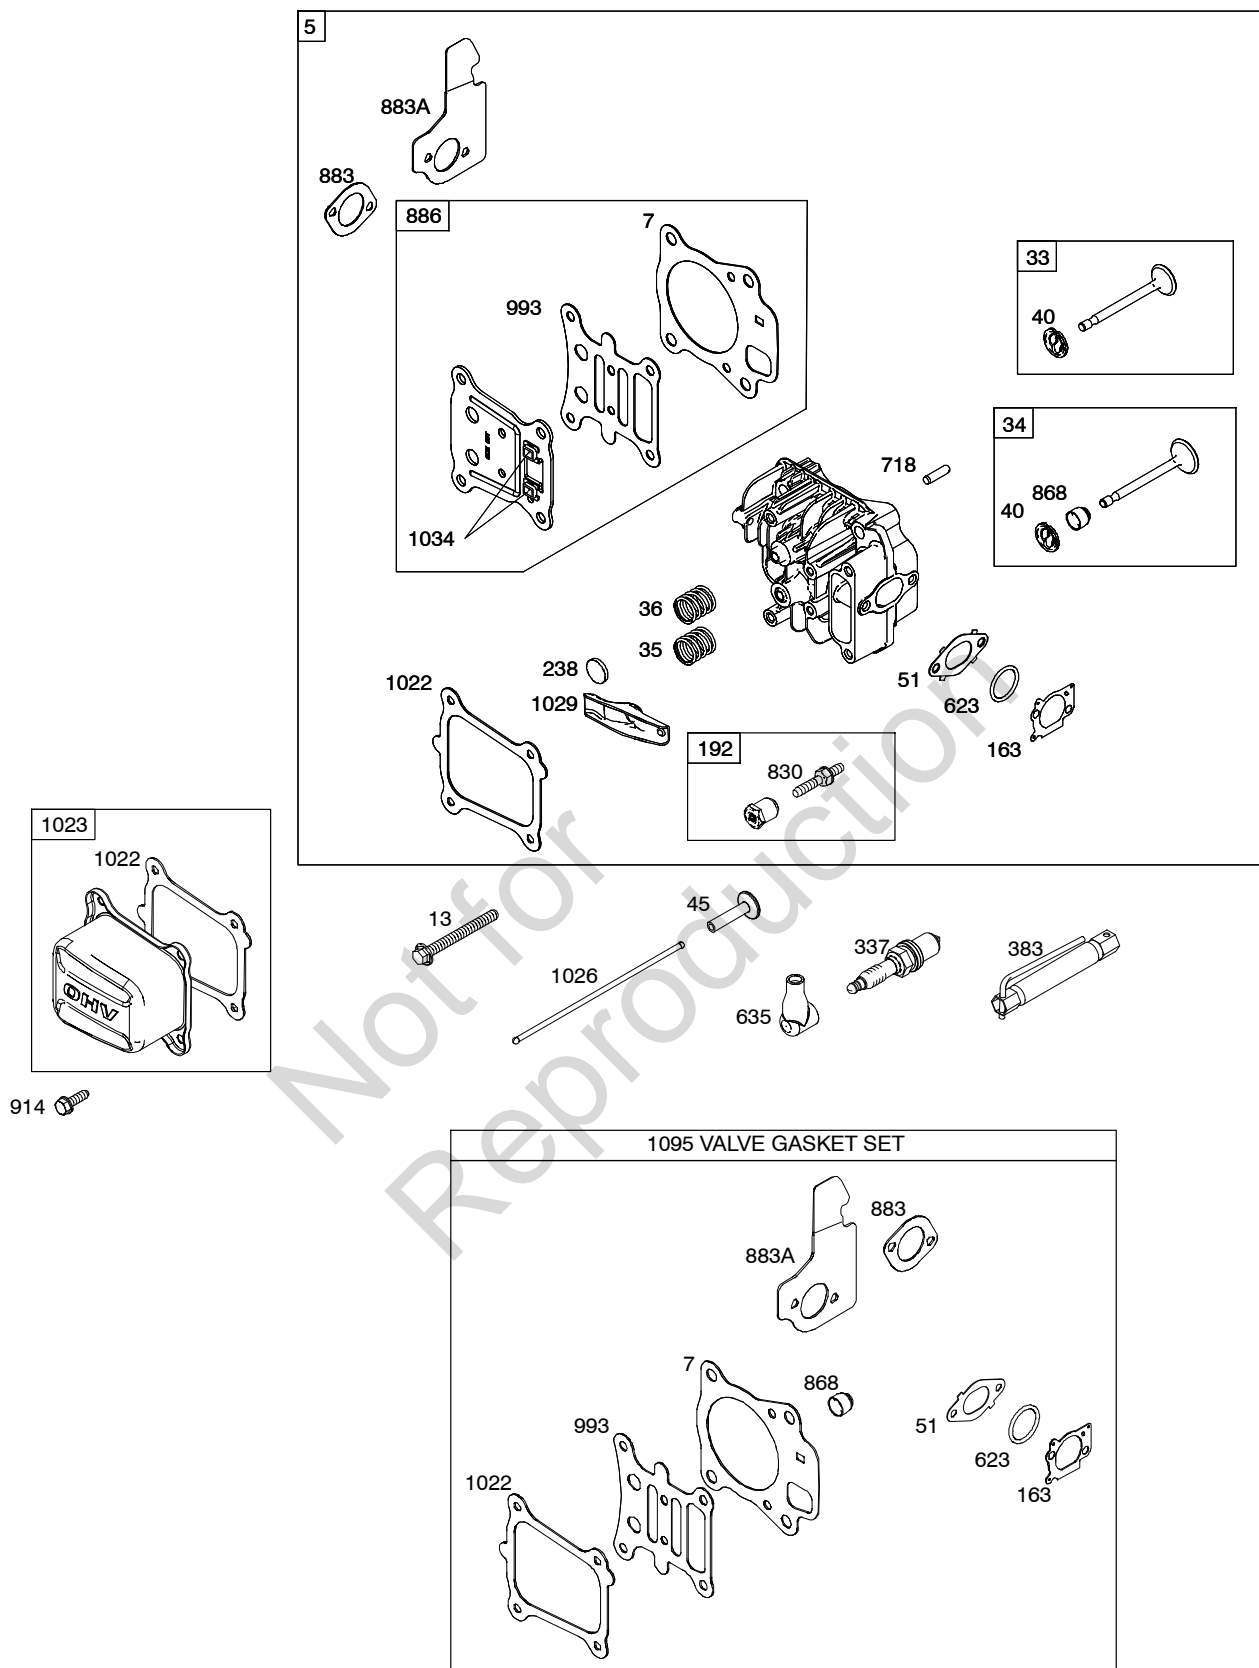






Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

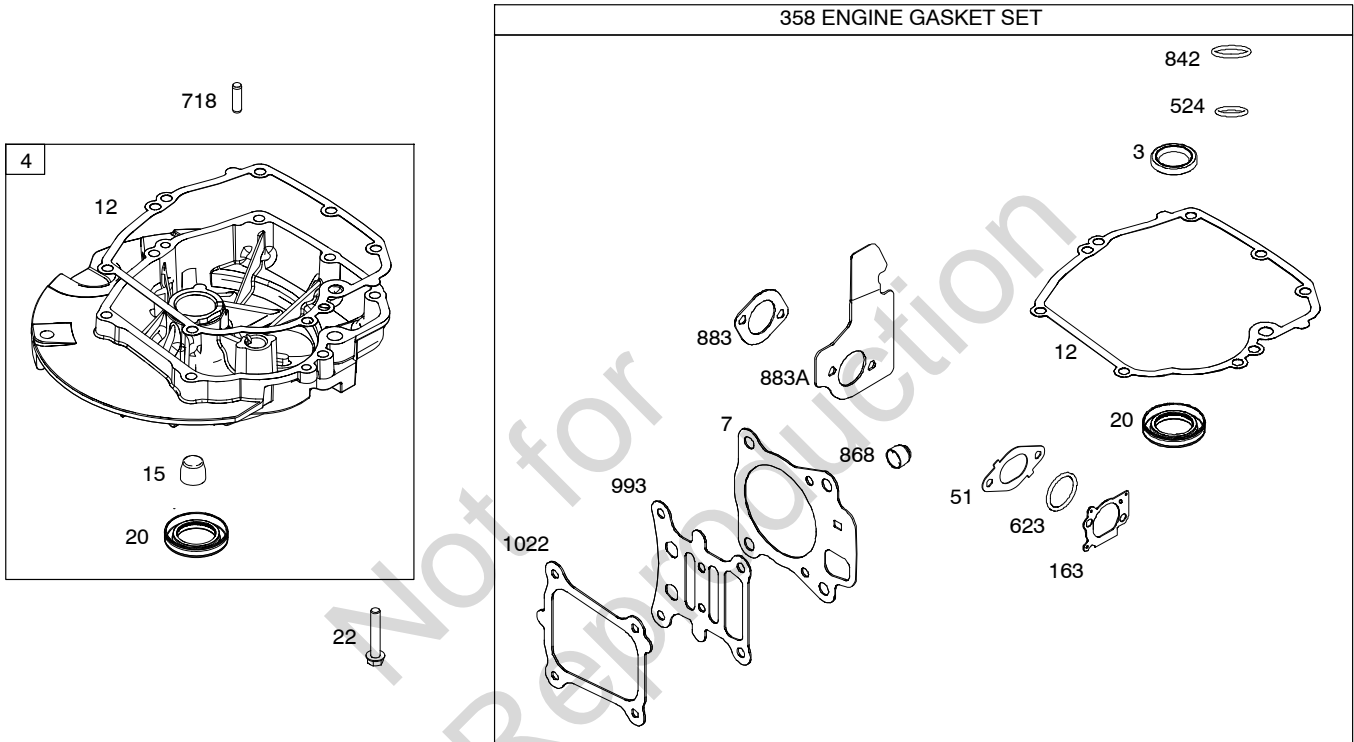


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

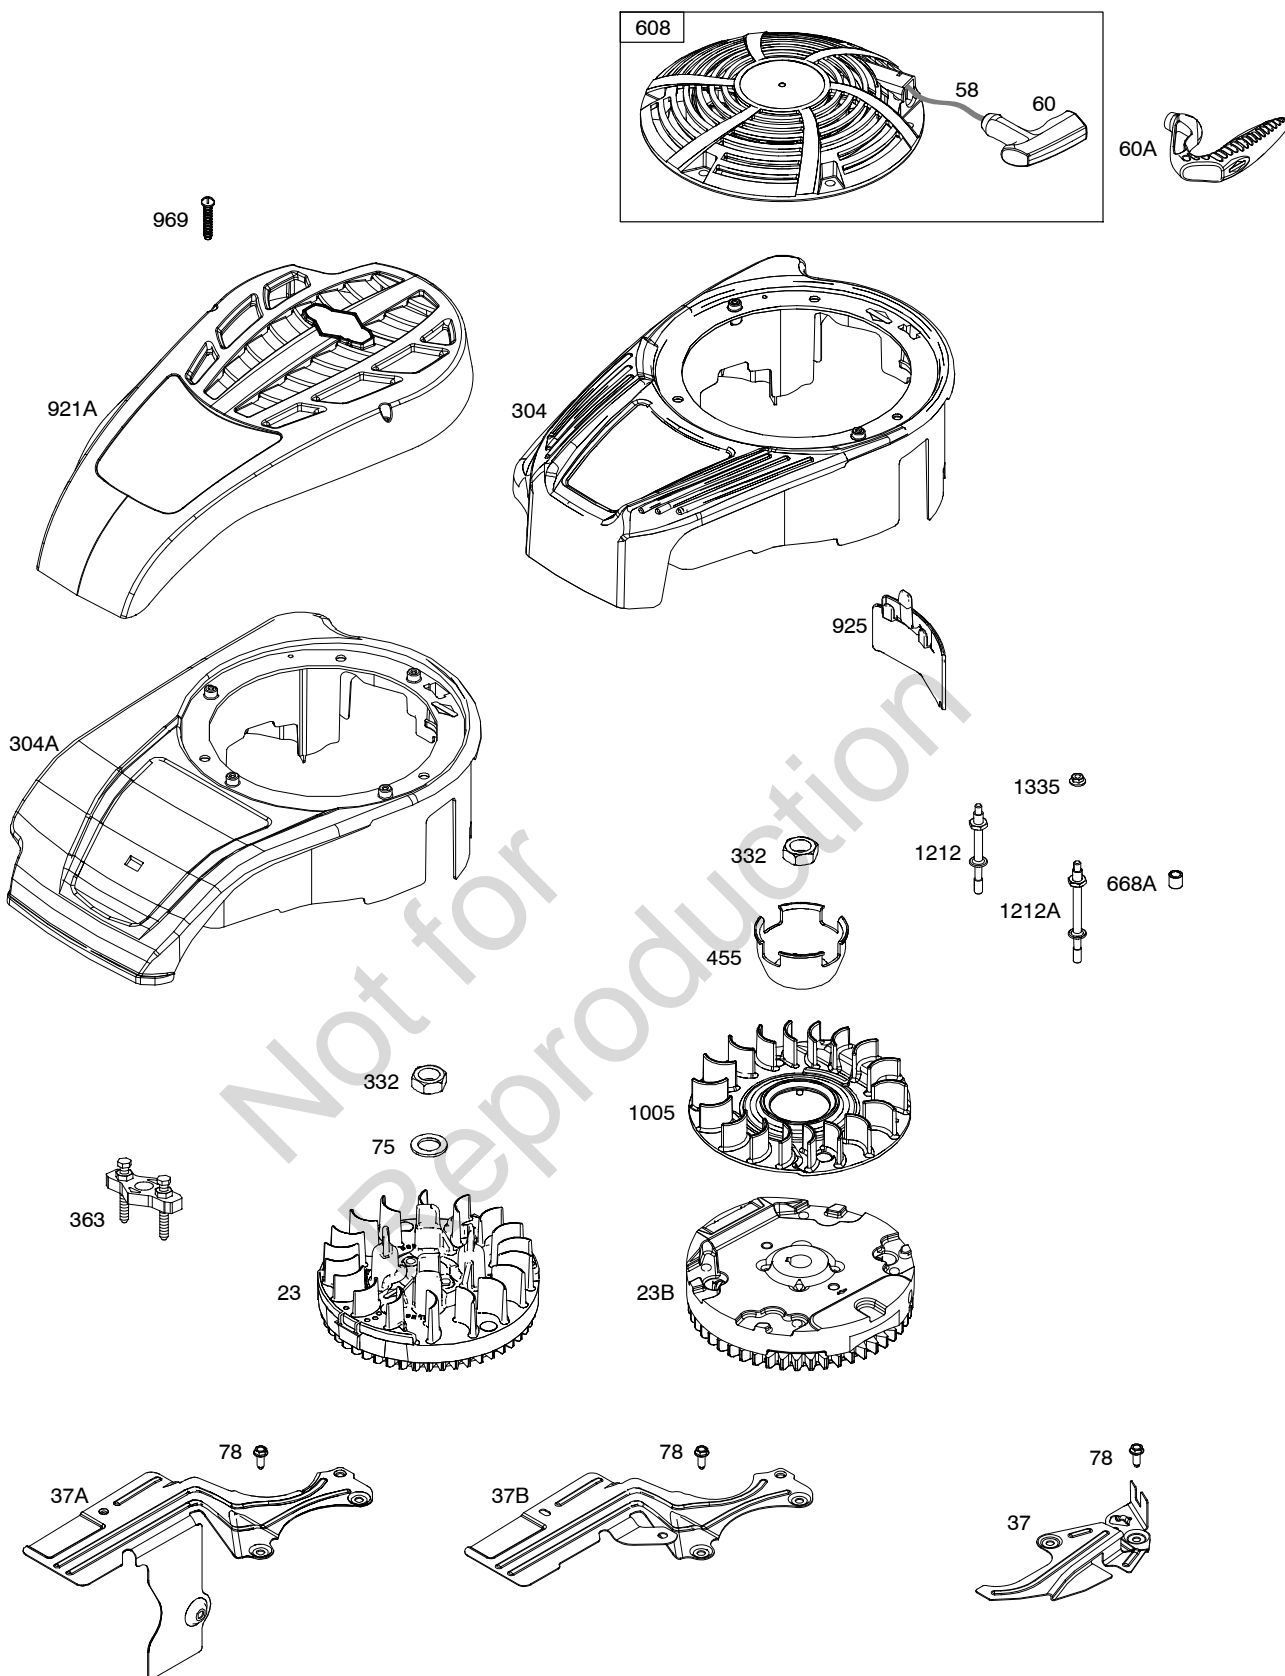


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

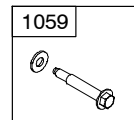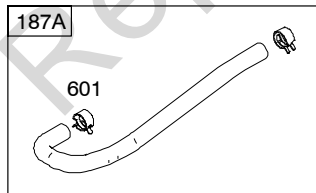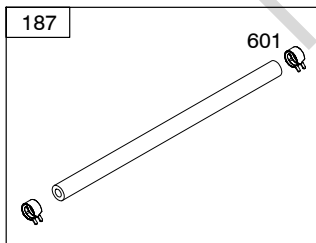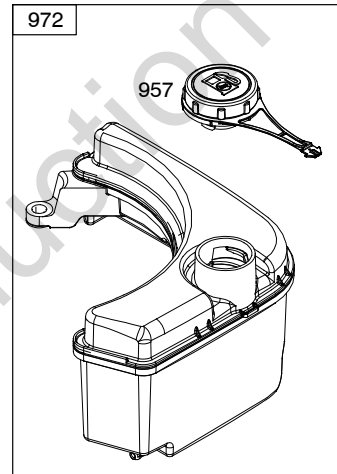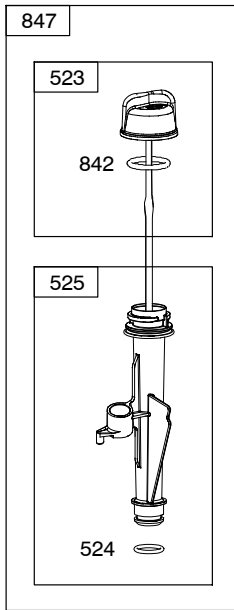


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

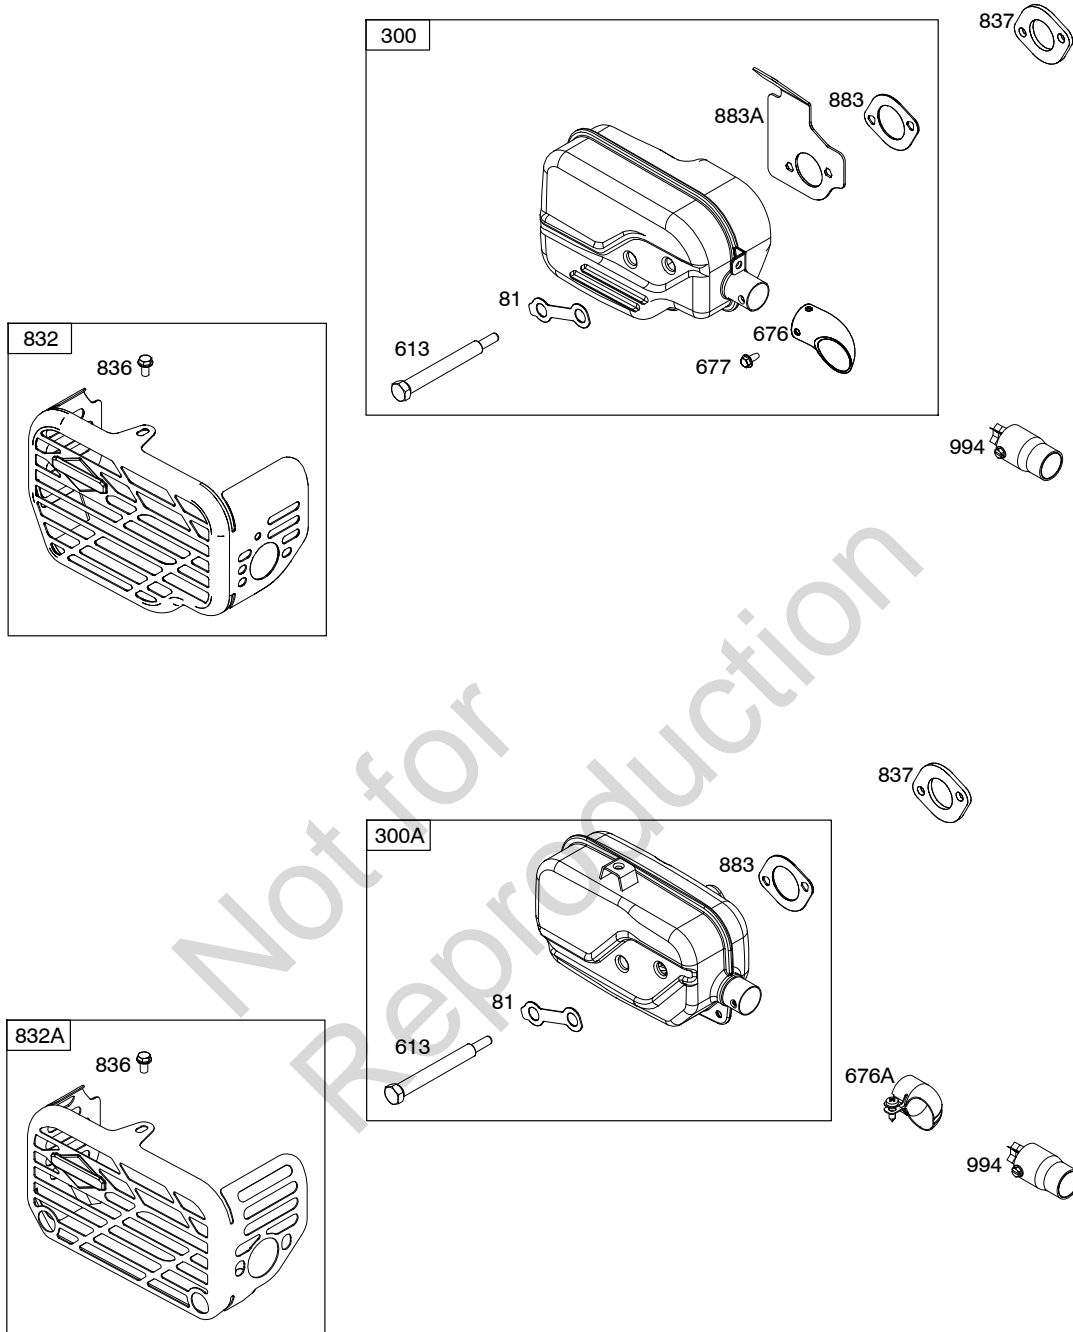






Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

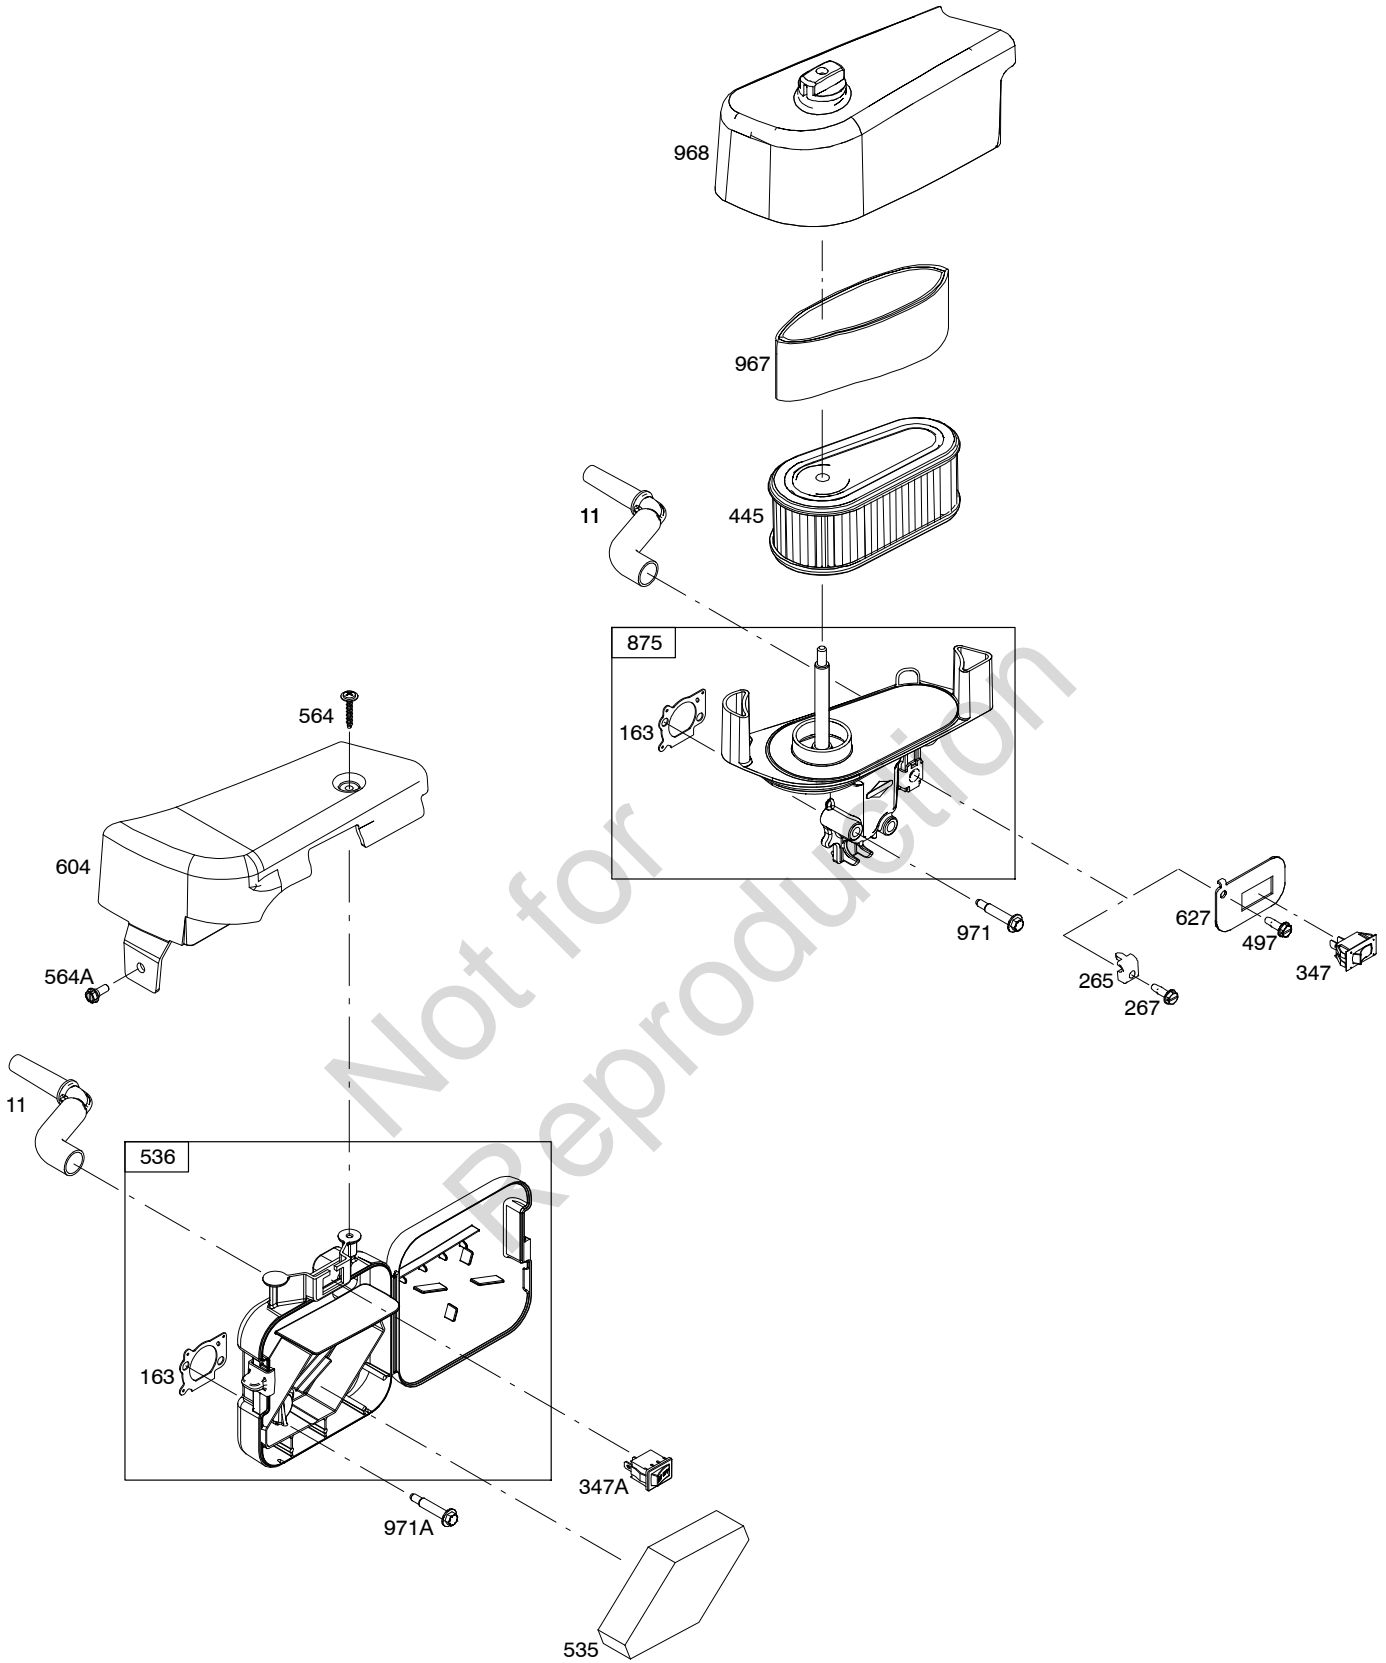


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

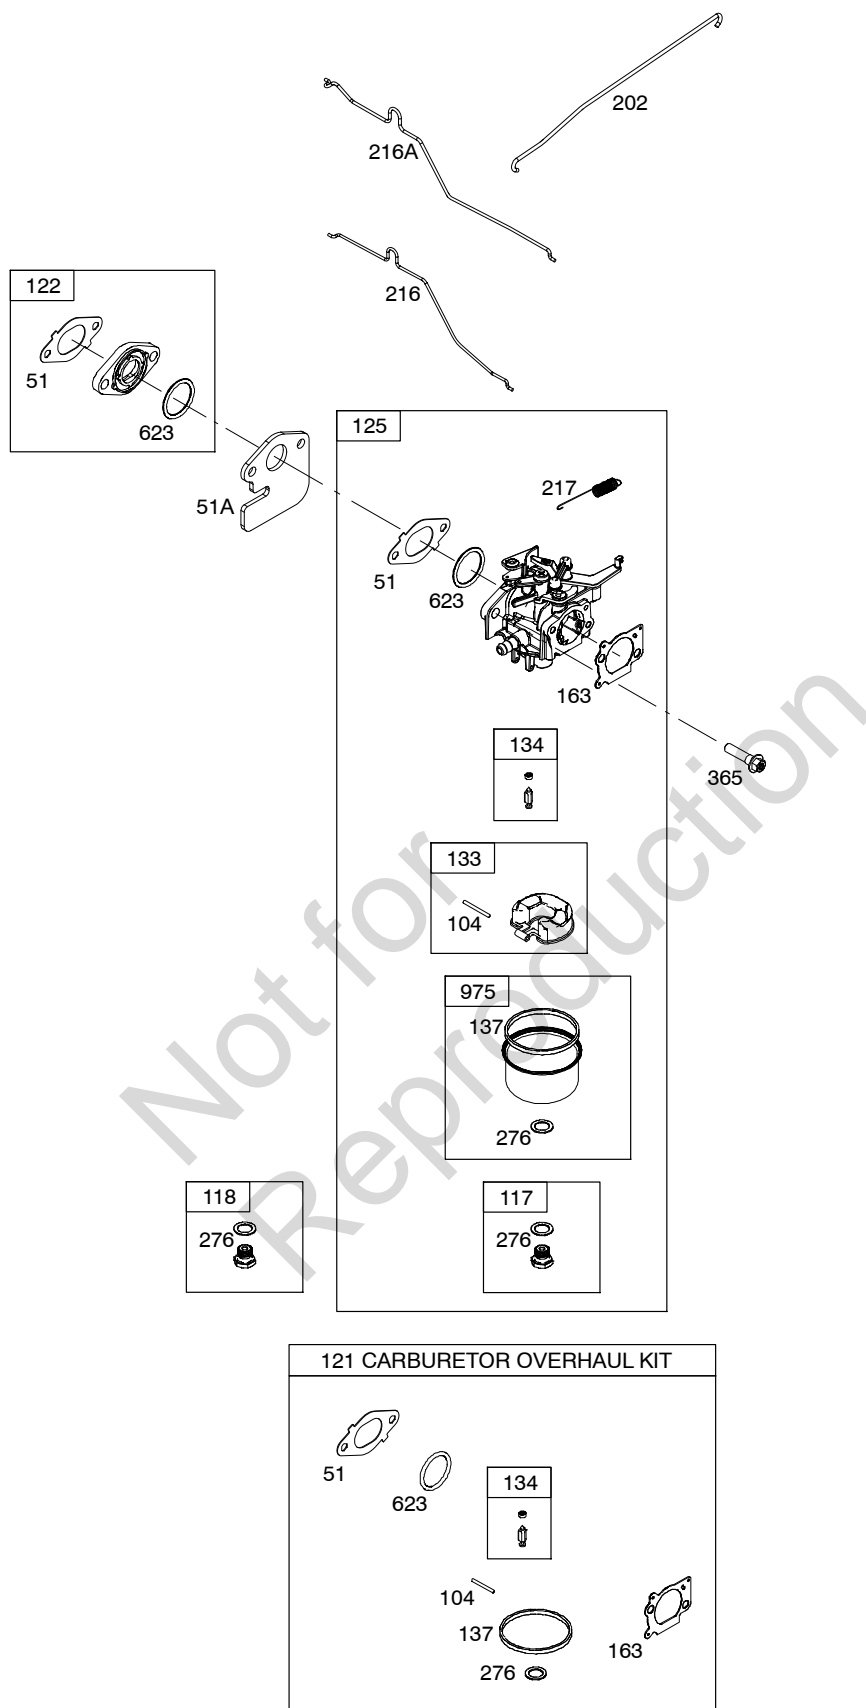

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

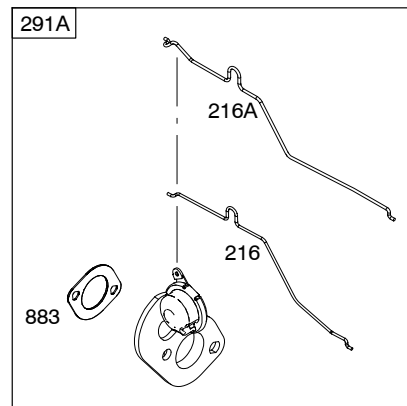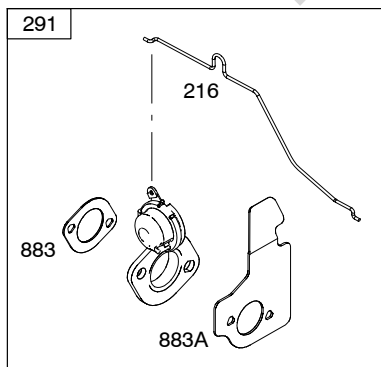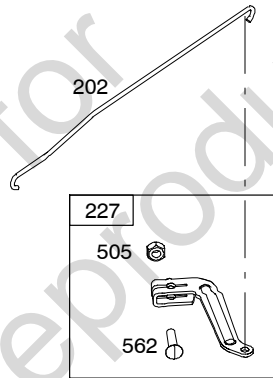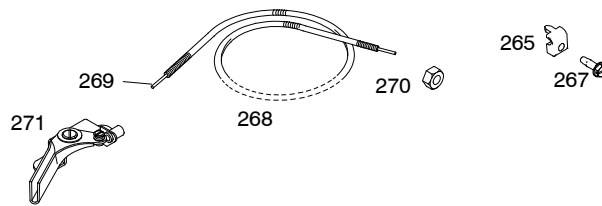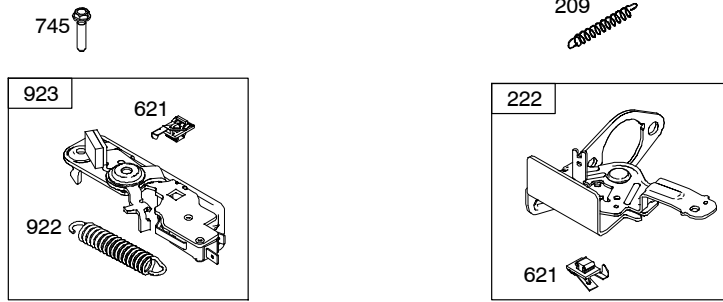

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

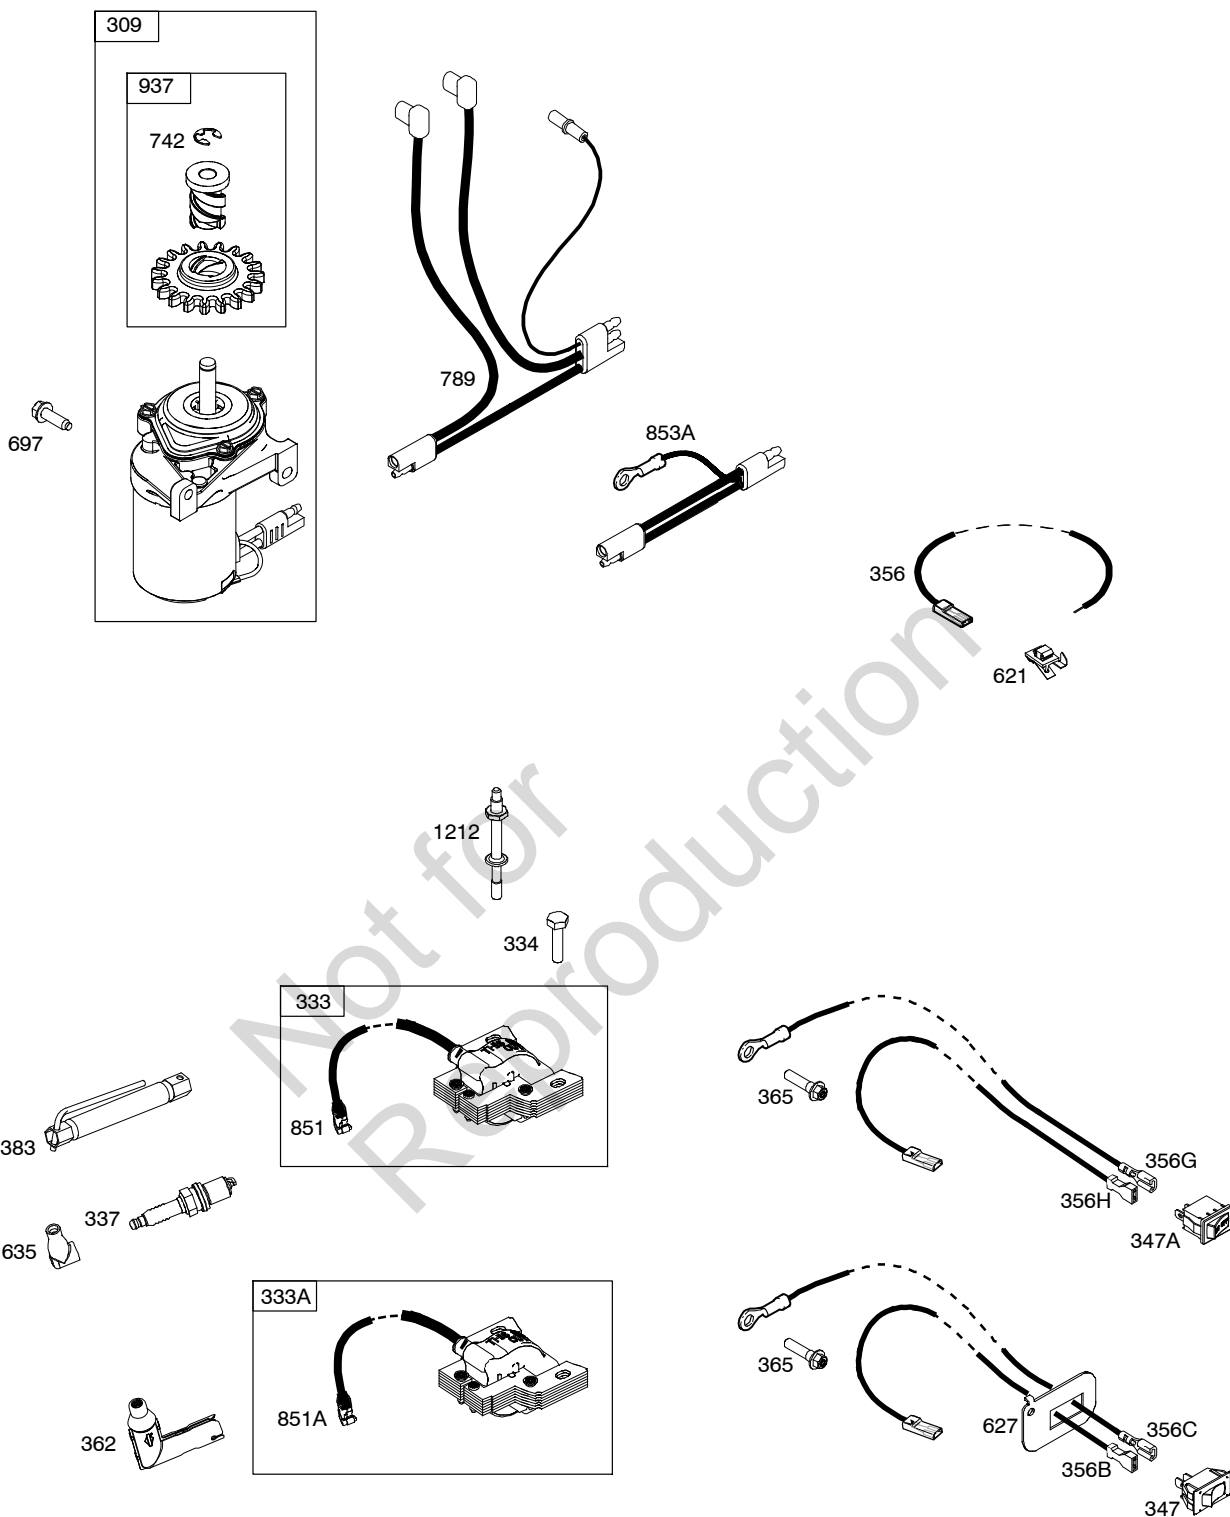

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

121R00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	798947	Cylinder Assembly	26	590402	Ring Set (Standard)	33	499642	Valve-Exhaust
3	299819s	Seal-Oil (Magneto Side)			Used on Type No(s). 0001, 0002, 0003, 0004, 0111, 0112.	34	795443	Valve-Intake
4	493279	Sump-Engine			----- Note -----	35	691304	Spring-Valve (Intake)
5	796471	Head-Cylinder			797304 Ring Set (Standard)	36	691304	Spring-Valve (Exhaust)
7	796475	Gasket-Cylinder Head			(Used After Code Date 09041900).	37	590921	Guard-Flywheel
11	796478	Tube-Breather			Used on Type No(s). 0110, 0385, 0411, 1339.	37A	796534	Guard-Flywheel
12	692232	Gasket-Crankcase			796641 Ring Set (Standard)			Used on Type No(s). 0110, 1339.
13	793451	Screw (Cylinder Head)			(Used Before Code Date 09042000).			----- Note -----
15	691680	Plug-Oil Drain (Square Socket)			Used on Type No(s). 0385, 0411, 1339.			796535 Guard-Flywheel
16	796468	Crankshaft			Used on Type No(s). 0001, 0002, 0003, 0004, 0111, 0112.			Used on Type No(s). 0385, 0411.
		Used on Type No(s). 0385, 0411, 1339.			590403 Ring Set (.020" Oversize)			Used on Type No(s). 0001, 0002, 0003, 0004, 0111, 0112.
		----- Note -----			Used on Type No(s). 0385, 0411, 1339.	37B	799155	Guard-Flywheel
		796469 Crankshaft			797305 Ring Set (.020" Oversize)			Used on Type No(s). 0001, 0002, 0003, 0004, 0111, 0112.
		Used on Type No(s). 0110.			(Used After Code Date 09041900).			----- Note -----
		799337 Crankshaft			Used on Type No(s). 0110, 0385, 0411, 1339.			799242 Guard-Flywheel
		Used on Type No(s). 0001, 0002, 0003, 0004, 0111, 0112.			796642 Ring Set (.020" Oversize)			(Required for use with replacement Starter Motor Ref# 309 799241)
20	399781s	Seal-Oil (PTO Side)			(Used Before Code Date 09042000).			Used on Type No(s). 0385, 0411.
22	691092	Screw (Crankcase Cover/Sump)			Used on Type No(s). 0110, 0385, 0411, 1339.	40	692194	Retainer-Valve
23	590420	Flywheel (Aluminum)			797305 Ring Set (.020" Oversize)	43	593913	Slinger-Governor/Oil
		Used on Type No(s). 0110, 0385, 0411, 1339.			(Used After Code Date 09041900).	45	690977	Tappet-Valve
23B	796621	Flywheel (Cast Iron)			Used on Type No(s). 0110, 0385, 0411, 1339.	46	694039	Camshaft
		Used on Type No(s). 0001, 0002, 0003, 0004, 0111, 0112.			796642 Ring Set (.020" Oversize)	51	796596	Gasket-Intake
24	222698s	Key-Flywheel			(Used Before Code Date 09042000).	51A	590398	Gasket-Intake
25	590404	Piston Assembly (Standard)			Used on Type No(s). 0385, 0411, 1339.	58	697316	Rope-Starter (Cut to Required Length)
		----- Note -----	27	691588	Lock-Piston Pin	60	281434s	Grip-Starter Rope
		590405 Piston Assembly	28	298909	Pin-Piston	60A	799716	Grip-Starter Rope
		(.020" Oversize)	29	796470	Rod-Connecting	75	691736	Washer (Flywheel)
			32	691664	Screw (Connecting Rod)	78	793480	Screw (Flywheel Guard)
			32A	695759	Screw (Connecting Rod)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 10053-12 Assemblies include all parts shown in frames. 10/28/2014

121R00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
276	271716	Washer-Sealing Used on Type No(s). 0110, 0385, 0411, 1339.	333	796499	Armature-Magneto (90 Degree Ignition Terminal)	358	592173	Gasket Set-Engine		
		----- Note ----- 797632 Washer- Sealing Used on Type No(s). 0001, 0002, 0003, 0004, 0111, 0112.			----- Note ----- 796500 Armature- Magneto (90 Degree Ignition Terminal) Used on Type No(s). 0001, 0111, 0112.	362	799646	Shield-Spark Plug		
291	796486	Thermostat Used on Type No(s). 0110, 0385, 0411, 1339.	333A	592335	Armature-Magneto (EMC Compliant) (180 Degree Ignition Terminal) Used on Type No(s). 0110, 1339.	363	19069	Puller-Flywheel		
291A	798938	Thermostat				365	793458	Screw (Carburetor)		
300	796495	Muffler-Exhaust						----- Note ----- 699484 Screw (Carburetor) Used on Type No(s). 0001, 0002, 0003, 0004, 0111, 0112.		
300A	798940	Muffler-Exhaust Used on Type No(s). 0001, 0002, 0003, 0004, 0111, 0112.	334	793454	Screw (Magneto Armature)	383	19576s	Wrench-Spark Plug		
			337	692051	Plug-Spark (Resistor)	404	690272	Washer (Governor Crank)		
304	796692	Housing-Blower (Rewind Start)			----- Note ----- 692720 Plug-Spark (EMS)	445	795066	Filter-Air Cleaner Cartridge		
		----- Note ----- 796693 Housing- Blower (Electric Start) Used on Type No(s). 0385, 0411.			594264 Plug-Spark Used on Type No(s). 0002, 0003, 0004.	455	796615	Cup-Flywheel		
		798945 Housing- Blower (Electric Start) (Required for use with replacement Starter Motor Ref# 309 799241) Used on Type No(s). 0385, 0411.	347	795333	Switch-Rocker Used on Type No(s). 0111.	497	691044	Screw (Stops Switch Bracket) Used on Type No(s). 0111.		
			347A	798939	Switch-Rocker Used on Type No(s). 0001, 0002, 0003, 0004, 0112.	505	793515	Nut (Governor Control Lever)		
304A	799647	Housing- Blower (Rewind Start) Used on Type No(s). 0001, 0111, 0112.			356	692390	Wire-Stop Used on Type No(s). 0110, 0385, 0411, 1339.	523	796503	Dipstick
					356B	692602	Wire-Stop Used on Type No(s). 0111.	524	692296	Seal-Dipstick Tube
309	799241	Motor-Starter (Requires Blower Housing Ref# 304 798945 and Flywheel Guard Ref# 37B 799242) Used on Type No(s). 0385, 0411.			356C	695630	Wire-Stop Used on Type No(s). 0111.	525	796502	Tube-Dipstick
					356G	798942	Wire-Stop Used on Type No(s). 0001, 0002, 0003, 0004, 0112.	535	797301	Filter-Air Cleaner Foam Used on Type No(s). 0001, 0002, 0003, 0004, 0112.
					356H	798943	Wire-Stop Used on Type No(s). 0001, 0002, 0003, 0004, 0112.	536	799025	Cleaner-Air Used on Type No(s). 0001, 0002, 0003, 0004, 0112.
332	690662	Nut (Flywheel)						562	793514	Bolt (Governor Control Lever)
								564	690351	Screw (Control Cover) Used on Type No(s). 0001, 0002, 0003, 0004, 0112.
								564A	799026	Screw (Control Cover) Used on Type No(s). 0001, 0002, 0003, 0004, 0112.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10053-14 Assemblies include all parts shown in frames. 10/28/2014

Not for
Reproduction

