


REPAIR PARTS

ROPER LAWN TRACTOR--MODEL NUMBER LT120AR


ELECTRICAL

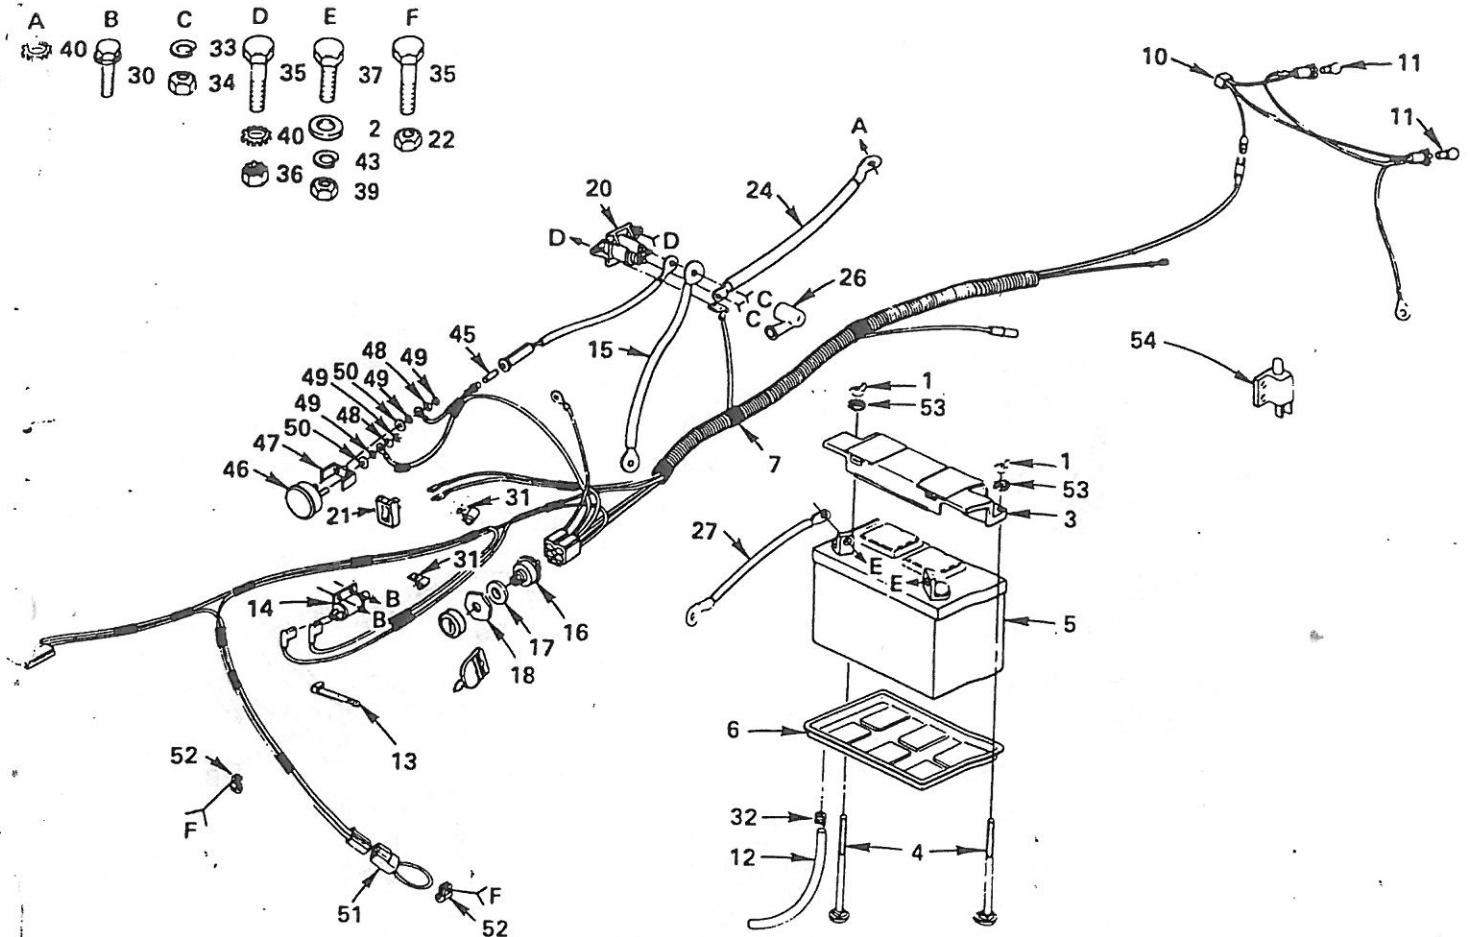

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	73490400	* Wing Nut 1/4 - 20	27	2955J	Cable - Battery (Battery to Ground)
2	19091016	Washer 9/32 x 5/8 x 16 Ga.	30	17541208	Screw - Hex Washer Hd. Thd. Rolling Type TT No. 12 - 24 x 1/2
3	105371X	Guard - Terminal	31	2751R	Clip - Fuel Line
4	72240460	Battery Bolt (Bolt - Carriage, Rd. Hd, Sq. Neck 1/4 - 20 x 7 - 1/2)	32	6999R	Clamp - Hose
5	104921X	Battery	33	10090400	Lockwasher 1/4
6	105372X	Battery Tray	34	73350400	* Nut - Hex Jam 1/4 - 20
7	108055X	Harness - Ignition	35	74780408	* Bolt - Hex 1/4 - 20 x 1/2 Gr. 5
10	7661J	Harness - Light Socket	36	73510400	Nut - Keps, Hex 1/4 - 20
11	7662J	Bulb - Light	37	74760412	* Bolt - Hex 1/4 - 20 x 3/4
12	100541K	Tube - Battery Tray	39	73220400	* Nut - Hex 1/4 - 20
13	7192J	Cable Tie	40	11050400	Washer - Lock 1/4 Ext. Tooth
14	7755R	Switch - Interlock	43	10040400	* Lockwasher 1/4
15	2957J	Cable - Battery (Battery to Solenoid)	45	6374R	Fuse - 30 Amp.
16	4406R	Ignition Switch	46	9433R	Ammeter
17	11151000	Lockwasher - Internal Tooth 5/8	47	6009J	Bracket - Ammeter
18	3258J	Nut - Hex 5/8 - 32	48	6952J	Lockwasher No. 10
19	7552H	Key	49	6953J	Nut No. 10
20	2008J	Solenoid	50	6951J	Washer 7/32 x 1/2 x 18 Ga.
21	4482J	Switch - Light	51	102501X	Loop - Wire
22	73680400	Nut - Hex 1/4 - 20	52	235R	Clip - Insulated
23	7320R	Nut - Hex	53	11030400	Lockwasher - Int./Ext. 1/4
24	5907J	Cable - Battery (Solenoid to Starter)	54	104445X	Switch - Interlock
25	19151116	Washer 15/32 x 11/16 x 16 Ga.	...	101539X	Sheet - Instruction, Tractor 15° Slope
26	719J	Terminal Cover (For Solenoid)	...	106962X	Owners Manual

REPAIR PARTS ENCLOSURES

ROPER LAWN TRACTOR--MODEL NUMBER LT120AR

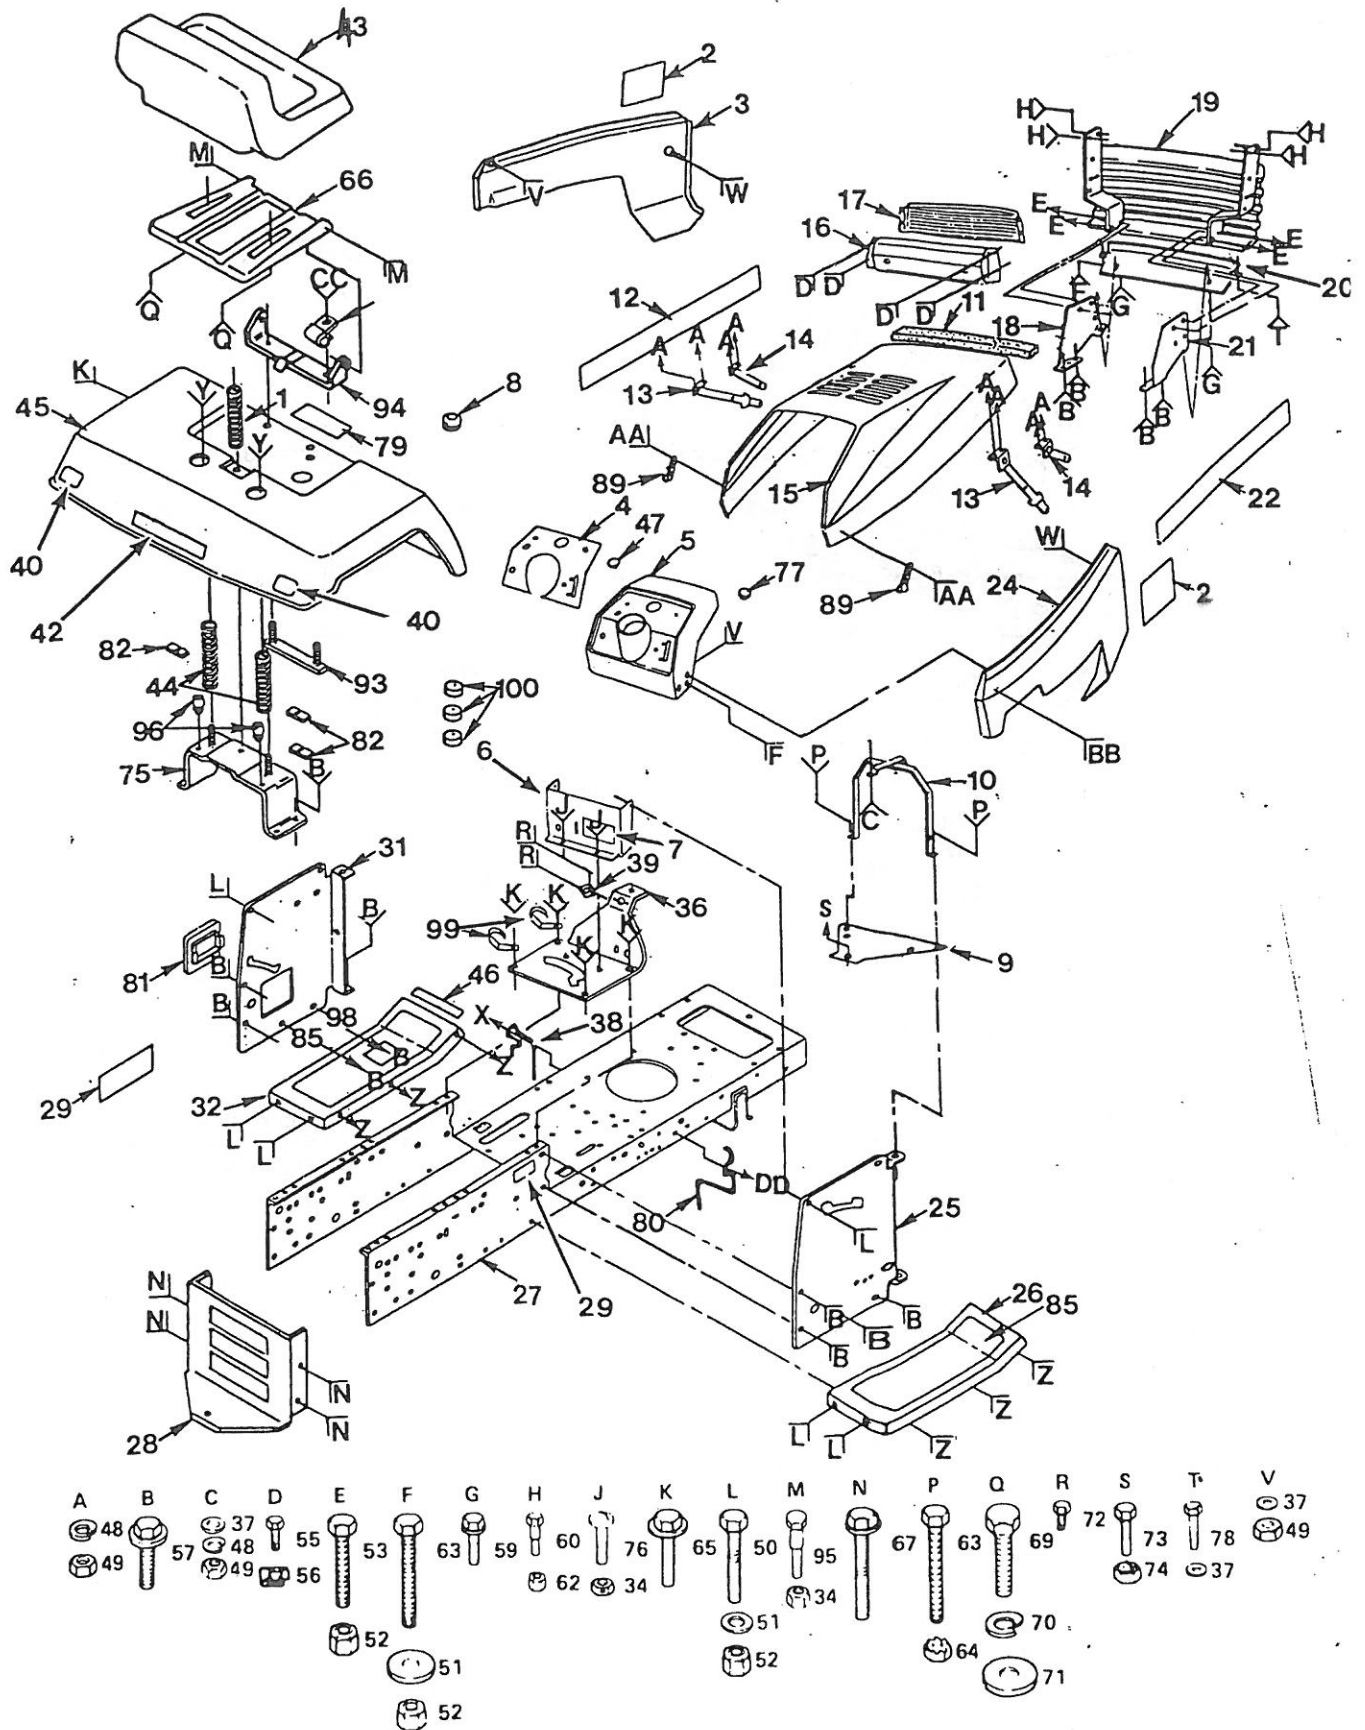


REPAIR PARTS

ROPER LAWN TRACTOR--MODEL NUMBER LT120AR

ENCLOSURES


EY O.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
2	108563X	Decal - Side Panel	55	17211010	Screw - Hex Washer Hd. Tapping 10 - 16 x 5/8
3	108442X358	Panel - Side, L.H.	56	104755X	"J" Fastener
4	105414X	Decal - Dash	57	17490612	Screw - Hex Washer Hd. Thd. Rolling 3/8 - 16 x 3/4 Type TT
5	106099X	Dashboard	59	17490512	Screw - Hex Washer Hd. Thd. Rolling 5/16 - 18 x 3/4 Type TT
6	104783X	Dash Assembly - Lower	60	7605J	Bolt - Shoulder 1/4 - 20
7	108456X	Decal - Instruction	62	73680400	Nut - Crownlock 1/4 - 20
8	109641X	Grommet	63	74760620	*Bolt - Hex 3/8 - 16 x 1 - 1/4
9	106965X	Plate - Support, Battery	64	73510600	Nut - Keps 3/8 - 16
10	104786X	Support Assembly - Dash	65	17490608	Screw - Hex Washer Hd. Thd. Forming 3/8 - 16 x 1/2 Type TT
11	105037X	Foam - Strip	66	105516X	Pan - Seat
12	104643X	Decal - Hood, L.H.	67	17490612	Screw - Hex Washer Hd. Thd. Rolling 3/8 - 16 x 3/4 Type TT
13	106784X	Strap Assembly - Hinge, Rear	69	74780816	*Bolt - Hex 1/2 - 13 x 1 Gr. 5
14	104618X	Strap Assembly - Hinge, Front	70	10110800	*Washer - Lock 1/2
15	108370X358	Hood	71	19171912	Washer 17/32 x 1 - 3/8 x 12
	104613X	Bezel Assembly	72	17431008	Screw - Hex Head Self Tapping No. 10 - 16 x 1/2 Type B
	106395X	Lens	73	74780512	*Bolt - Hex 5/16 - 18 x 3/4 Gr. 5
	104632X	Support - Grill, L.H.	74	73510500	Nut - Keps 5/16 - 18
	104801X	Grill Assembly	75	105509X	Bracket Assembly - Fender
J	104634X358	Strap - Grill	76	74180512	Screw - Mach. Cross Thd. 5/16 - 18 x 3/
21	104633X	Support - Grill, R.H.	77	5479J	Plug - Dash
22	104644X	Decal - Hood, R.H.	78	17490412	Screw - Hex Washer Hd. 1/4 - 20 x 3/4
24	108443X358	Panel - Side, R.H.	79	106974X	Decal - Opei - Caution
25	106976X	Panel - Dash, R.H.	80	106300X	Guide - Belt, Lower, Engine, Pulley, R.H.
26	105464X358	Footrest - R.H.	81	105505X	Cover - Access
27	108971X	Chassis	82	105514X	Clamp - Spring
28	102481X	Drawbar	83	19132012	Washer 13/32 x 1 - 1/4 x 12 Ga.
29	104808X	Decal - Frame	84	72140606	*Bolt - Carriage 3/8 - 16 x 3/4
1	106966X	Panel - Dash, L.H.	85	108256X	Pad - Footrest
2	105465X358	Footrest - L.H.	86	74191008	Screw - Cross Recess Pan Hd. Machine 10 - 24 x 1/2
34	73680500	Locknut - Gripco 5/16 - 18	87	10071000	*Washer - Lock No. 10
36	108263X	Saddle	88	2029J	Nut - Weld
37	19091216	Washer 9/32 x 3/4 x 16 Ga.	89	100225L	Latch - Hood
38	106301X	Guide - Belt, Lower, Engine, Pulley, L.H.	90	74981020	Screw - Machine Cross Recess 10 - 24 x 1 - 1/4
39	1554J	Bushing - Steering	91	7206J	Spacer - Split 10 x 3/4
40	106202X	Reflector - Taillight	92	73731000	Nut - Keps 10 - 24
42	104810X	Decal - Fender, Roper	93	105511X	Strap Assembly - Fender
	106855X	Seat	94	105513X	Bracket - Pivot, Seat
	105512X	Spring - Compression	95	105529X	Bolt - Shoulder 5/16 - 18
	108057X358	Fender	96	105531X	Nut - Push
47	4900J	Decal - Clutch/Brake	97	19070818	Washer 7/32 x 1/2 x 18 Ga.
48	8022J	Plug - Dash	98	105813X	Decal - V-Belt Drive
49	10090400	*Washer - Lock 1/4	99	2751R	Schematic, Tractor
50	73220400	*Nut - Hex 1/4 - 20	100	109412X	Clip - Fuel Line
51	74760612	*Bolt - Hex 3/8 - 16 x 3/4			Cap - Spring
52	19131312	Washer 13/32 x 13/16 x 12 Ga.			
53	73680600	Nut - Crownlock 3/8 - 16			
	74760616	*Bolt - Hex 3/8 - 16 x 1			

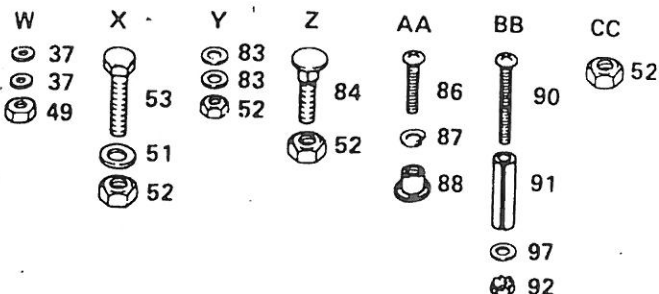

*STANDARD HARDWARE--PURCHASE LOCALLY

ROPER LAWN TRACTOR--MODEL NUMBER LT120AR
 ENGINE BRIGGS & STRATTON--MODEL NUMBER 281707, TYPE NUMBER 0133-01

POWER & MECHANICAL CONTROLS GROUP

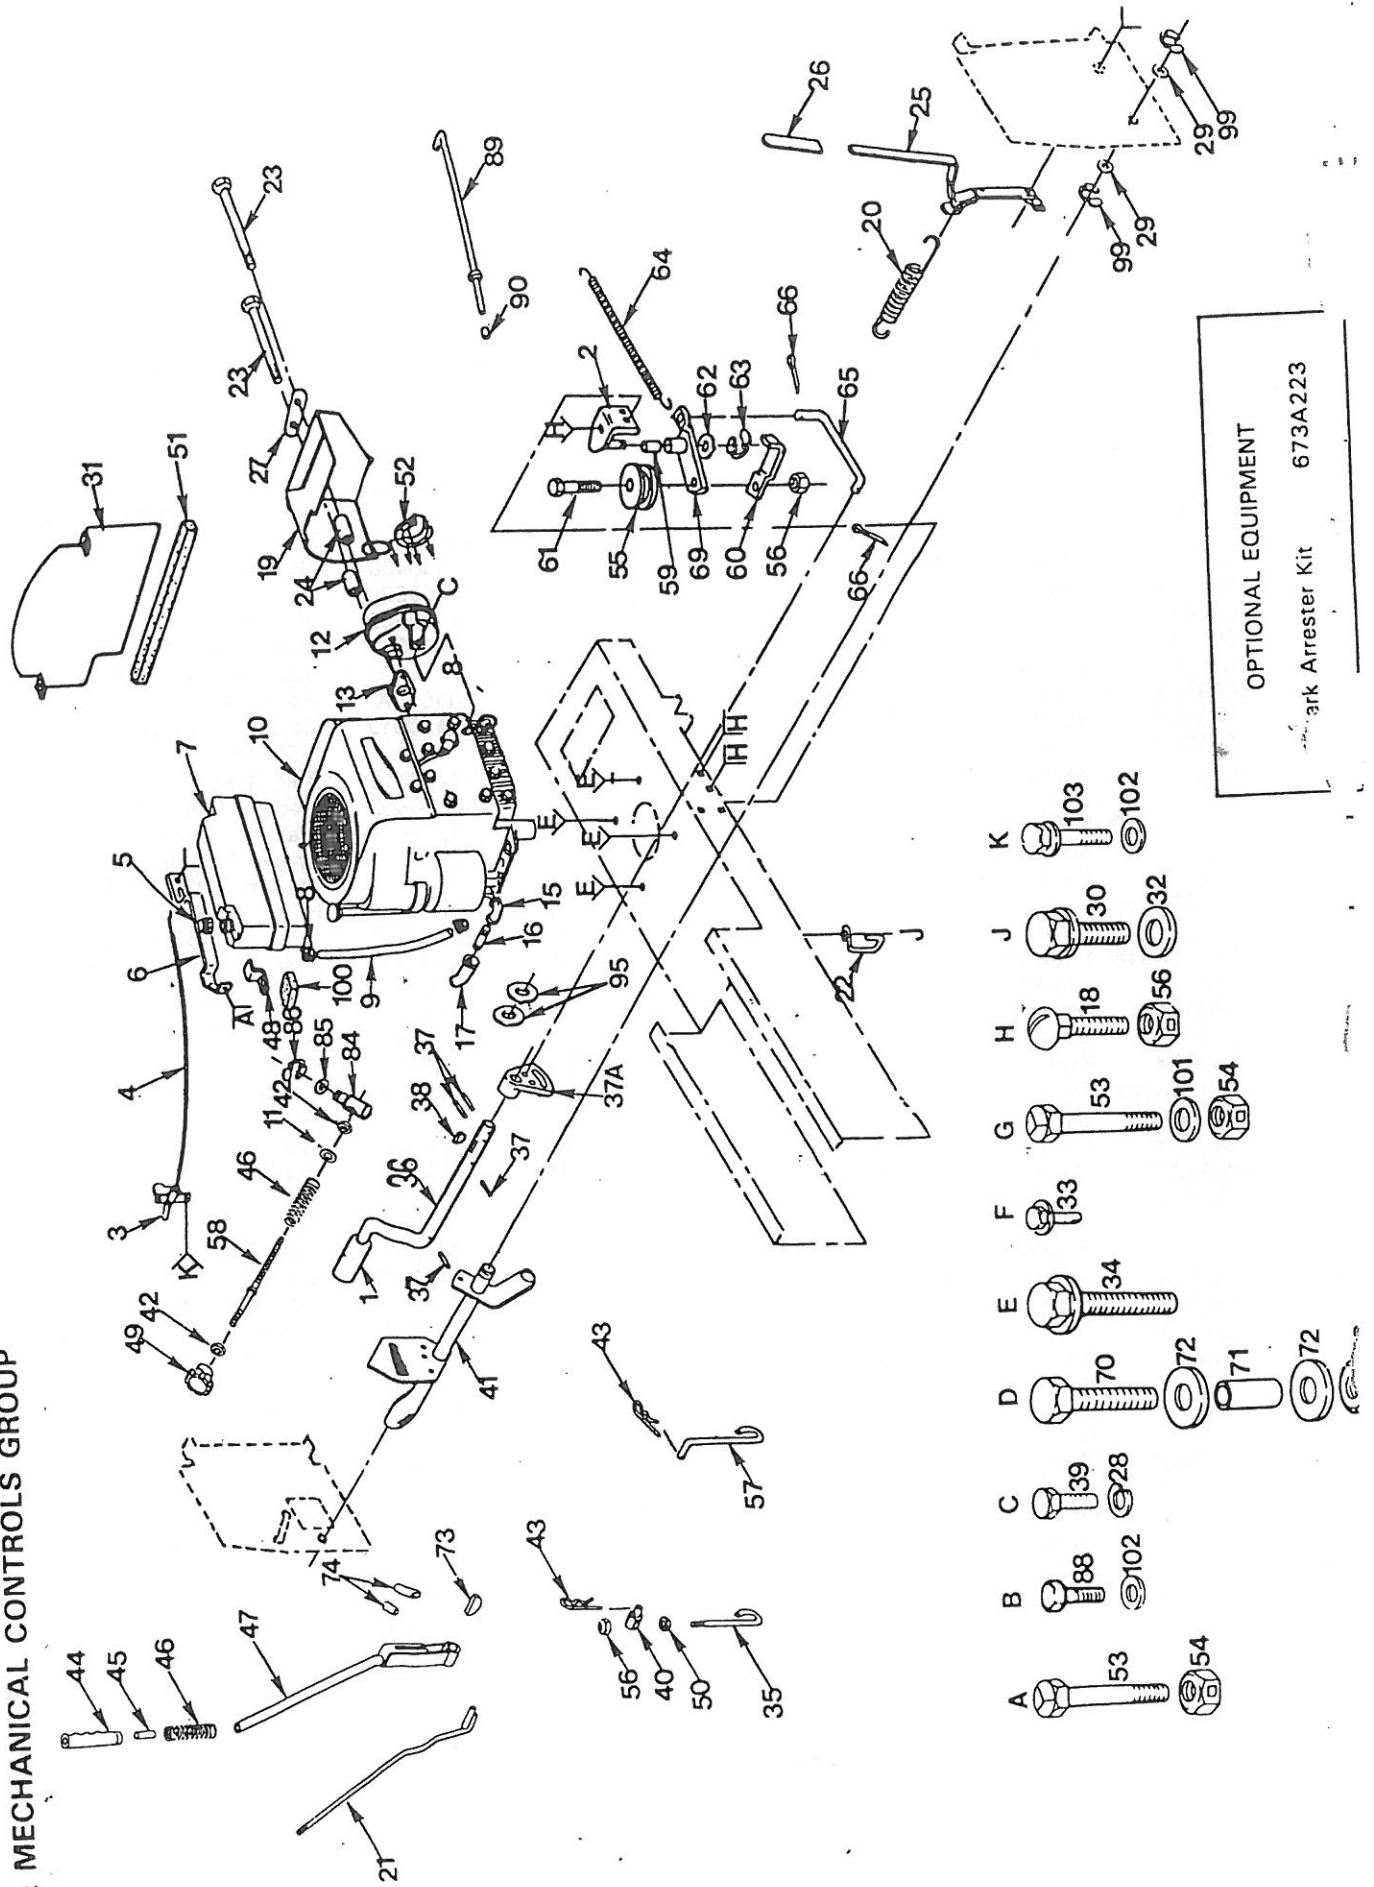


POWER & MECHANICAL CONTROLS GROUP
ROPER LAWN TRACTOR--MODEL NUMBER LT120AR

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	8883R	Pedal Cover	44	106019X	Grip - Handle
2	105724X	Bracket Assembly - Clutch	45	105723X	Plunger - Lever, Hand
3	61159	Knob - Throttle Control	46	2876H	Spring
4	101336K	Control - Throttle (Inc. Key No. 3)	47	104597X	Lever Assembly, Hand Kit (Inc. Key No. 5, 45, 46 and 2 each 74)
5	8504J	Fuel Cap	48	104799X	Brace - Tank
6	104800X	Support - Tank, Fuel	49	100734K	Handle - Adjust, Lift
7	3615J	Tank - Fuel	51	104915X	Strip - Foam 14.5"
8	6999R	Hose Clamp	52	101326L	Deflector - Muffler
9	7833R	Fuel Line	53	74780512	* Bolt - Hex 5/16 - 18 x 3/4 Gr. 5
10	281707	Engine Briggs & Stratton, Type No. 0133-01	54	73680500	Locknut 5/16 - 18 Gr. B
11	19131016	Washer 13/32 x 5/8 x 16 Ga.	55	106298X	Pulley - Idler
12	101273M	Muffler	56	73680600	Locknut 3/8 - 16
13	1407J	Gasket - Exhaust	57	105856X	Link - Lift
15	13240300	90° Street Elbow 3/8 NPT	58	100735K	Rod - Adjust, Lift
16	13280328	Std. Pipe Nipple 3/8 - 18 NPT x 3 - 1/2	59	105706X	Bearing
17	13200300	90° Elbow 3/8 NPT	60	106499X	Retainer - Belt
18	72140606	Bolt - Rd. Hd. Sq. Neck 3/8 - 16 x 3/4	61	74760624	* Bolt - Hex 3/8 - 16 x 1 - 1/2
19	104910X	Baffle Assembly - Muffler	62	207J	Washer - Hardened
20	102727X	Spring - Extension	63	12000039	Ring - Klip
21	104598X	Rod Assembly - Lever	64	105709X	Spring - Return, Clutch
22	104777X	Retainer - Belt, Chassis, L.H.	65	105710X	Link - Clutch
23	74780572	Bolt - Hex 5/16 - 18 x 4 - 1/2	66	76020412	Pin - Cotter 1/8 x 3/4
24	101496X	Spacer - Split	69	105705X	Bellecrank Assembly (Inc. Key No. 59)
25	106983X	Handle - Clutch Attachment	70	74760624	* Bolt - Hex 3/8 - 16 x 1 - 1/2
26	4617J	Grip - Handle	71	108056X	Bushing - Handle, Clutch
27	104909X	Clip - Muffler	72	19121612	Washer 3/8 x 1 x 12 Ga.
28	10040400	Lockwasher 1/4	73	8330H	Woodruff Key 1/4 x 1
29	19292016	Washer 29/32 x 1 - 1/4 x 16 Ga.	74	23180606	Set Screw - Hex Socket Forged Headless 3/8 - 16 x 3/8
30	17490612	Screw - Hex Washer Thd. Rolling 3/8 - 16 x 3/4	84	101272K	Trunion - Stop, Depth
31	104913X	Baffle - Vertical	85	19151216	Washer 15/32 x 3/4 x 16 Ga.
32	19131312	Washer 13/32 x 13/16 x 12 Ga.	86	12000037	Klip Ring
33	17210806	Screw - Hex Washer Hd. No. 8 - 32 x 3/8	88	17720410	Screw Hex Washer Head Thread Cutting 1/4 - 20 x 5/8
34	17490620	Screw - Hex Washer Hd. Thread Rolling 3/8 - 16 x 1 - 1/4 Type TT	89	105844X	Rod - Brake, Park
35	105855X	Link - Lift, Adjustable	90	71673	Plunger Cap
36	109037X	Shaft - Pedal, Foot	94	76020308	Cotter Pin 3/32 x 1/2
37	1572H	Roll Pin 3/16 x 1	95	19252016	Washer 25/32 x 1 - 1/4 x 16 Ga.
37A	106918X	Arm - Brake	99	12000029	Klip Ring
38	2228M	Woodruff Key	100	6431J	Pad - Spacer
39	74780408	* Bolt - Hex 1/4 - 20 x 1/2 Gr. 5	101	19111416	Washer 11/32 x 7/8 x 16 Ga.
40	106204X	Trunion, Lift	102	19091016	* Washer 9/32 x 5/8 x 16 Ga.
41	109104X	Shaft Assembly - Lift			* STANDARD HARDWARE--PURCHASE LOCALLY
42	73350600	* Nut - Hex Jam 3/8 - 16			
43	4939M	Retainer Spring			

REPAIR PARTS
DRIVE GROUP

ROPER LAWN TRACTOR--MODEL NUMBER LT120AR

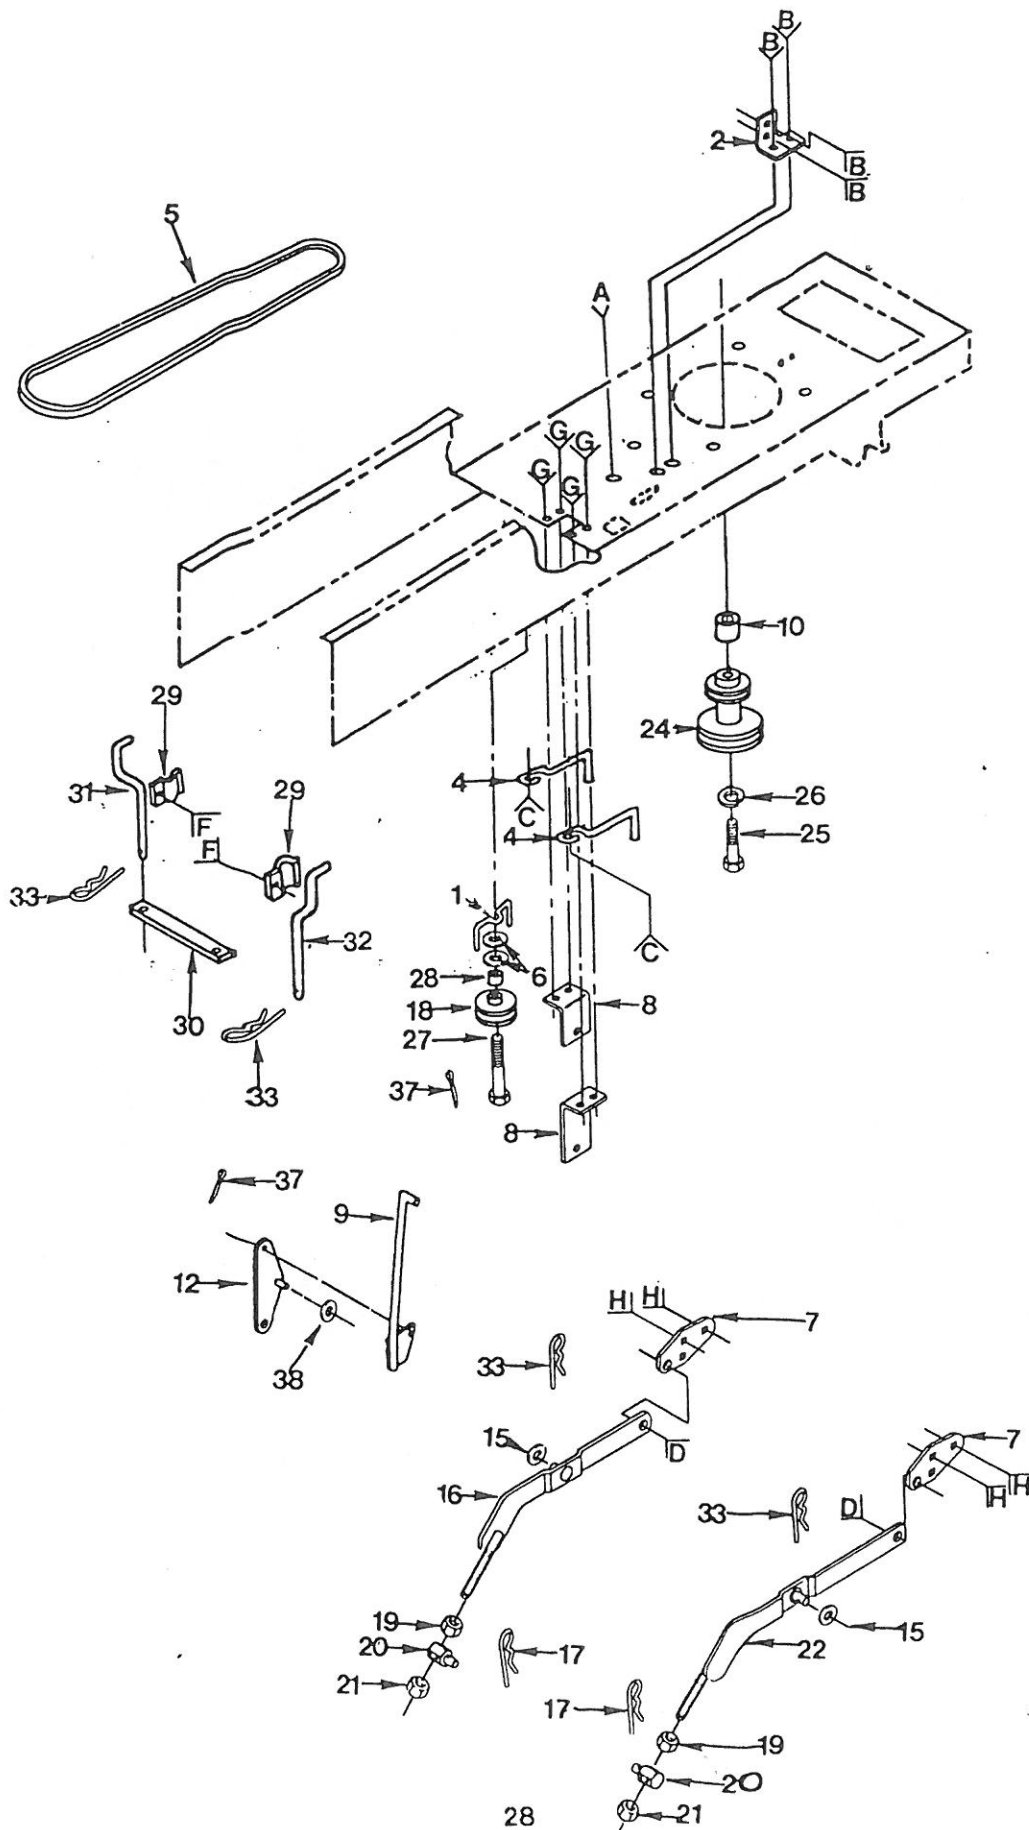


REPAIR PARTS

ROPER LAWN TRACTOR--MODEL NUMBER LT120AR

DRIVE GROUP

KEY NO.	PART NO.	DESCRIPTION
1	109070X	Keeper - Belt
2	108236X	Bracket - Switch
3	17021008	Screw - Tap. Hex Hd. 10 - 24 x 1/2
4	105730X	Keeper - Belt, Engine
5	105732X	V-Belt, Drive
6	19131312	Washer 13/32 x 13/16 x 12 Ga.
7	105864X	Bracket - Suspension
8	106444X	Bracket - Bellcrank
9	108451X	Rod Assembly - Clutch Primary
11	73680600	Nut - Crownlock 3/8 - 16
12	106441X	Bellcrank Assembly
13	74760612	*Bolt - Hex 3/8 - 16 x 3/4
14	72140606	Bolt - Rd. Hd. Sq. Neck 3/8 - 16 x 3/4
15	19171416	Washer 17/32 x 7/8 x 16 Ga.
16	105863X	Arm Assembly - Suspension - L.H.
17	9135R	Retainer - Spring
18	4859J	Idler - Flat
19	73220800	*Nut - Hex 1/2 - 13
20	106308X	Trunnion - Lift Lower
21	73680800	Nut - Crownlock 1/2 - 13
22	105862X	Arm Assembly - Suspension - R.H.
23	105848X	Bolt - Shoulder 3/8 - 16
24	105731X	Pulley - Engine
25	74770720	Bolt - Hex 7/16 - 20 x 1 - 1/4
26	10040700	*Washer - Lock 7/16
27	74760644	*Bolt - Hex 3/8 - 16 x 2 - 3/4
28	4470J	Spacer
29	106190X	Clamp
30	106294X	Strap - Locator
31	106903X	Keeper, Belt, L.H.
32	106904X	Keeper, Belt, R.H.
33	4921H	Spring - Retainer
34	74760512	*Bolt, Hex 5/16 - 18 x 3/4
35	73680500	Nut, Lock 5/16 - 18
36	74760616	*Bolt - Hex 3/8 - 16 x 1
37	76020412	Pin - Cotter 1/8 x 3/4
38	19131410	Washer 13/32 x 7/8 x 10 Ga.


*STANDARD HARDWARE--PURCHASE LOCALLY

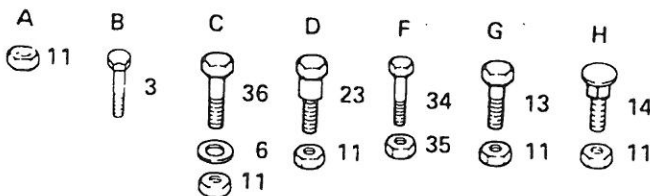

REPAIR PARTS

ROPER LAWN TRACTOR--MODEL NUMBER LT120AR

STEERING, FRONT AXLE AND WHEELS

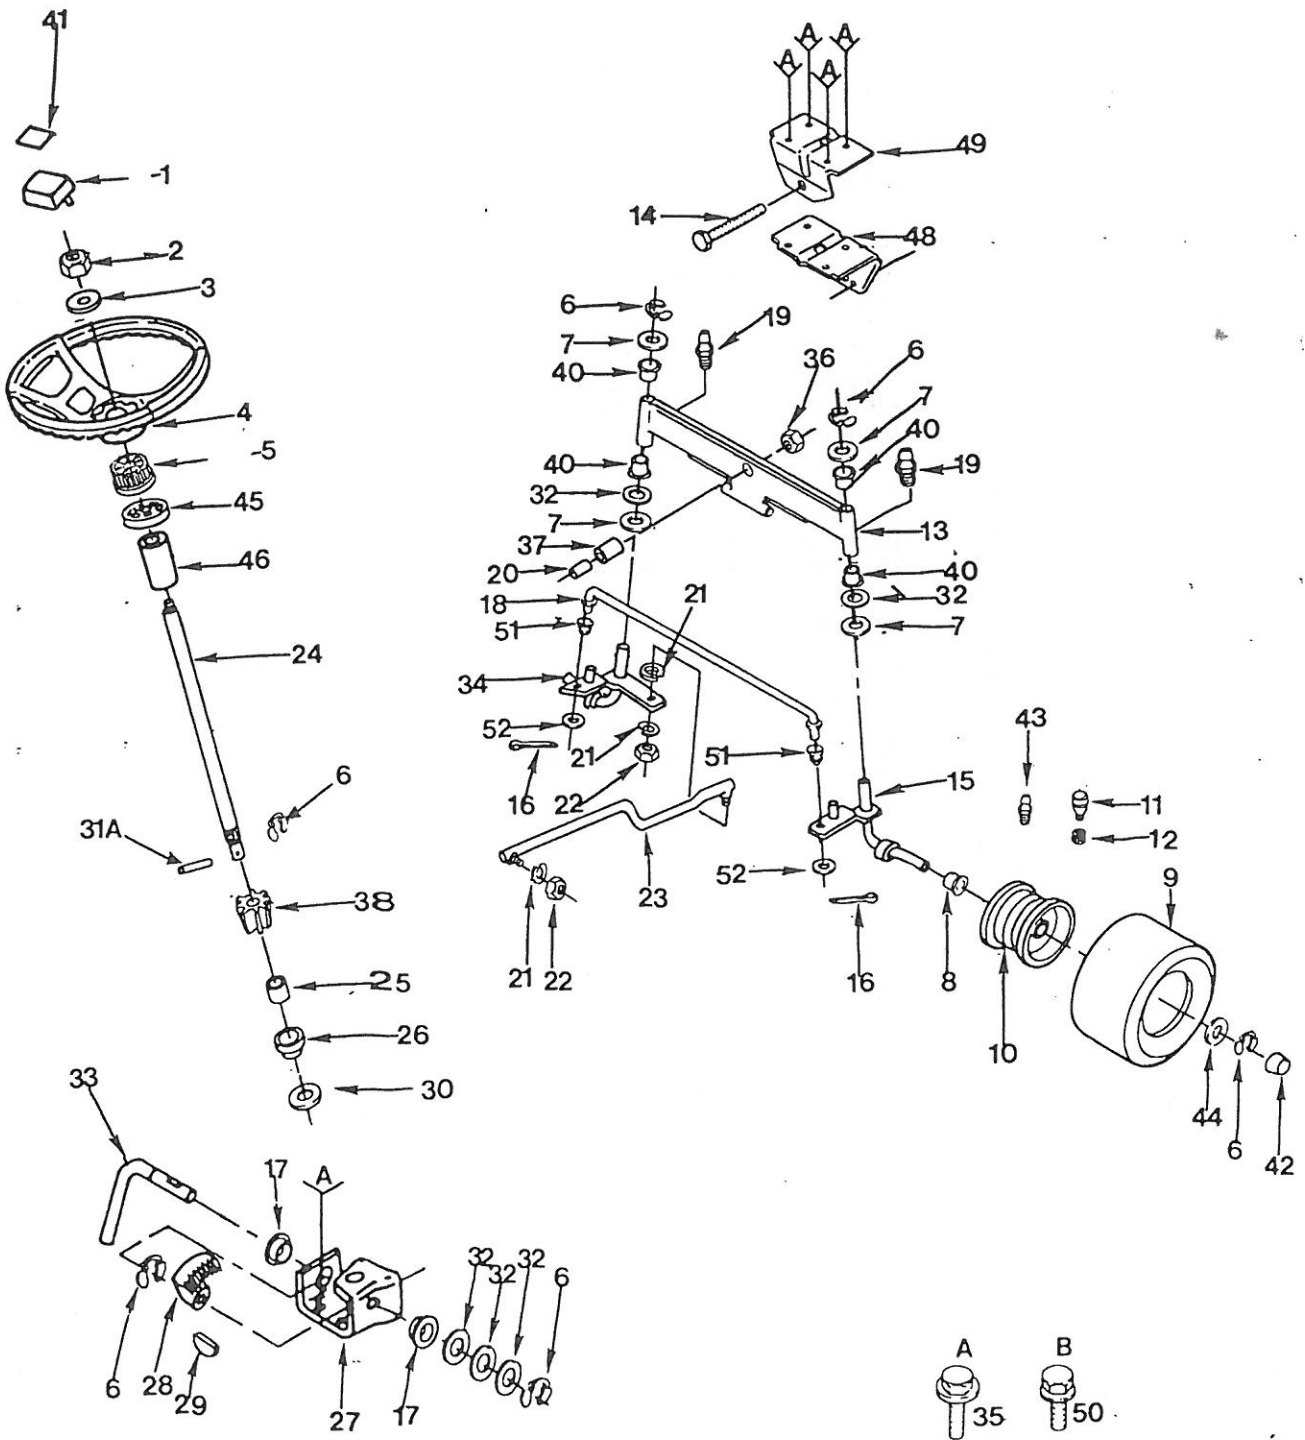

REPAIR PARTS

ROPER LAWN TRACTOR--MODEL NUMBER LT120AR

STEERING, FRONT AXLE AND WHEELS


KEY NO.	PART NO.	DESCRIPTION
1	100710L	Insert - Steering Wheel
2	73360800	*Nut - Hex Jam 1/2 - 20
3	100712K	Washer 17/32 x 2 - 1/4 x .160
4	100713N	Steering Wheel 13"
4A	100711L	Adapter - Wheel, Steering
5	109816X	Nyliner - Snap-In
6	12000029	Klipring
7	19252016	Washer 25/32 x 1 - 1/4 x 16 Ga.
8	9040H	Bearings - Wheel, Front
9	106222X	Tire - 15 x 6.00 - 6 (Tubeless)
---	59904	Tube - Tire (not furnished with Tractor)
10	106732X	Rim Assembly - 6" Front (Inc. 2 each Key No. 8)
11	65139	Stem - Valve
12	59192	Cap - Valve
13	108075X	Axle Assembly - Front
14	74761060	Bolt - Hex 5/8 - 11 x 3 - 3/4
15	105654X	Spindle Assembly - R.H.
16	76020412	Pin - Cotter 1/8 x 3/4
18	105715X	Tie Rod
19	6855M	Fitting - Grease
20	105726X	Bearing
21	10040600	*Lockwasher 3/8
22	73610600	*Nut - Hex 3/8 - 24
23	105727X	Drag Link
24	109556X	Shaft Assembly - Steering
25	74580	Spacer
26	1554J	Bushing - Steering Rod
27	109432X	Bracket Assembly - Steering
28	108684X	Gear - Sector
29	106126X	Woodruff Key 3/16 x 3/4
30	19212016	Washer 21/32 x 1 - 1/4 x 16 Ga.
31A	2882J	Drive Pin 3/16 x 1
32	6266H	Hardened Washer (1 - 3 as required)
33	108683X	Rod - Steering
34	105656X	Spindle Assembly - L.H.
35	17490612	Screw - Hex Washer Hd, Thread Forming Type TT 3/8 - 16 x 3/4
36	73901000	Nut - Lock Flange, 5/8 - 11
37	105725X	Spacer
40	3366R	Bearing
41	104590X	Decal - Steering Wheel
42	104757X	Cap - Hub, Front
43	278H	Grease Fitting
44	19252616	Washer 25/32 x 1 - 5/8 x 16 Ga.
45	106943X	Spacer - Shaft, Steering
46	106944X	Tube - Shaft, Steering
48	105664X	Support - Saddle, Front
49	105663X	Support - Saddle, Rear
50	17490508	Screw - Hex Washer Thd, Rolling 5/16 - 18 x 1/2
51	102792X	Bushing
52	19131416	Washer 13/32 x 7/8 x 16 Ga.
54	108685X	Gear - Pinion
55	101930X	Washer - Hardened

*STANDARD HARDWARE--PURCHASE LOCALLY

REPAIR PARTS

ROPER LAWN TRACTOR--MODEL NUMBER LT1120AR

DRIVE GROUP

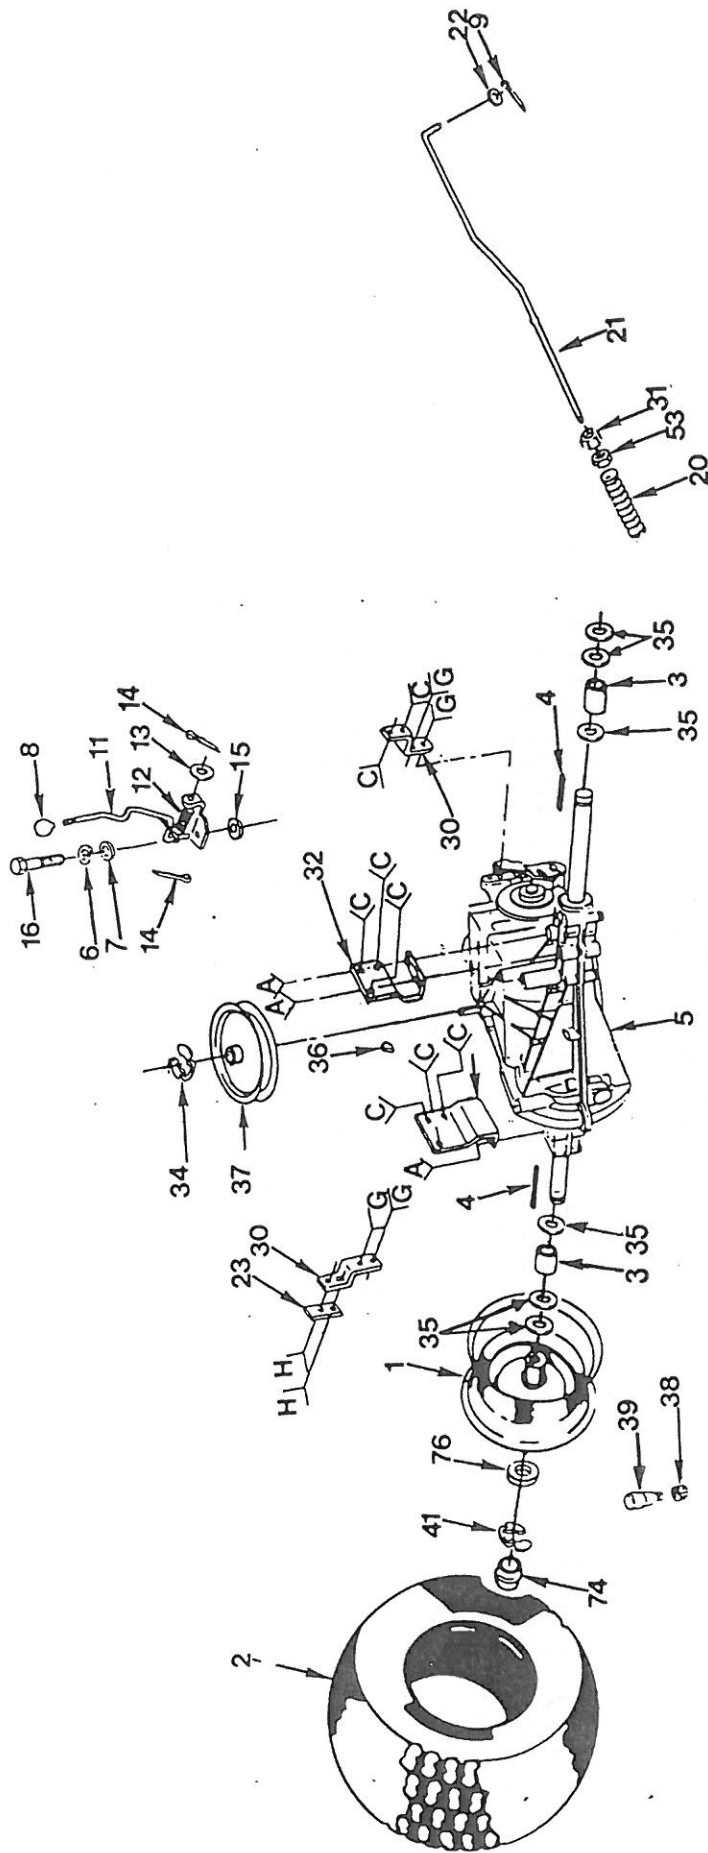


TOP LAWN TRACTOR--MODEL NUMBER LT120AR

TRANSAXLE AND REAR WHEEL

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	106108X	Rim Assembly - 8" Rear	30	105842X	Strap - Torque
2	106268X	Tire - 18 x 9.50 - 8 (Tubeless)	31	73350600	Nut - Hex Jam 3/8 - 16
...	7152J	Tube - Tire (not furnished with Tractor)	32	109167X	Bracket - Transaxle
3	109502X	Spacer - Split	34	12000028	Ring - Klip
4	2703J	Key - Square 3/16 x 2	35	19252016	Washer 25/32 x 1 - 1/4 x 16 Ga. (2 to 4 as required)
5	110076X	Transaxle Foote, 5 Speed, Model No. 4150-42 (see pages 36 and 37 for parts breakdown)	36	2228M	Woodruff Key 3/16 x 3/4
6	10040400	Washer - Lock 1/4	37	105703X	Pulley - Input
7	19091210	Washer 9/32 x 3/4 x 10 Ga.	38	59192	Cap - Valve
8	106933X	Knob - Control	39	65139	Stem - Valve
9	76020412	Cotter Pin 1/8 x 3/4	41	12000001	E-Ring
10	106919X	Plate - Rod, Shift	52	74760644	*Bolt - Hex 3/8 - 16 x 2 - 3/4
11	105699X	Rod - Shifter	53	73680600	Nut - Crownlock, 3/8 - 16
12	105700X	Spring - Torsion	55	74760612	*Bolt - Hex 3/8 - 16 x 3/4
13	19151216	Washer 15/32 x 3/4 x 16 Ga.	58	17490512	Screw Hex Washer Hd. Thd. Form. Type TT 5/16 - 18 UNC x 3/4
14	76020416	*Pin, Cotter 1/8 x 1	74	104757X	Cap - Hub, Rear
15	105701X	Washer - Shift Plate	75	73930600	Nut - Centerlock 3/8 - 16
16	71040412	Bolt - Hex 1/4 - 28 x 3/4 Gr. 8	76	19252616	Washer 25/32 x 1 - 5/8 x 16 Ga.
20	106888X	Spring - Rod, Brake	77	74760616	*Bolt - Hex 3/8 - 16 x 1
21	105752X	Rod - Brake			
22	19131316	*Washer 13/32 x 13/16 x 16 Ga.			
23	106157X	Plate - Strap, Torque			


*STANDARD HARDWARE--PURCHASE LOCALLY

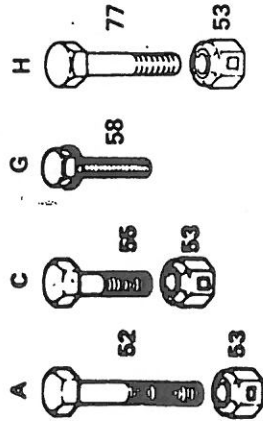

REPAIR PARTS

ROPER LAWN TRACTOR--MODEL NUMBER LT120AR

38" MOWER

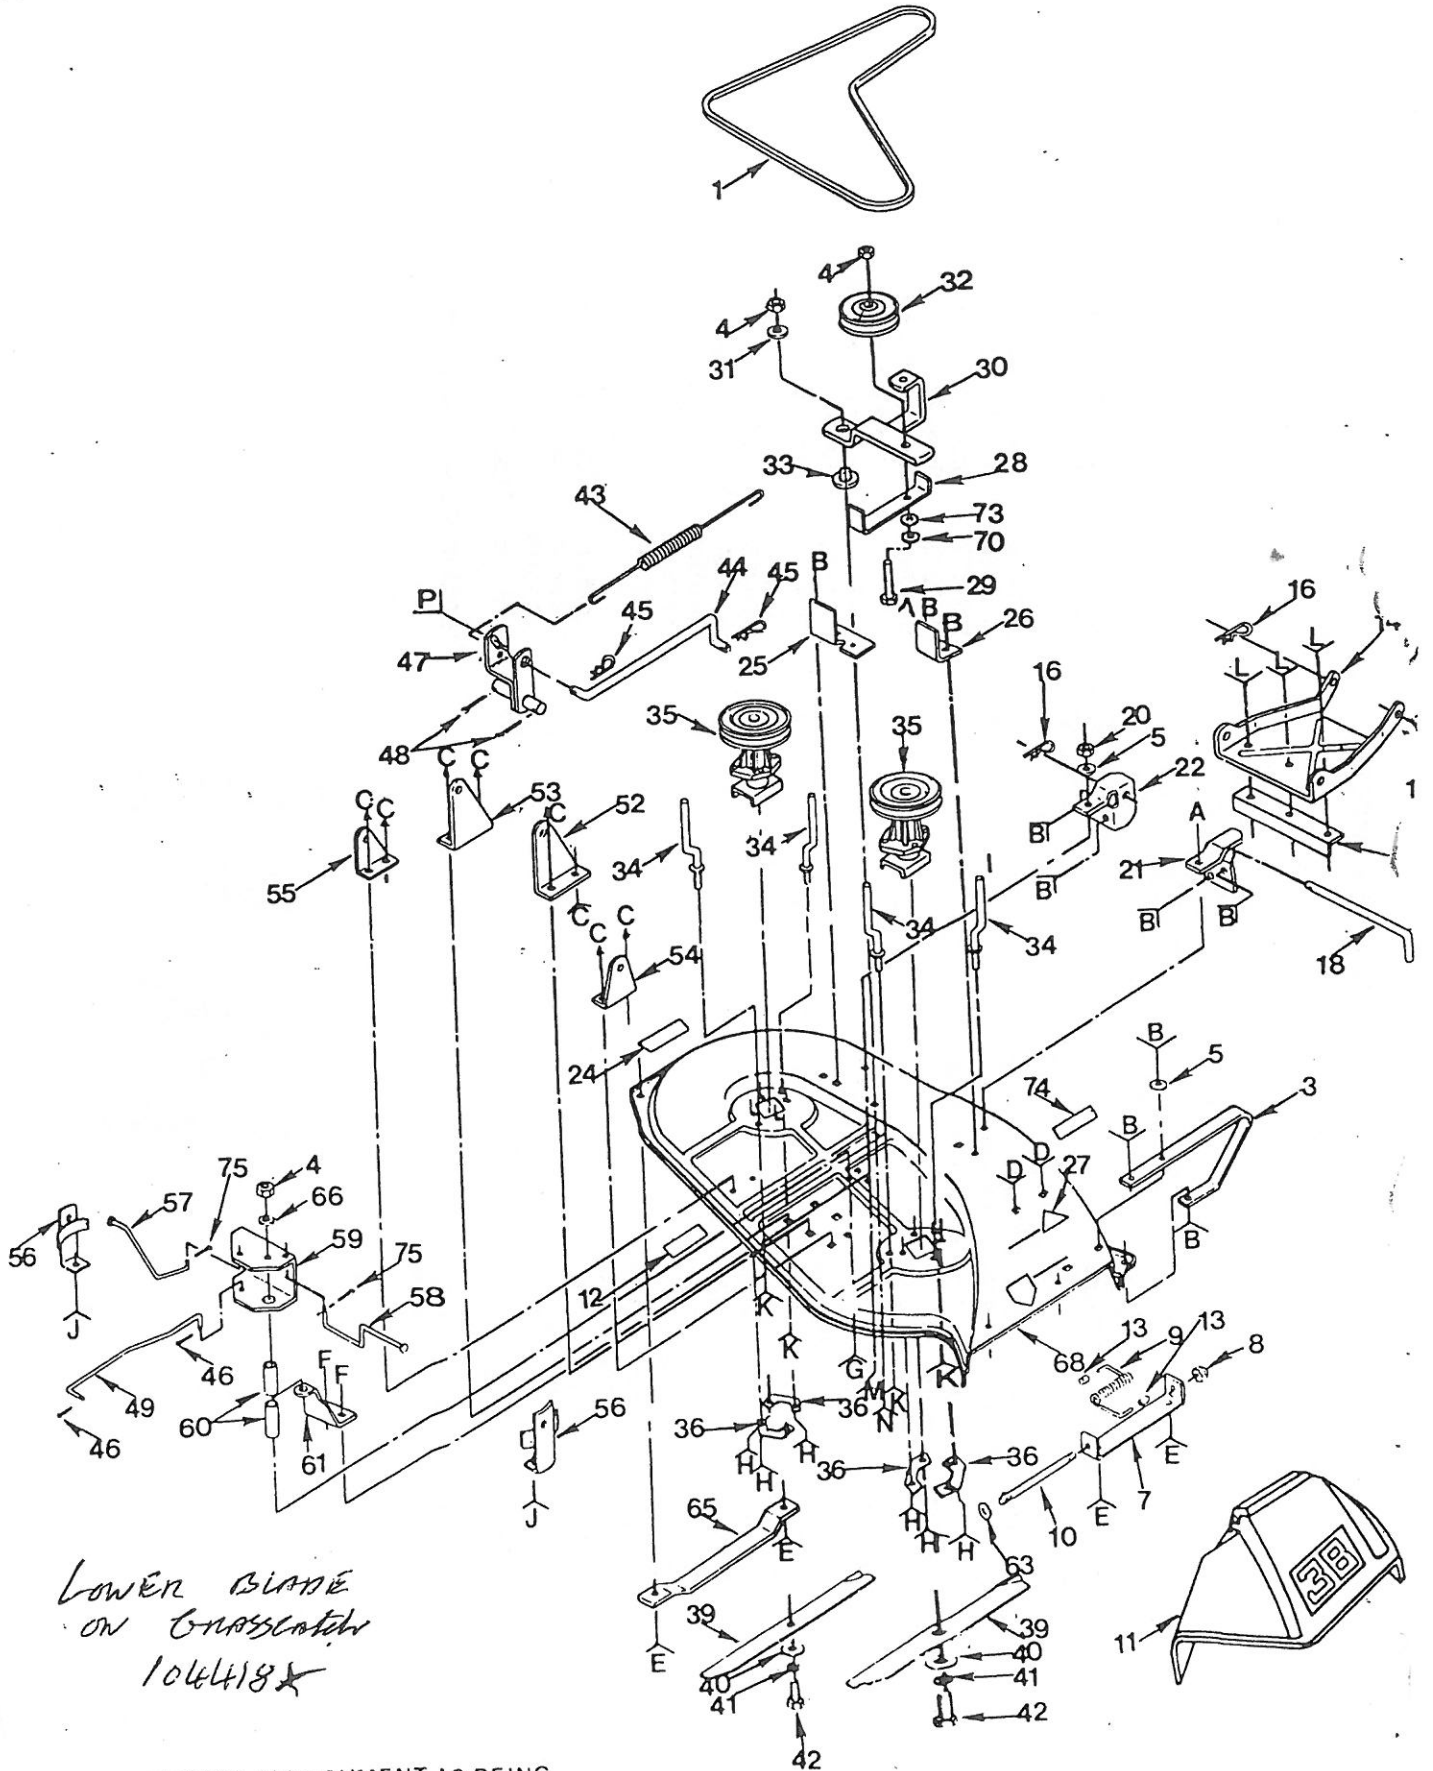

IF REAR BAGGER ATTACHMENT IS BEING USED, REFER TO REAR BAGGER OWNERS MANUAL FOR BLADE PART NO.


REPAIR PARTS

38" MOWER

ROPER LAWN TRACTOR--MODEL NUMBER LT120AR

EY O.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	106085X	V-Belt			
2	105689X	Housing	39	106634X	Blade, 38" ¹⁴³⁹⁷⁸ 121263X
3	8417J	Runner, R.H.	40	19132012	Washer 13/32 x 1 - 1/4 x 12 Ga.
4	73680600	Nut, Lock, 3/8 - 16	41	10030600	*Washer, Lock, 3/8
5	19111216	Washer, 11/32 x 3/4 x 16 Ga.	42	74610624	*Bolt, Hex 3/8 - 24 x 1 - 1/2 Gr. 5
6	72140505	Bolt, Carr., 5/16 - 18 x 5/8	43	108250X	Spring, Ext.
7	105896X	Bracket, Deflector	44	108235X	Rod - Clutch, Mower
8	5846R	Nut	45	4921H	Spring - Retainer
9	106734X	Spring, Deflector	46	76020312	*Pin - Cotter, 3/32 x 3/4
10	106735X	Rod - Hinge	47	108068X	Rock Shaft Assembly
11	106736X	Deflector - Shield	48	76020616	Pin, Cotter, 3/16 x 1
12	105814X	Decal	49	108247X	Rod, Brake, Primary
13	105304X	Cap	50	72140606	*Bolt, Carriage 3/8 - 16 x 3/4
14	105662X	Link, Parallel	52	108243X	Bracket, Pivot, R.H.
	105744X	Pin - Hinge, Front	53	108241X	Bracket, Pivot, L.H.
	3146R	Spring - Retainer	54	105857X	Bracket, Susp., Rear, R.H.
	105872X	Stop, Link	55	108673X	Bracket, Susp., Rear, L.H.
	105743X	Pin - Hinge, Rear	56	106578X	Brake Assembly
19	74760612	*Bolt, 3/8 - 16 x 3/4	57	106463X	Rod, Brake, Secondary L.H.
20	73680500	Nut, Lock 5/16 - 18	58	108249X	Rod, Brake, Secondary, R.H.
21	105659X	Bracket, Lift, R.H.	59	106456X	Bracket, Brake, Pivot
22	105660X	Bracket, Lift, L.H.	60	100672K	Spacer, Brake
23	72140506	*Bolt, Carriage 5/16 - 18 x 3/4	61	100673L	Bracket, Support
24	3713J	Instruction - Caution Decal	63	19111016	Washer, 11/32 x 5/8 x 16 Ga.
25	106295X	Support, Arm	64	74760684	Bolt, 3/8 - 18 x 5 - 1 4
26	105850X	Stop, Deck, Front	65	7631J	Runner, L.H.
27	106975X	Decal - Safety Standard	66	19131614	Washer 13/32 x 1 x 14 Ga.
	106461X	Guide, Belt	67	72140610	Bolt, Carr. 3/8 - 16 x 1 - 1/4
29	74760632	*Bolt 3/8 - 16 x 2	68	78850	Decal - Warning
30	108832X	Arm, Idler Assembly	70	19131316	*Washer -13/32 x 13/16 x 16 Ga.
31	106902X	Spacer	71	19141610	Washer 7/16 x 1 x 10 Ga.
32	102403X	Pulley, Idler	72	72110606	Bolt, Carriage 3/8 - 16 x 3/4
33	106513X	Washer, Wear, 1/16	73	19132012	Washer 13/32 x 1 - 1/4 x 12 Ga.
34	102669X	Keeper, Belt	74	106679X	Decal - Warning
35	105891X	Mandrel Assembly ^{124687X}	75	76020308	Pin, Cotter 3/32 x 1 2
36	100668L	Plate, Support, Mandrel	76	72110506	Bolt, Carriage 5/16 - 18 x 3 4
37	17490612	Screw, Hex Washer Hd. 3/8 - 16 x 3/4	77	74760412	Bolt - Hex 1/4 - 20 x 3/4
	17490620	Screw, Hex Washer Hd. 3/8 - 16 x 1 - 1/4	78	109893X	Washer - Special
			79	73680400	Nut - Lock 1/4 - 20

*STANDARD HARDWARE--PURCHASE LOCALLY

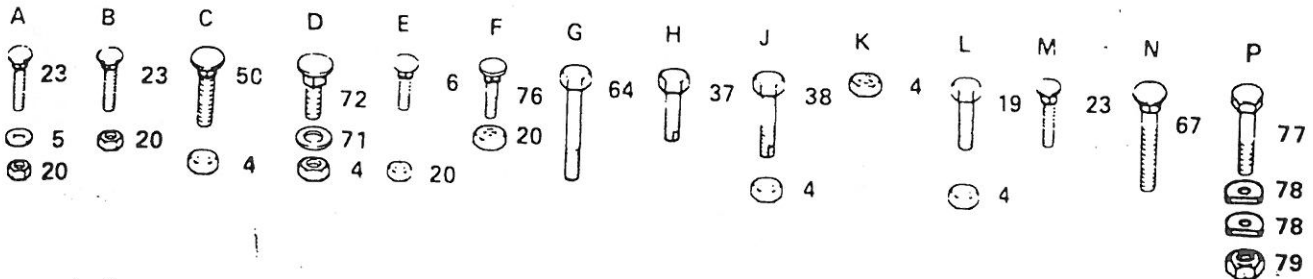

Check Model on Casting (If Found)
Also Count Teeth on Item 30 Gear.

REPAIR PARTS

ROPER LAWN TRACTOR--MODEL NUMBER LT120AR TRANSAXLE FOOTE--MODEL NUMBER 4150-42

TRANSAXLE

ALL REPAIRS MUST BE PERFORMED BY
AN AUTHORIZED FOOTE DEALER. REFER
TO BACK COVER.

