



# Parts Manual

 
 
 
 
 
Mfg. No: 128887-2396-B1



---



<b>Model Components</b>	<b>Page</b>
Air Cleaner, Exhaust System.....	4
Alternator, Electric Starter, Electrical, Flywheel Brake, Ignition.....	8
Blower Housing/Shrouds.....	12
Camshaft, Crankshaft, Cylinder, Engine Sump, Kit/Gaskets, Lubrication, Piston Group, Valves.....	14
Carburetor.....	24
Controls, Fuel Tank, Governor Spring.....	28
Flywheel, Rewind Starter.....	32
Replacement Engine.....	34

Not For  
Reproduction

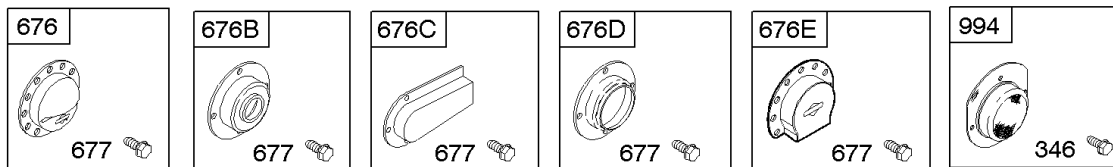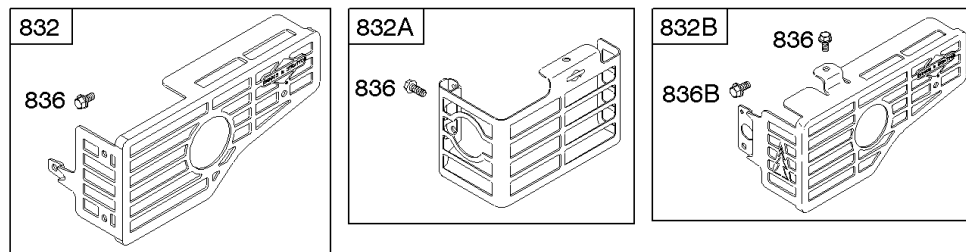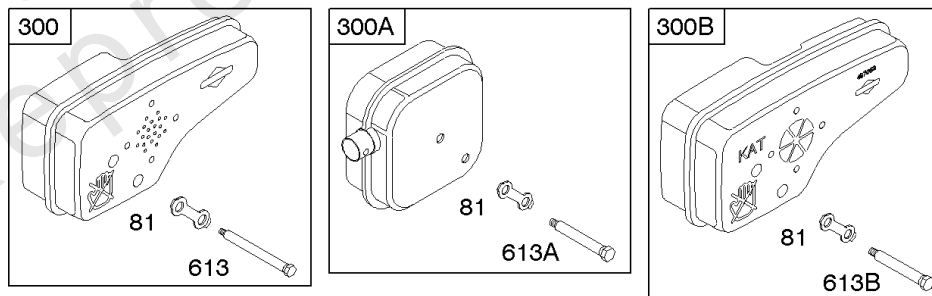
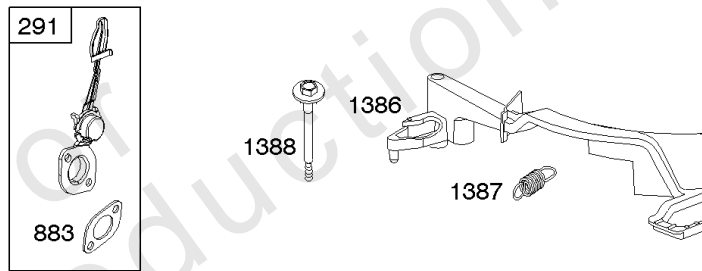
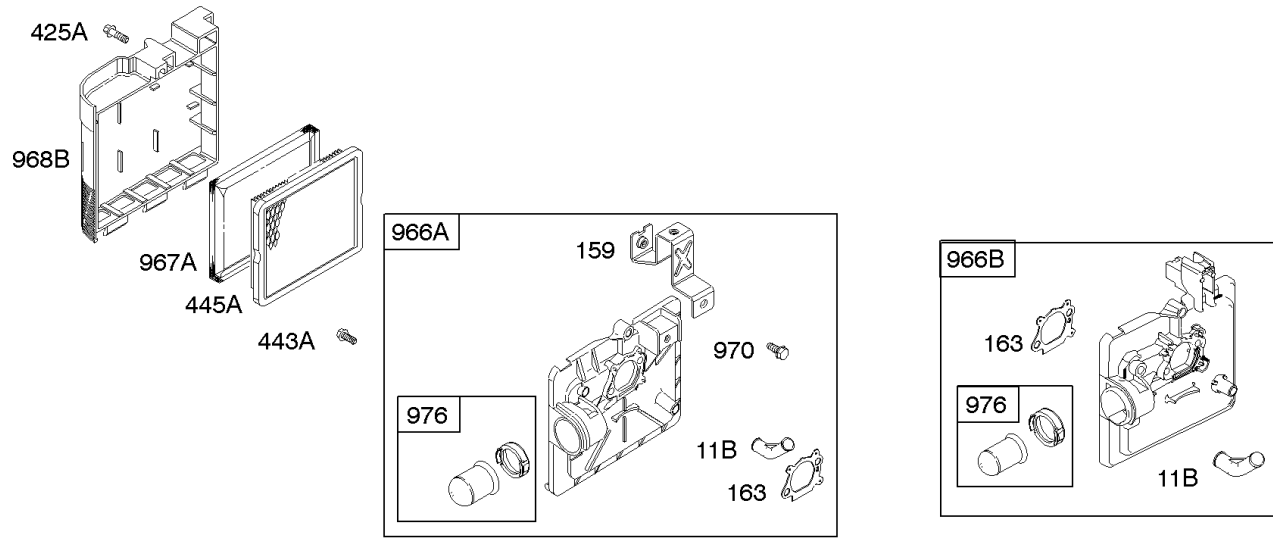


## Air Cleaner, Exhaust System

  REF NO	PART NO	QTY	DESCRIPTION
11B	691923		Tube-Breather
81	691740		Lock-Muffler Screw
159	691753		Bracket-Air Cleaner Primer
163	272653S		Gasket-Air Cleaner
291	790830		Thermostat
300	496106S		Muffler -(Tuned)
300A	494343S		Muffler -(Square Lo Tone)
300B	497681		Muffler -(Catalyst)
346	690661		SCREW -(Spark Arrestor)
425A	690670		Screw -(Air Cleaner Cover)
443A	692523		Screw -(Air Cleaner Primer Base)
445A	491588S		FILTER, A/C Cartridge
613	691340		Screw -(Muffler)
613A	691653		Screw -(Muffler)
613B	691114		Screw -(Muffler)
676	396548		Deflector-Muffler -(Single Louver)
676B	397931		Deflector-Muffler -(Direct Out)(3/4" Diameter)
676C	493871		Deflector-Muffler -(Side Out)(Extended)(17/32" Deep)
676D	497682		Deflector-Muffler -(Direct Out)(1 3/16" Diameter)
676E	393760		DEFLECTOR, Muffler -(Side Out)(7/16" Deep)
677	690661		SCREW -(Muffler Deflector)
832	499034		Guard-Muffler -(Super Lo Tone Tuned) -Used Before Code Date 11070100
832	590486		Guard-Muffler -Used After Code Date 11063000
832A	691424		Guard-Muffler -(Square Lo Tone)
832B	497683		Guard-Muffler -(Super Lo Tone Catalyst)
836	690664		Screw -(Muffler Guard)
836B	690661		SCREW -(Muffler Guard)
883	691881		Gasket-Exhaust
966A	496116		Base-A/C Primer
966B	792040		Base-A/C Primer
967A	493537S		Filter-Pre Cleaner
968B	692298		Cover-Air Cleaner
970	691669		Screw -(Air Cleaner Primer Bracket)
976	694395		Primer-Carburetor
994	398067		Arrestor-Spark

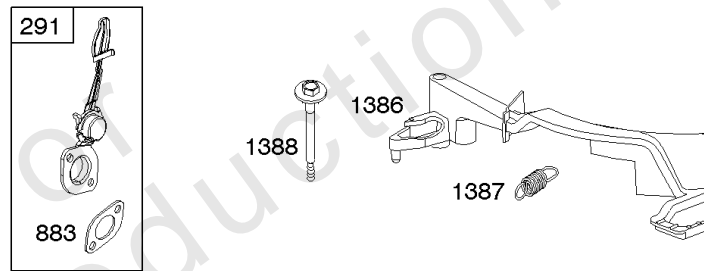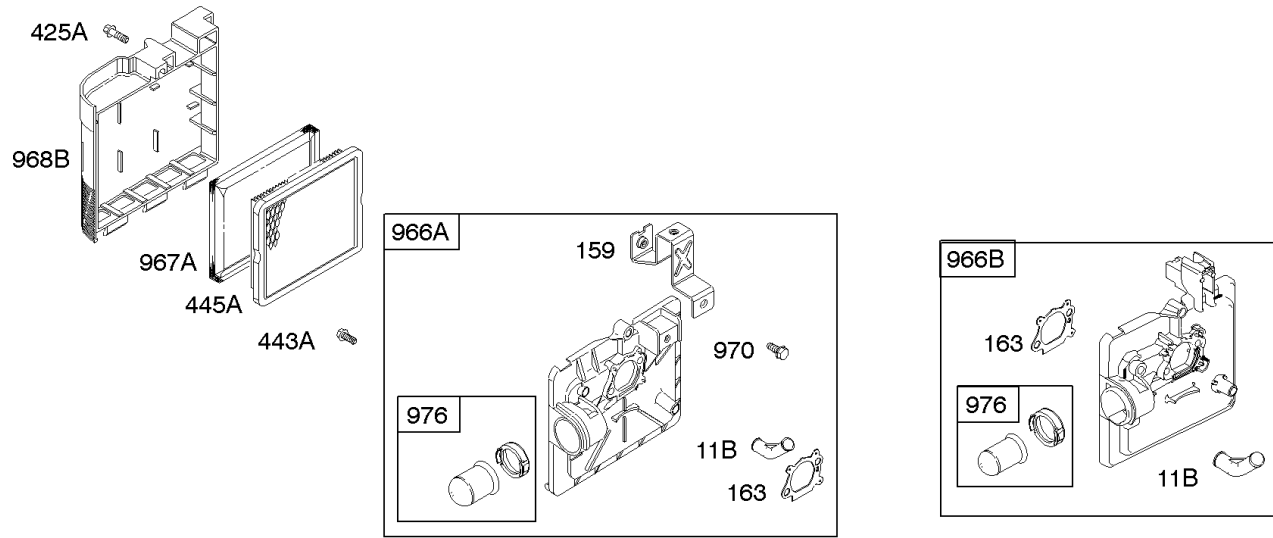

Not For Production

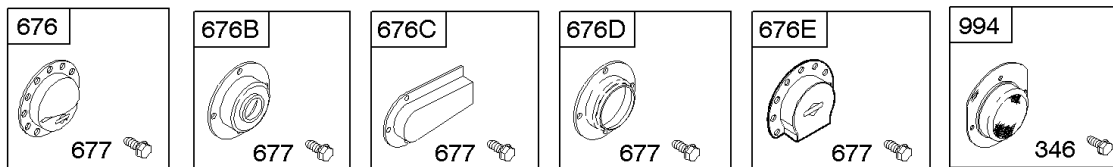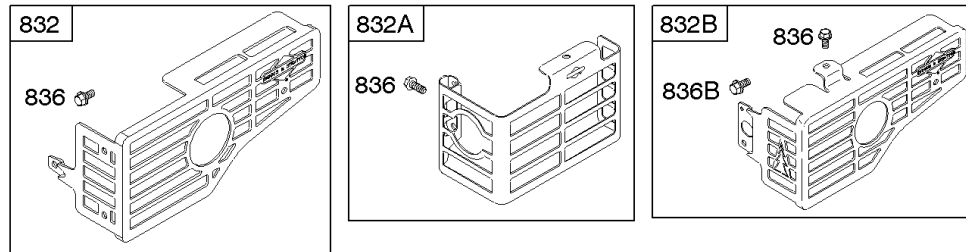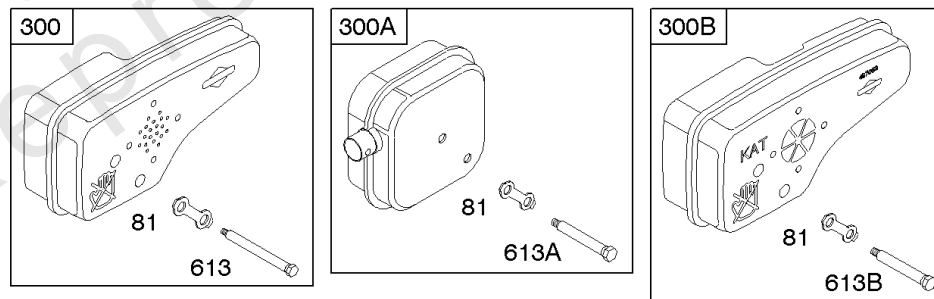   


## *Air Cleaner, Exhaust System*

---

REF NO	PART NO	QTY	DESCRIPTION
1386	790848		Vane-Air -(Autochoke System)
1387	790849		Spring-Air Vane
1388	790850		Screw -(Air Vane) (Auto Choke System)

 
Not For  
Reproduction

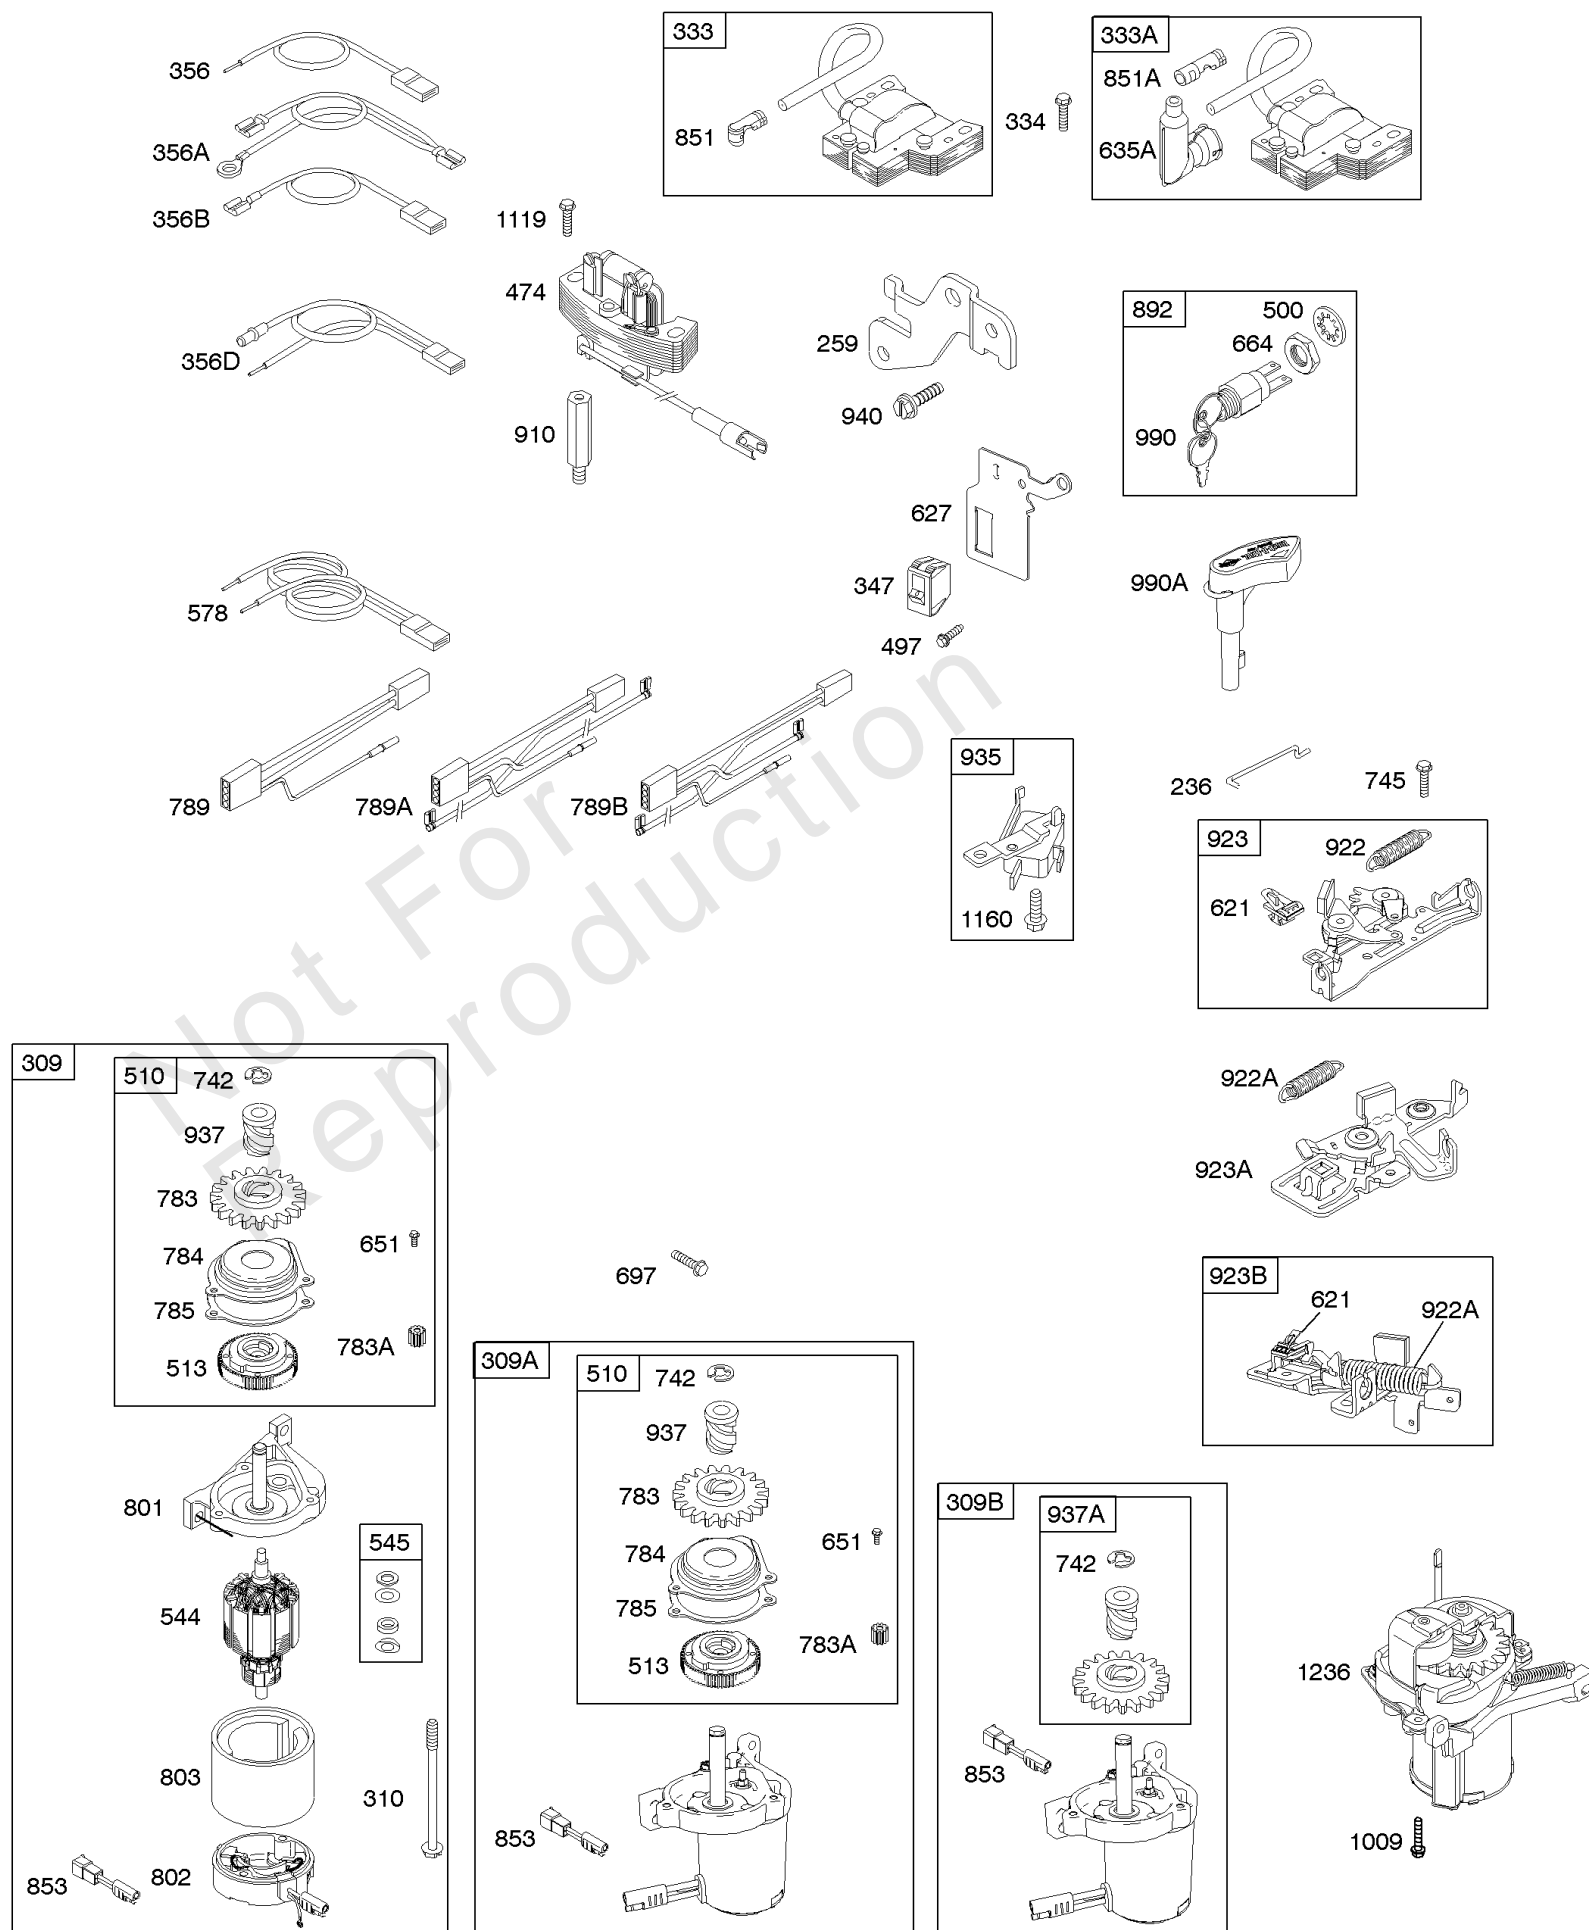

















## Alternator, Electric Starter, Electrical, Flywheel Brake, Ignition

 REF NO	PART NO	QTY	DESCRIPTION
236	691826		Link-Lockout
259	691223		Bracket-Casing Clamp
309	695550		Motor-Starter -Used Before Code Date 07052900
309A	795092		Motor-Starter -Used After Code Date 07052800 -Used Before Code Date 10112800
309B	799045		Motor-Starter -Used After Code Date 10112700
310	692327		Screw -(Starter Motor)
333	802574		Armature-Magneto
333A	792640		Armature-Magneto -(Screw On Spark Plug Boot)
333A	793353		Armature-Magneto -(Snap In Spark Plug Boot)
334	691061		SCREW -(Magneto Armature)
347	691396		Switch-Rocker
356	692390		Wire-Stop
356A	690650		Wire-Stop
356D	496381		Wire-Stop
356B	693010		Wire-Stop
474	691991		Alternator
497	690664		Screw -(Stopswitch Bracket)
500	691086		WASHER -(Key Switch)
510	795093		Drive-Starter
513	692358		Clutch-Drive
544	690786		Armature-Starter
545	492919		Washer Set -(Starter Motor)
578	398153		Wire Assembly
621	692310		Switch-Stop
627	692872		Bracket-Stopswitch
635A	793351		Boot-Spark Plug -(Snap In Style)
635A	792597		Boot-Spark Plug -(Screw On Style)
651	691660		Screw -(Starter Gear Cover)
664	691087		NUT -(Key Switch)
697	691127		SCREW -(Drive Cap)
742	93941		RETAINER, E Ring
745	691648		Screw -(Brake)
783	691918		Gear-Pinion -(Starter Drive)(19 Teeth)
783A	691269		Gear-Pinion -(12 Teeth)
784	795095		Cover-Starter Gear
785	692352		Gasket-Starter Cover
789	695551		Harness-Wiring -Used After Code Date 00040600

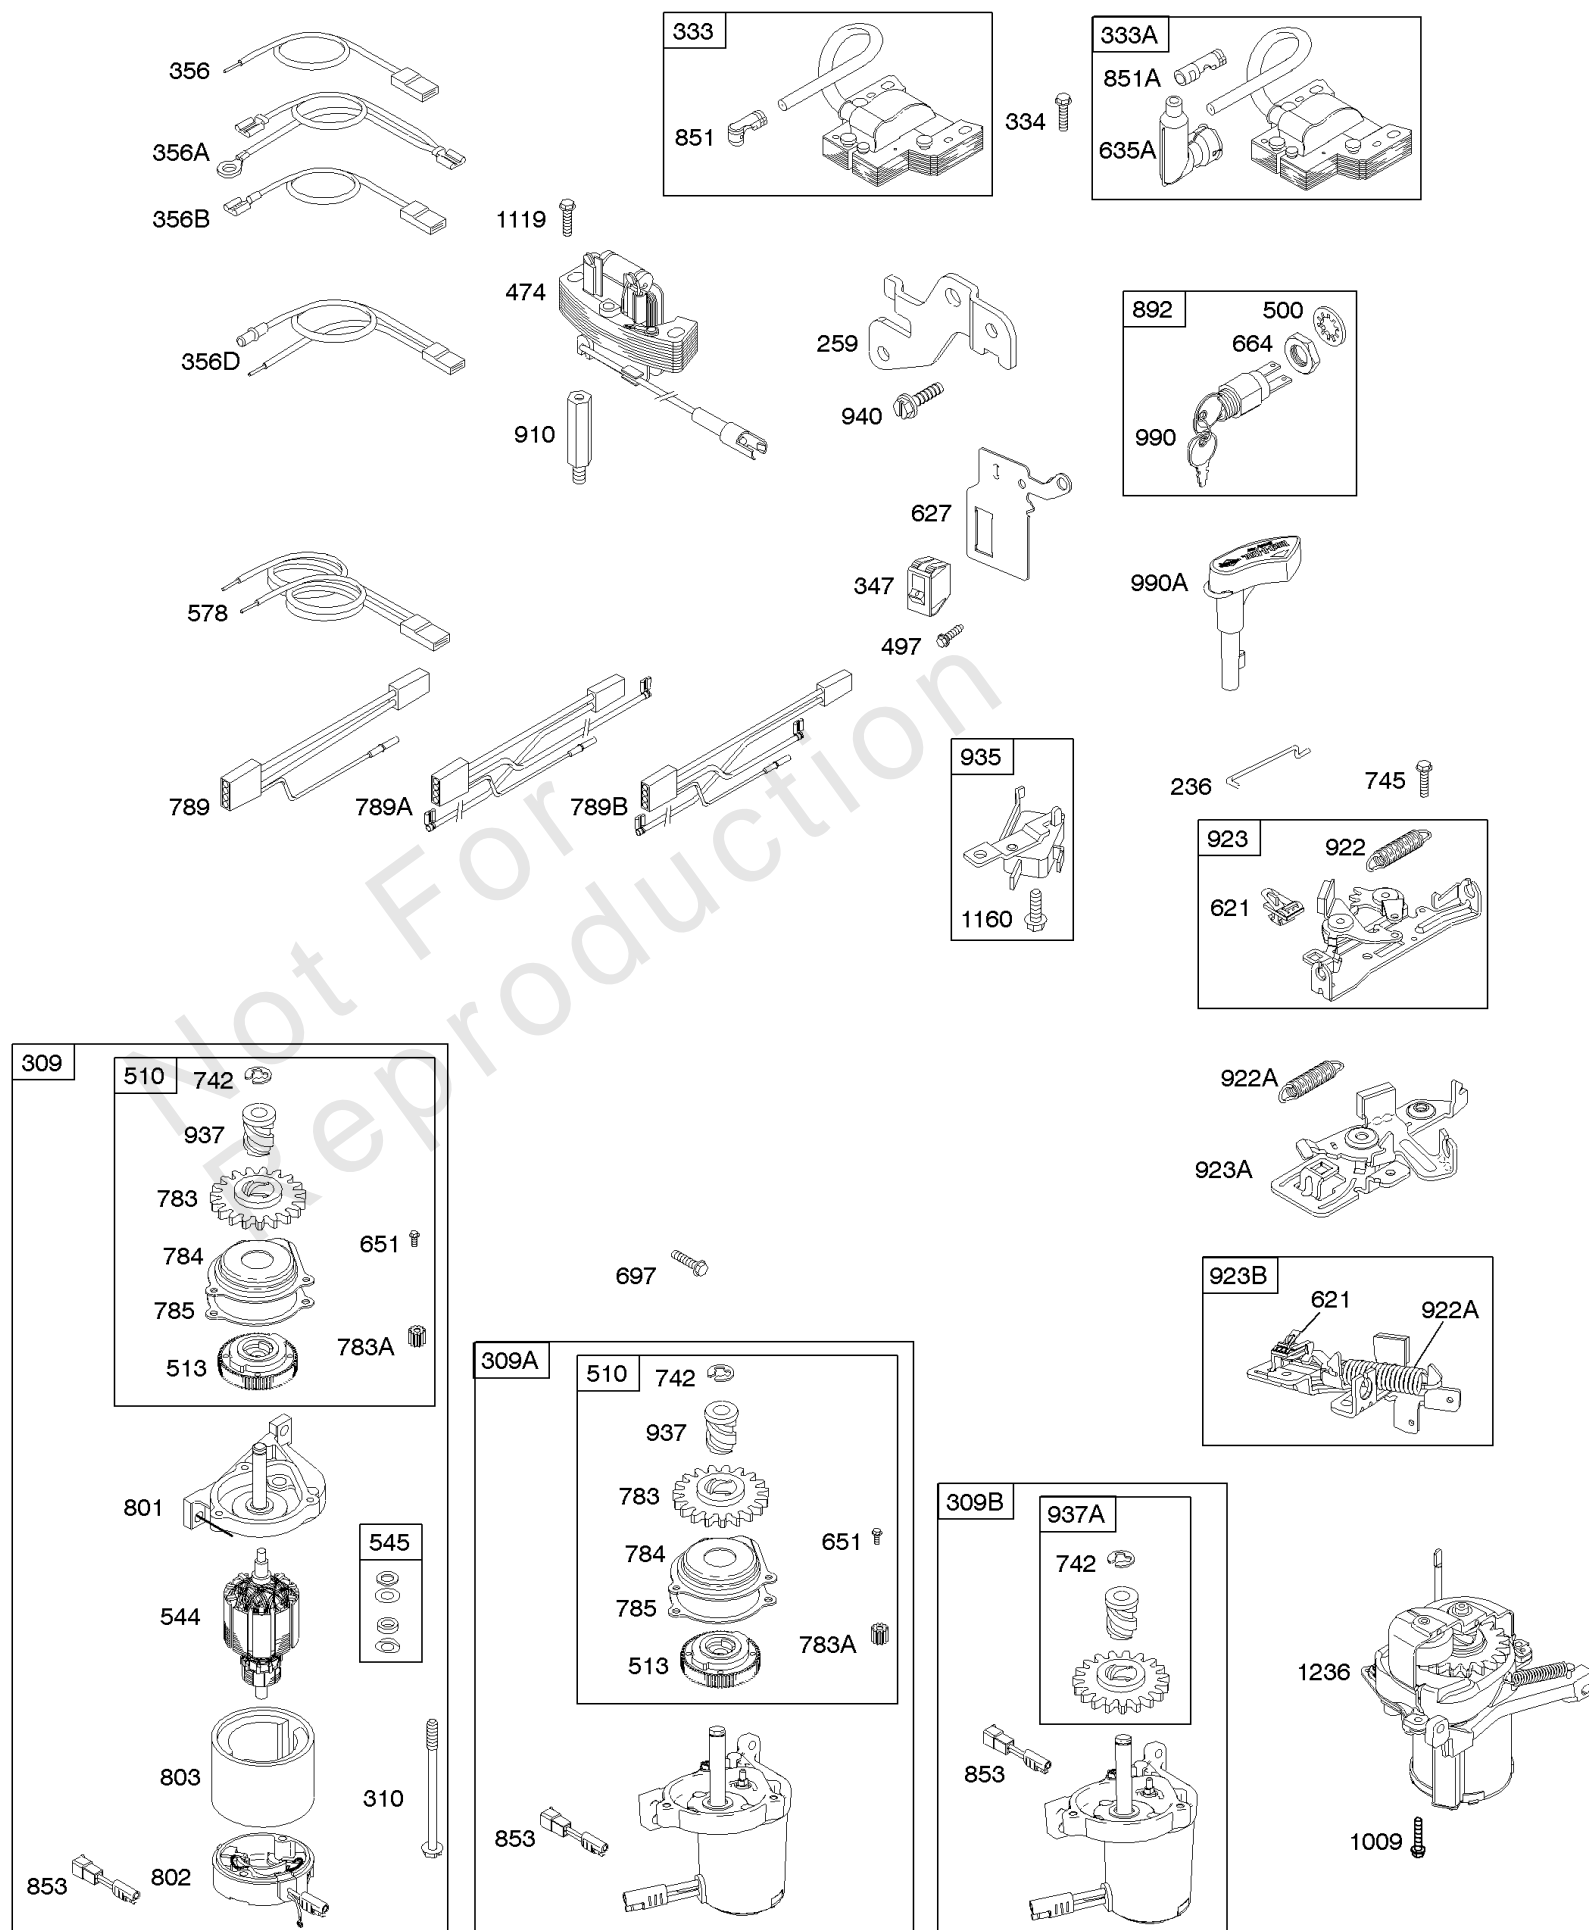

## Alternator, Electric Starter, Electrical, Flywheel Brake, Ignition

              REF NO	PART NO	QTY	DESCRIPTION
789	690790		Harness-Wiring -Used Before Code Date 00040700
789A	691372		Harness-Wiring -Used Before Code Date 00040700
789B	696547		Harness-Wiring
801	690782		Cap-Drive
802	695267		Cap-End -Used After Code Date 00040600
802	695975		Cap-End -Used Before Code Date 00040700
803	695266		Housing-Starter -Used After Code Date 00040600
803	695975		Housing-Starter -Used Before Code Date 00040700
851	493880S		TERMINAL, Spark Plug
851A	692424		Terminal-Spark Plug
853	695268		Adapter-Wire
892	690646		SWITCH, Key
910	691094		Stud -(Alternator)
922	691831		Spring-Brake
922A	692135		Spring-Brake
923	796387		Brake -Used After Code Date 08043000
923A	695891		Brake
935	499421		Switch-Interlock -Used Before Code Date 08050100
937	691325		Spline-Starter
937A	799420		Spline-Starter
940	690664		Screw -(Casing Clamp Bracket)
990	691959		SET, Key
990A	695951		Key Set
1009	696255		Screw -(Starter Motor)
1119	691648		Screw -(Alternator)
1160	690345		Screw -(Interlock Switch)
1236	695959		Starter-Mechanical -(Touch N Mow)(Do Not Service Individual Parts, Only As A Whole)

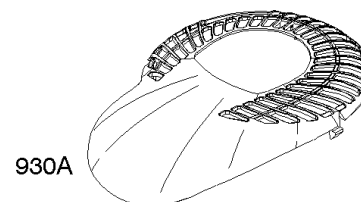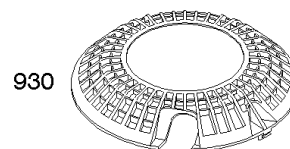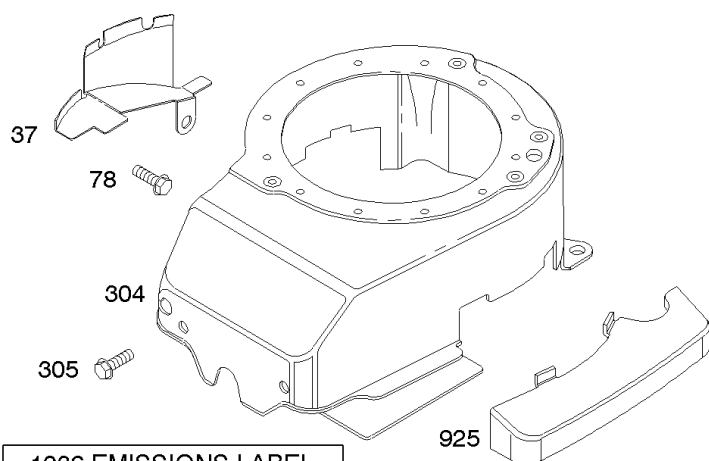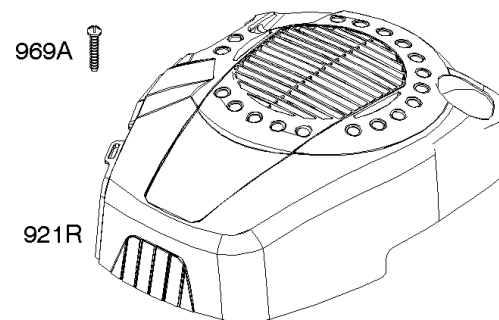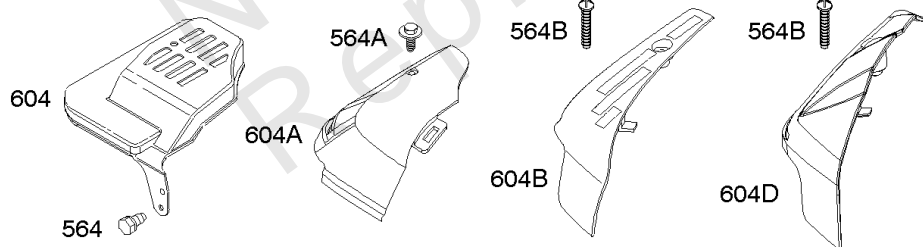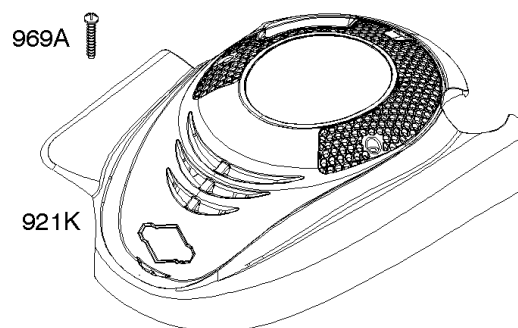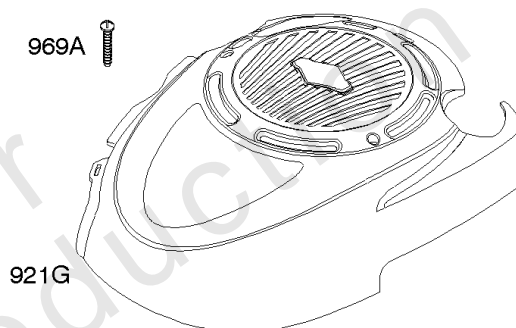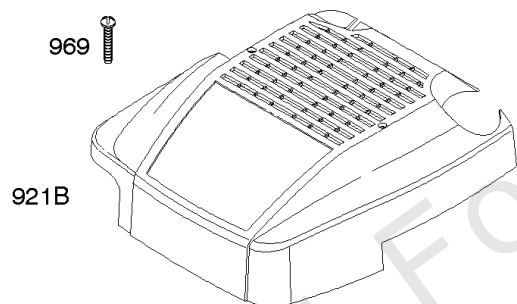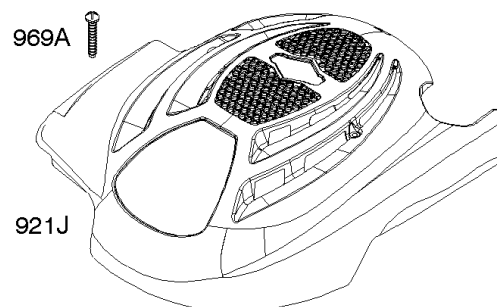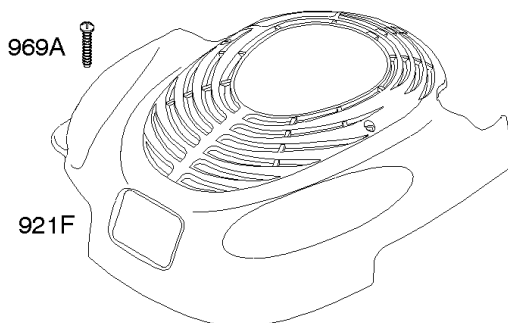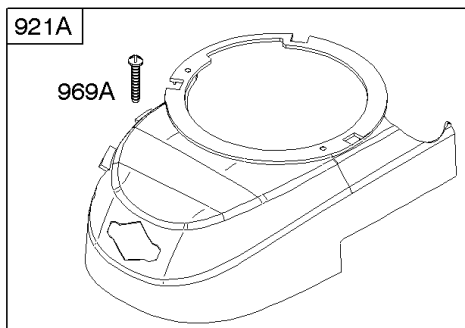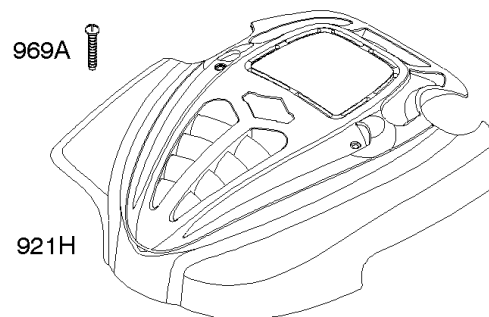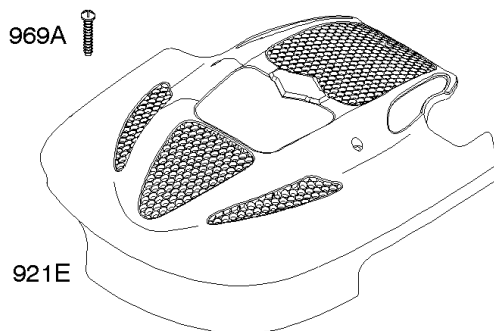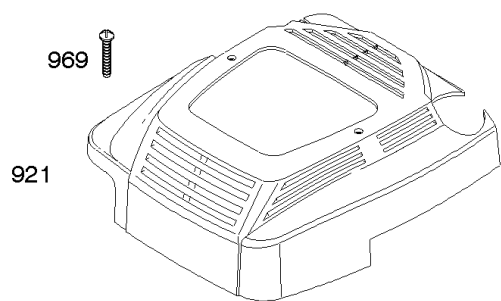

## Blower Housing/Shrouds

REF NO	PART NO	QTY	DESCRIPTION
37	694086		Guard-Flywheel
78	691108		SCREW -(Flywheel Guard)
304	493293		Housing-Blower -(For Use On Engines With Brake)
304	493294		Housing-Blower -(For Use On Engines Without Brake)
305	691108		SCREW -(Blower Housing)
564	690664		Screw -(Control Cover)
564A	691142		Screw -(Control Cover)
564B	698589		Screw -(Control Cover)
604	691757		Cover-Control
604A	691344		Cover-Control
604B	790703		Cover-Control
604D	793770		Cover-Control
921	497233		Cover-Blower Housing
921A	695886		Cover-Blower Housing
921B	692931		Cover-Blower Housing
921R	793771		Cover-Blower Housing
921E	696262		Cover-Blower Housing
921F	697343		Cover-Blower Housing
921K	699984		Cover-Blower Housing
921J	790036		Cover-Blower Housing
921H	790037		Cover-Blower Housing
921G	790701		Cover-Blower Housing
925	690595		Cover-Linkage -Used Before Code Date 07072300
925	795403		Cover-Linkage -Used After Code Date 07072200
930	691919		Guard-Rewind -(Round)
930A	691345		Guard-Rewind -(Tear Drop)
969	690700		Screw -(Blower Housing Cover)
969A	691138		Screw -(Blower Housing Cover)
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)



## Camshaft, Crankshaft, Cylinder, Engine Sump, Kit/Gaskets, Lubrication, Piston Group,

REF NO	PART NO	QTY	DESCRIPTION
1	590401		Cylinder Assembly -Used After Code Date 11063000
1	697322		Cylinder Assembly -Used Before Code Date 11070100
2	399269		Kit-Bushing/Seal -(Magneto Side)
3	299819S		SEAL, Oil -(Magneto Side)
4	493279		Sump, Engine
4A	493365		Sump-Engine -(Auxiliary PTO)
5	590411		Head-Cylinder -Used After Code Date 11063000
5	691160		Head-Cylinder -Used Before Code Date 11070100
7	799875		Gasket-Cylinder Head -Used After Code Date 11063000
7	692249		Gasket-Cylinder Head -Used Before Code Date 11070100
8	590395		Breather Assembly -Used After Code Date 11063000
8	695250		Breather Assembly -Used Before Code Date 11070100
9	699472		Gasket-Breather -Used After Code Date 11063000
9	699833		Gasket-Breather -Used Before Code Date 11070100
10	94650		Screw -(Breather Assembly)
11	691781		Tube-Breather
12	692232		Gasket-Crankcase
13	690912		Screw -(Cylinder Head) -Used Before Code Date 11070100
13	590422		Screw -(Cylinder Head) -Used After Code Date 11063000
15	691680		PLUG, Oil Drain -(Square Socket)
15A	691093		Plug-Oil Drain -(Hex Socket)
16	593916		Crankshaft -Used Before Code Date 97011300
16	691451		Crankshaft -Used After Code Date 97011200
20	399781S		Seal-Oil -(PTO Side)
20A	691952		Seal-Oil -(PTO Side) (Auxiliary PTO)
22	691092		Screw -(Crankcase Cover/Sump)
24	222698S		KEY, Flywheel
25	493262		Piston Assembly -(Standard) -Used Before Code Date 97011300
25	493386		Piston Assembly -(.020" Oversize) -Used Before Code Date 97011300
25	493387		Piston Assembly -(.030" Oversize) -Used Before Code Date 97011300

 
1319 WARNING LABEL

**REQUIRED** when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

1019 LABEL KIT

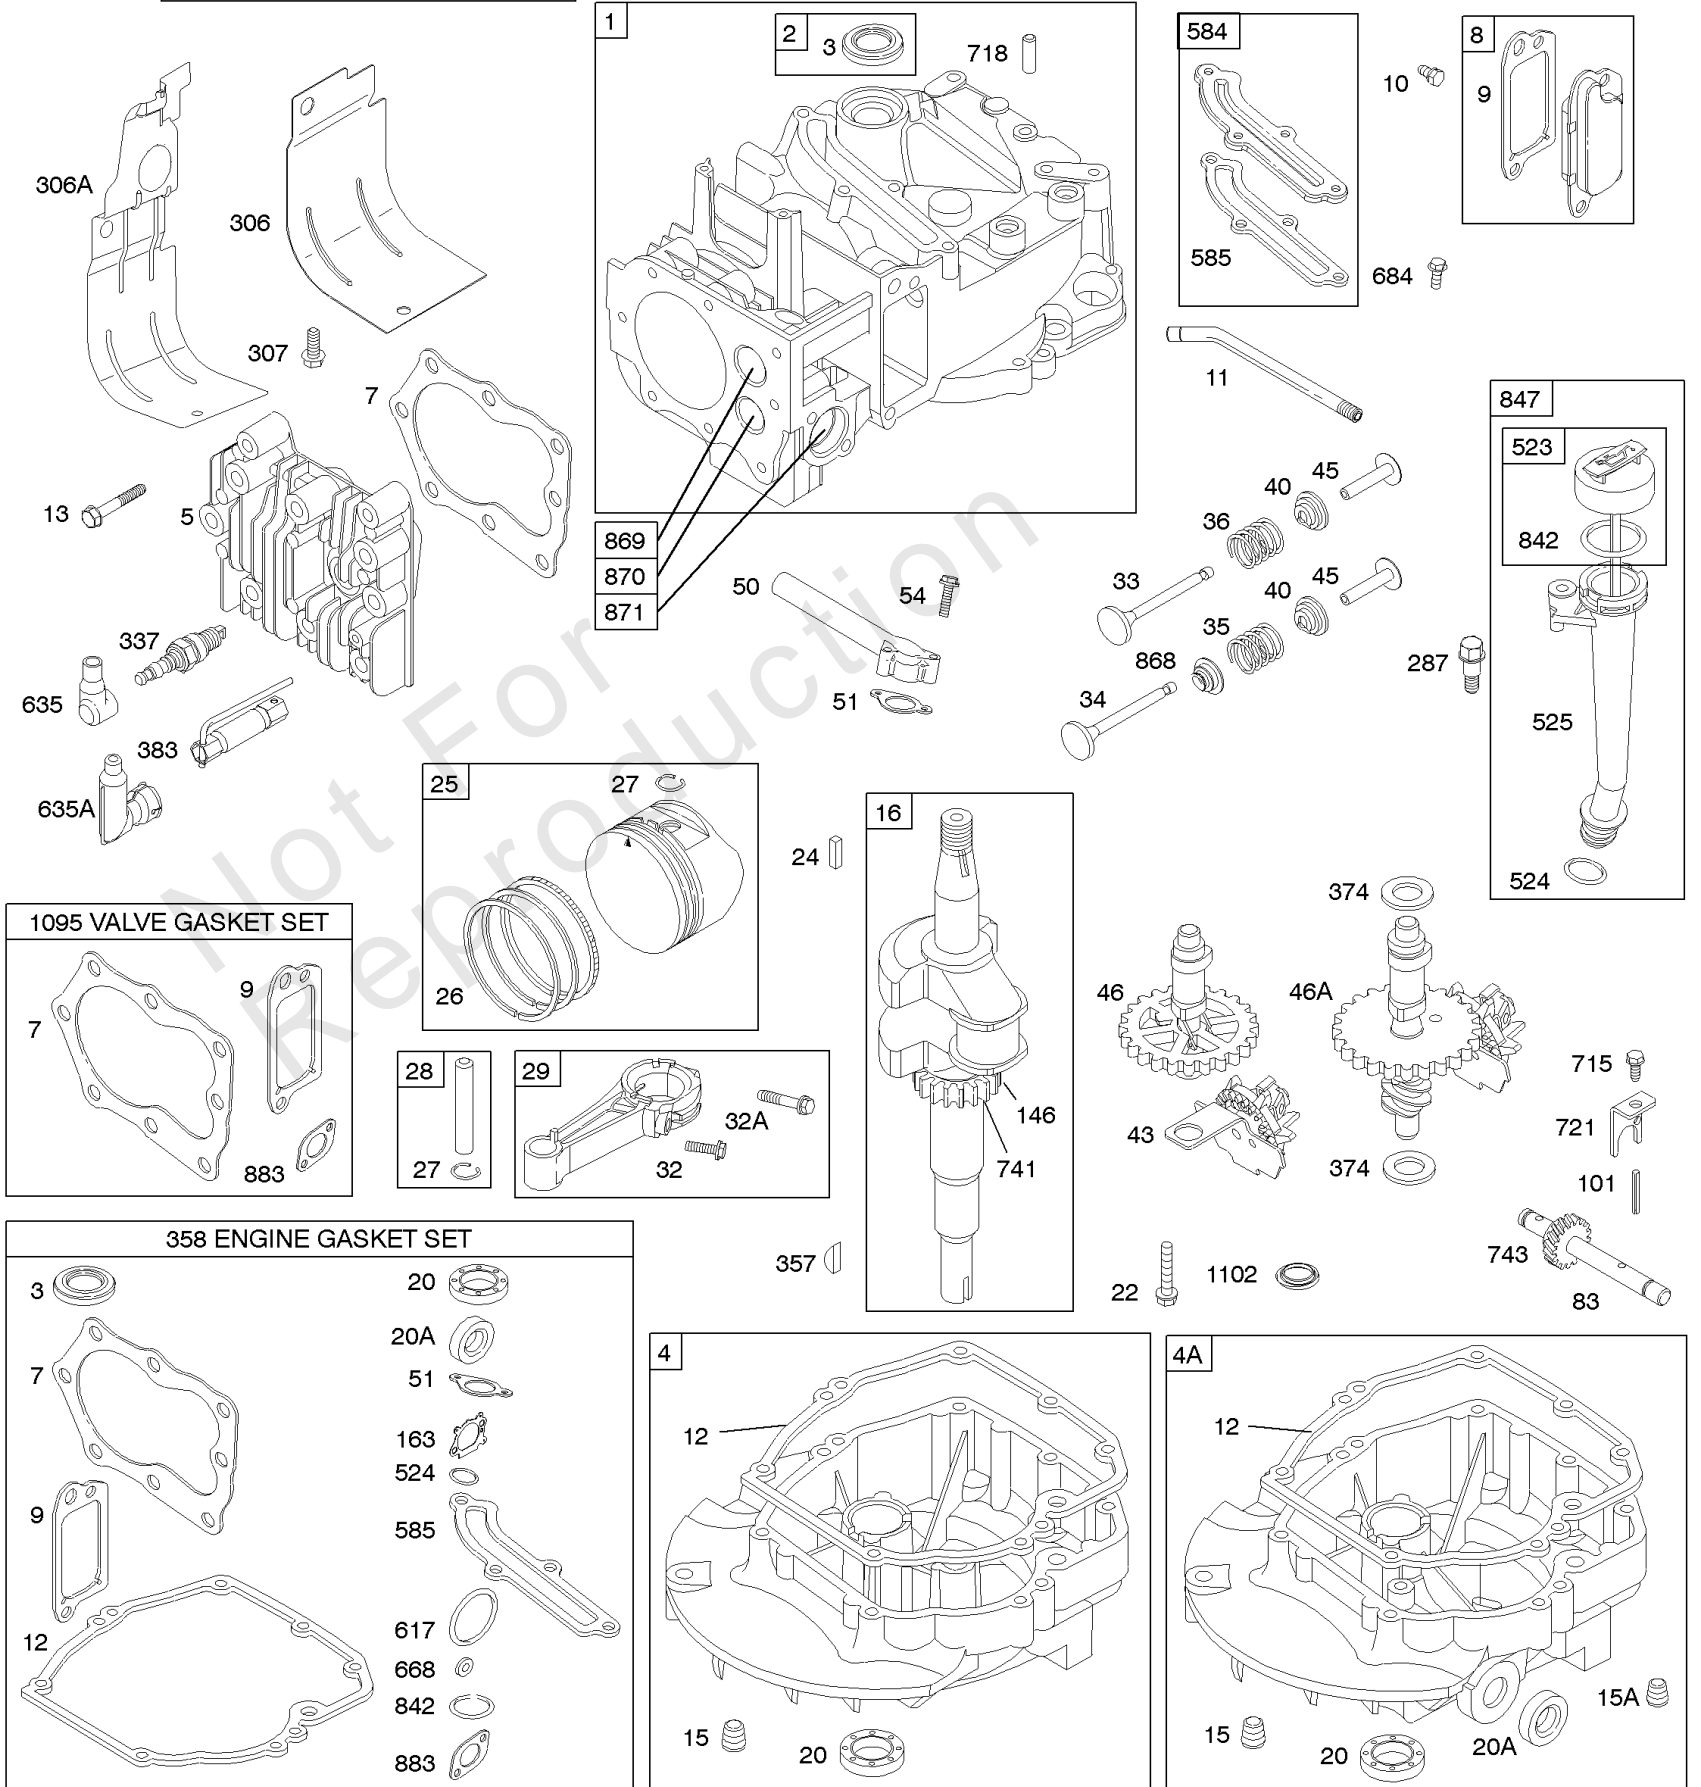



## Camshaft, Crankshaft, Cylinder, Engine Sump, Kit/Gaskets, Lubrication, Piston Group,

REF NO	PART NO	QTY	DESCRIPTION
25	590404		Piston Assembly -(Standard) -Used After Code Date 11063000
25	590405		Piston Assembly -(.020" Oversize) -Used After Code Date 11063000
25	791097		Piston Assembly -(Standard) -Used After Code Date 97011200 -Used Before Code Date 07090400
25	791326		Piston Assembly -(.020" Oversize) -Used After Code Date 97011200 -Used Before Code Date 07090400
25	795429		Piston Assembly -(Standard) -Used After Code Date 07090300 -Used Before Code Date 09041700
25	795430		Piston Assembly -(.020" Oversize) -Used After Code Date 07090300 -Used Before Code Date 09041700
25	797302		Piston Assembly -(Standard) -Used After Code Date 09041600 -Used Before Code Date 11070100
25	797303		Piston Assembly -(.020" Oversize) -Used After Code Date 09041600 -Used Before Code Date 11070100
26	493261		Ring Set -(Standard) -Used Before Code Date 97011300
26	493389		Ring Set -(.020" Oversize) -Used Before Code Date 97011300
26	493390		Ring Set -(.030" Oversize) -Used Before Code Date 97011300
26	499425		Ring Set -(Standard) -Used After Code Date 97011200 -Used Before Code Date 04031500
26	499427		Ring Set -(.020" Oversize) -Used After Code Date 97011200 -Used Before Code Date 04102200
26	590402		Ring Set -(Standard) -Used After Code Date 11063000
26	590403		Ring Set -(.020" Oversize) -Used After Code Date 11063000
26	791098		Ring Set -(Standard) -Used After Code Date 04031400 -Used Before Code Date 07090400
26	791324		Ring Set -(.020" Oversize) -Used After Code Date 04102100 -Used Before Code Date 07090400
26	795431		Ring Set -(Standard) -Used After Code Date 07090300 -Used Before Code Date 09041700

 
1319 WARNING LABEL

**REQUIRED** when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

1019 LABEL KIT

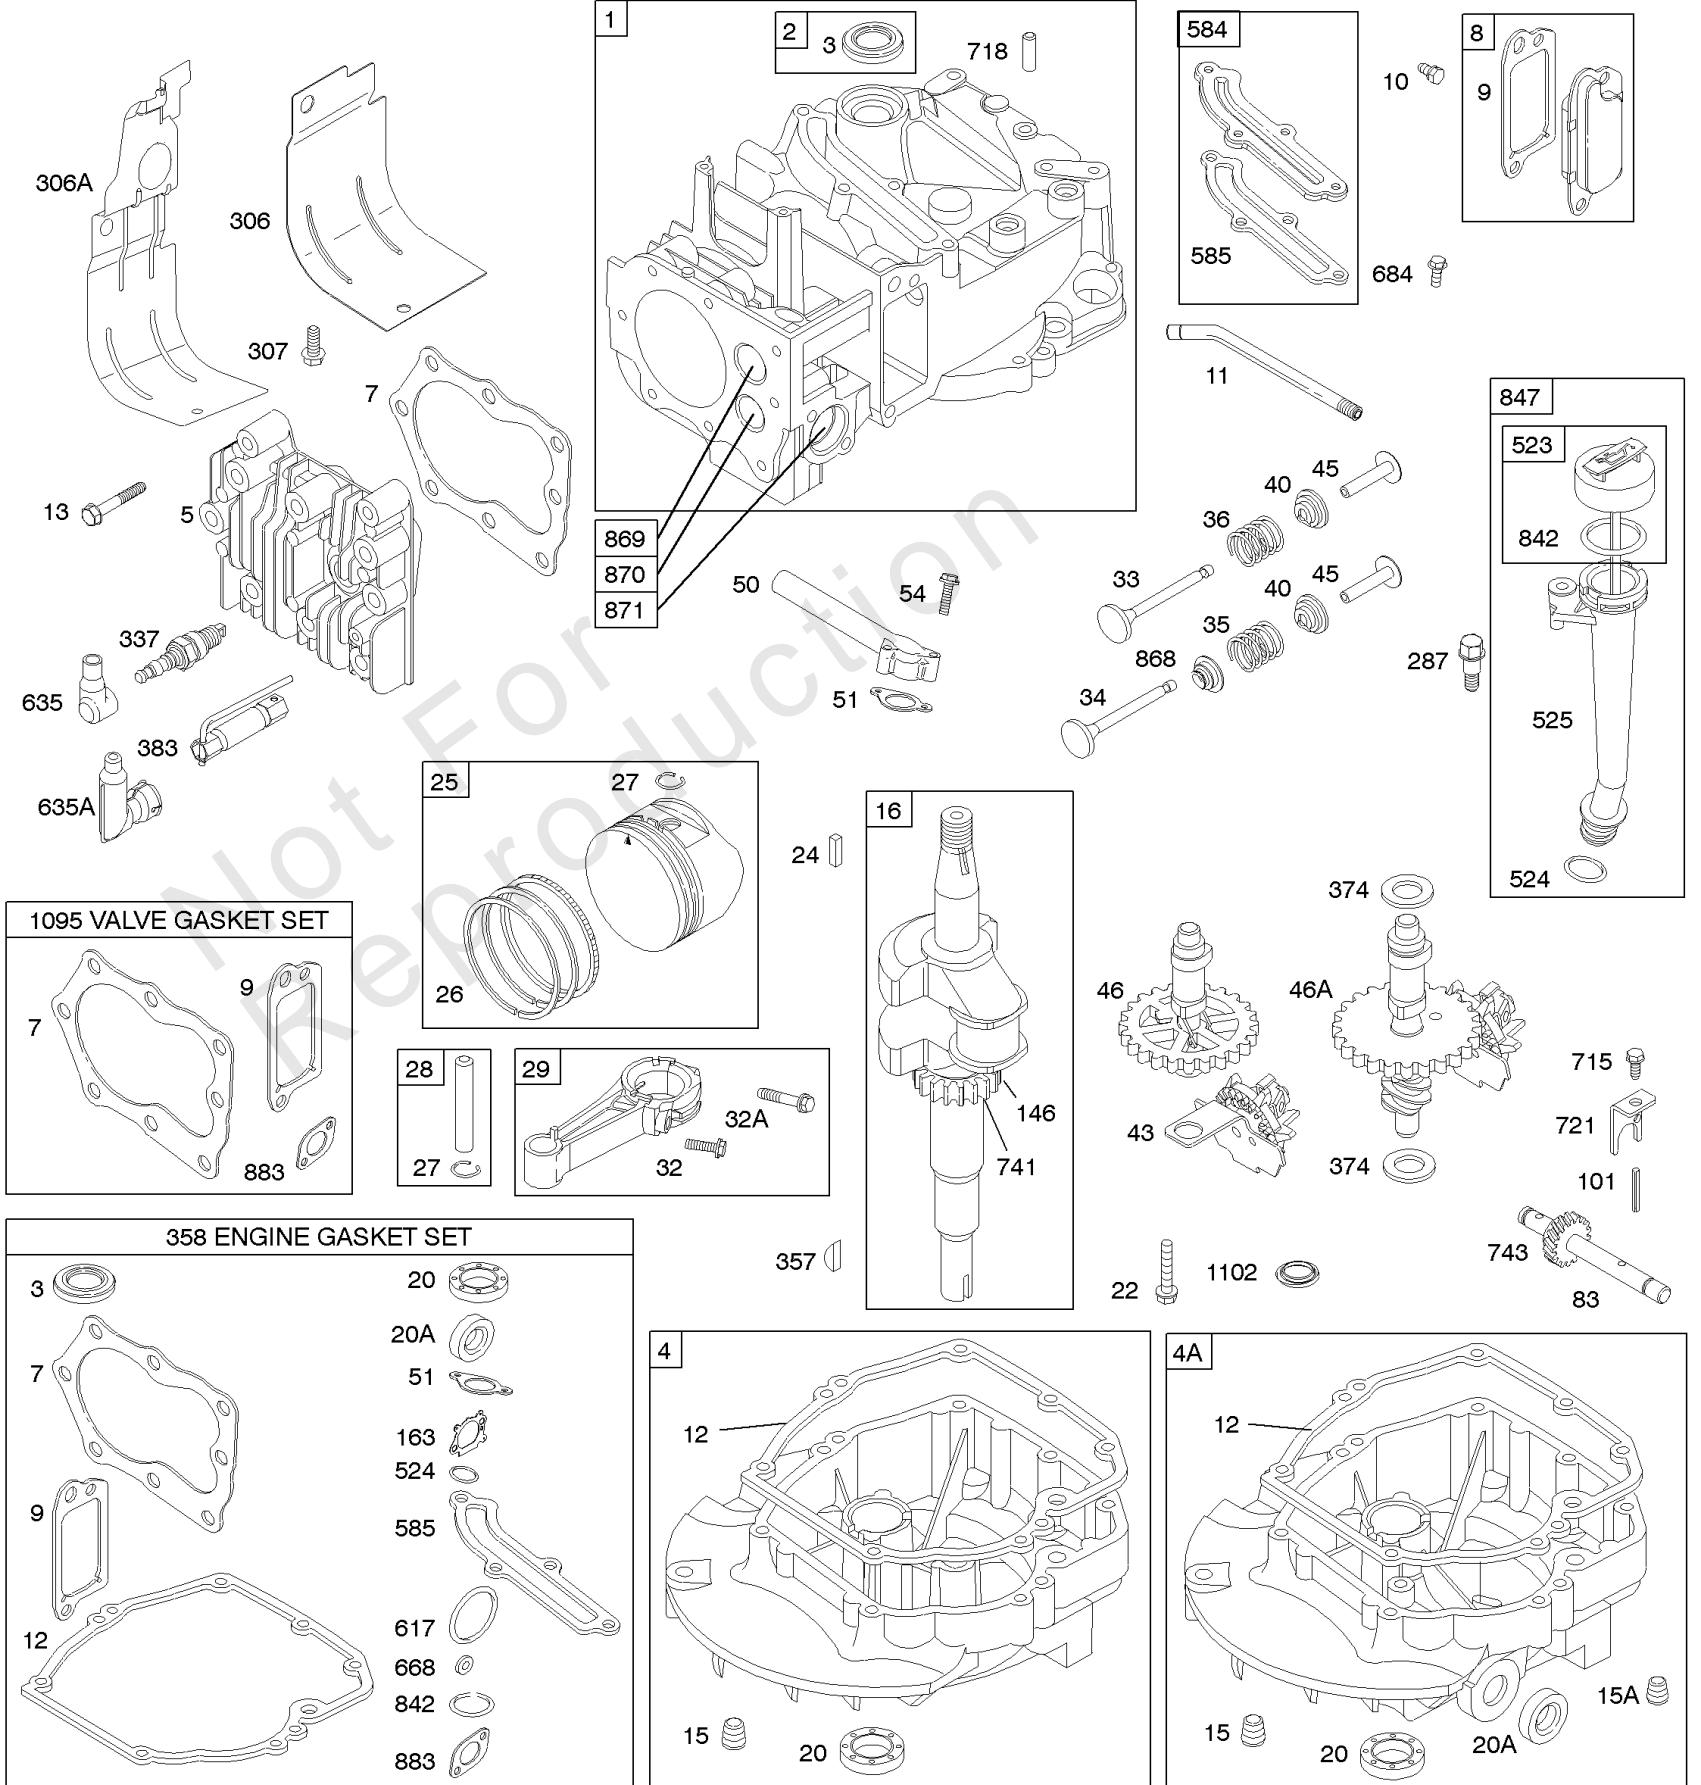

## Camshaft, Crankshaft, Cylinder, Engine Sump, Kit/Gaskets, Lubrication, Piston Group,

REF NO	PART NO	QTY	DESCRIPTION
26	795432		Ring Set -(.020" Oversize) -Used After Code Date 07090300 -Used Before Code Date 09041700
26	797304		Ring Set -(Standard) -Used After Code Date 09041600 -Used Before Code Date 11070100
26	797305		Ring Set -(.020" Oversize) -Used After Code Date 09041600 -Used Before Code Date 11070100
27	691588		Lock-Piston Pin -Used Before Code Date 97011300
27	691588		Lock-Piston Pin -Used After Code Date 09041600
27	691866		Lock-Piston Pin -Used After Code Date 97011200 -Used Before Code Date 09041700
28	298908		Pin-Piston -(.005" Oversize) -Used Before Code Date 97011300
28	298909		Pin-Piston -(Standard) -Used Before Code Date 97011300
28	298909		Pin-Piston -(Standard) -Used After Code Date 09041600
28	499423		Pin-Piston -(Standard) -Used After Code Date 97011200 -Used Before Code Date 09041700
29	499424		Rod-Connecting -(Standard) -Used After Code Date 97011200 -Used Before Code Date 09041700
29	490566		Rod-Connecting -(Standard) -Used Before Code Date 97011300
29	797306		Rod-Connecting -(Standard) -Used After Code Date 09041600
32	691664		Screw -(Connecting Rod)
32A	695759		Screw -(Connecting Rod) -Used After Code Date 00042200
33	590394		Valve-Exhaust -Used After Code Date 11063000
33	262651S		Valve-Exhaust -Used Before Code Date 11070100
34	262652S		Valve-Intake -Used Before Code Date 11070100
34	590393		Valve-Intake -Used After Code Date 11063000
35	691270		Spring-Valve -(Intake)
36	691270		Spring-Valve -(Exhaust)
40	692194		Retainer-Valve
43	691997		Slinger-Governor/Oil
45	690548		Tappet-Valve

 
1319 WARNING LABEL

**REQUIRED** when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

1019 LABEL KIT

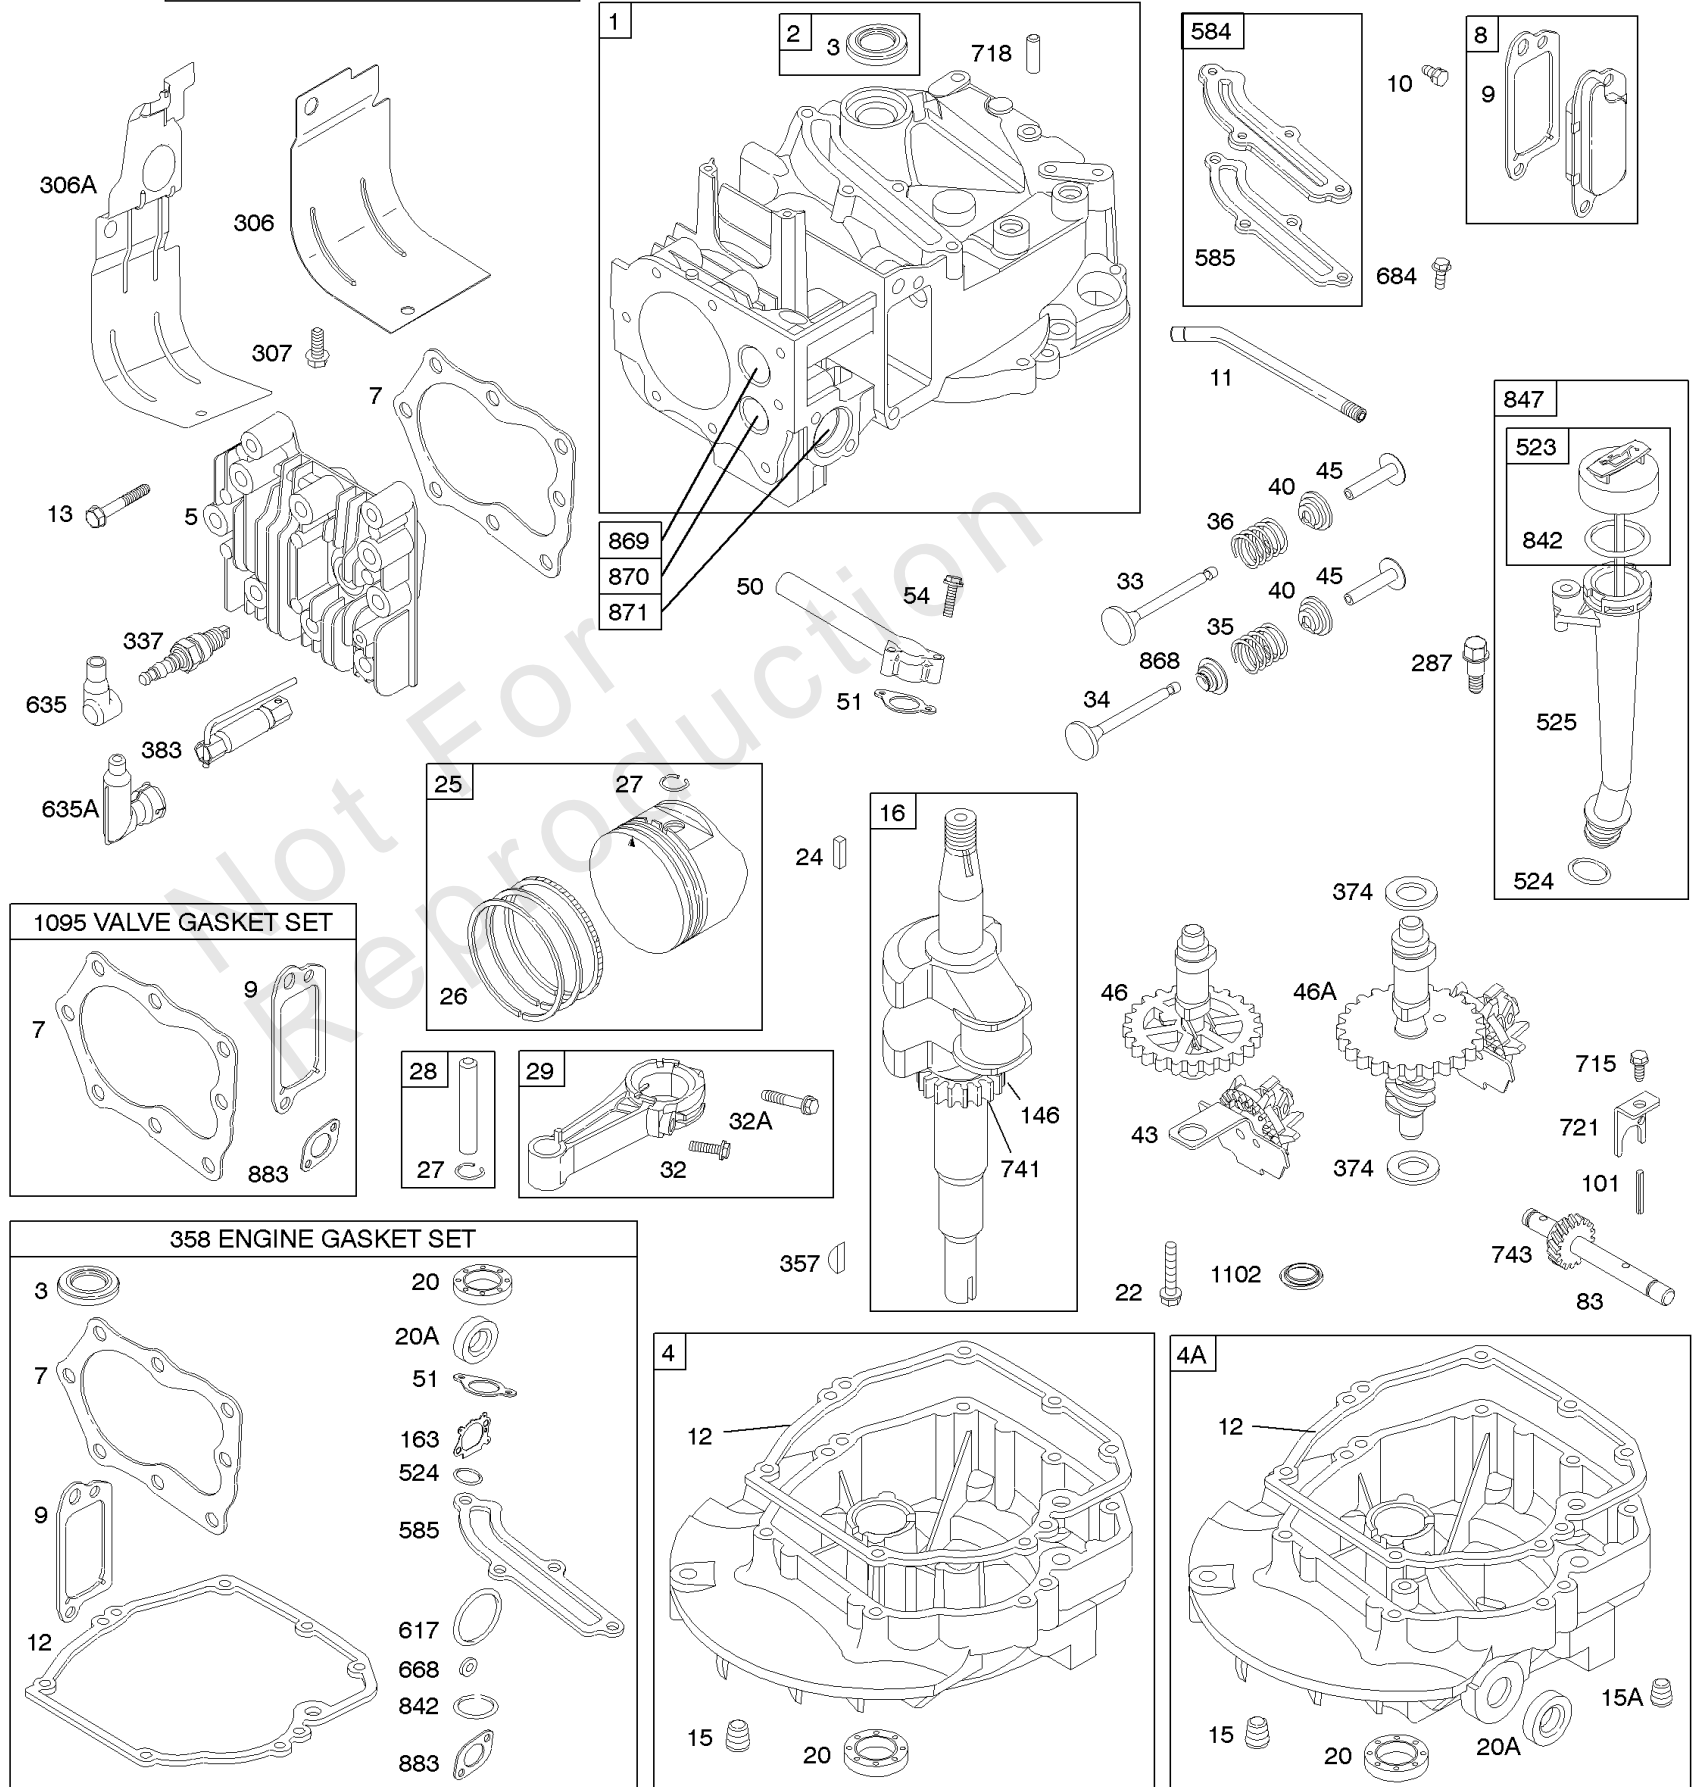

## Camshaft, Crankshaft, Cylinder, Engine Sump, Kit/Gaskets, Lubrication, Piston Group,

REF NO	PART NO	QTY	DESCRIPTION
46A	691459		Camshaft -(Counterclockwise)
50	497465		Manifold-Intake
51	272199S		Gasket-Intake
54	691650		Screw -(Intake Manifold)
83	691778		Shaft-Auxiliary Drive
101	691623		Pin-Shaft
146	690979		KEY, Woodruff
163	272653S		Gasket-Air Cleaner
287	690940		SCREW -(Dipstick Tube)
306	690450		Shield-Cylinder
306A	790836		Shield-Cylinder
307	690345		Screw -(Cylinder Shield)
337	697451		Plug-Spark -(EMS) -Used Before Code Date 11070100
337	799876		Plug-Spark -Used After Code Date 11063000
337	802592S		Plug-Spark -(Resistor) -Used Before Code Date 11070100
357	695867		Key-Drive Pulley
358	794307		Gasket Set-Engine -Used Before Code Date 11070100
358	590508		Gasket Set-Engine -Used After Code Date 11063000
374	691074		Washer -(Camshaft)
383	89838S		Wrench-Spark Plug
523	499621		Dipstick
524	692296		Seal-Dipstick Tube
525	495265		Tube-Dipstick
584	697734		Cover-Breather Passage
585	691879		Gasket-Breather Passage
617	270344S		Seal-O Ring -(Intake Manifold)
635	66538S		BOOT, Spark Plug
635A	793351		Boot-Spark Plug -(Snap In Style)
635A	792597		Boot-Spark Plug -(Screw On Style)
668	493823		Spacer -(Includes 2)
684	690345		Screw -(Breather Passage Cover)
715	691147		Screw -(Stop Shaft)
718	690959		PIN, Locating
721	690449		Stop-Shaft
741	794388		Gear-Timing -(Use Without Woodruff Key) -Used After Code Date 07093000 -Used Before Code Date 08021800
741	795755		Gear-Timing -(Plastic) -Used After Code Date 08021700

 
**1319 WARNING LABEL**

**REQUIRED** when replacing parts with warning labels affixed.

**1058 OPERATOR'S MANUAL**

**1330 REPAIR MANUAL**

**1019 LABEL KIT**

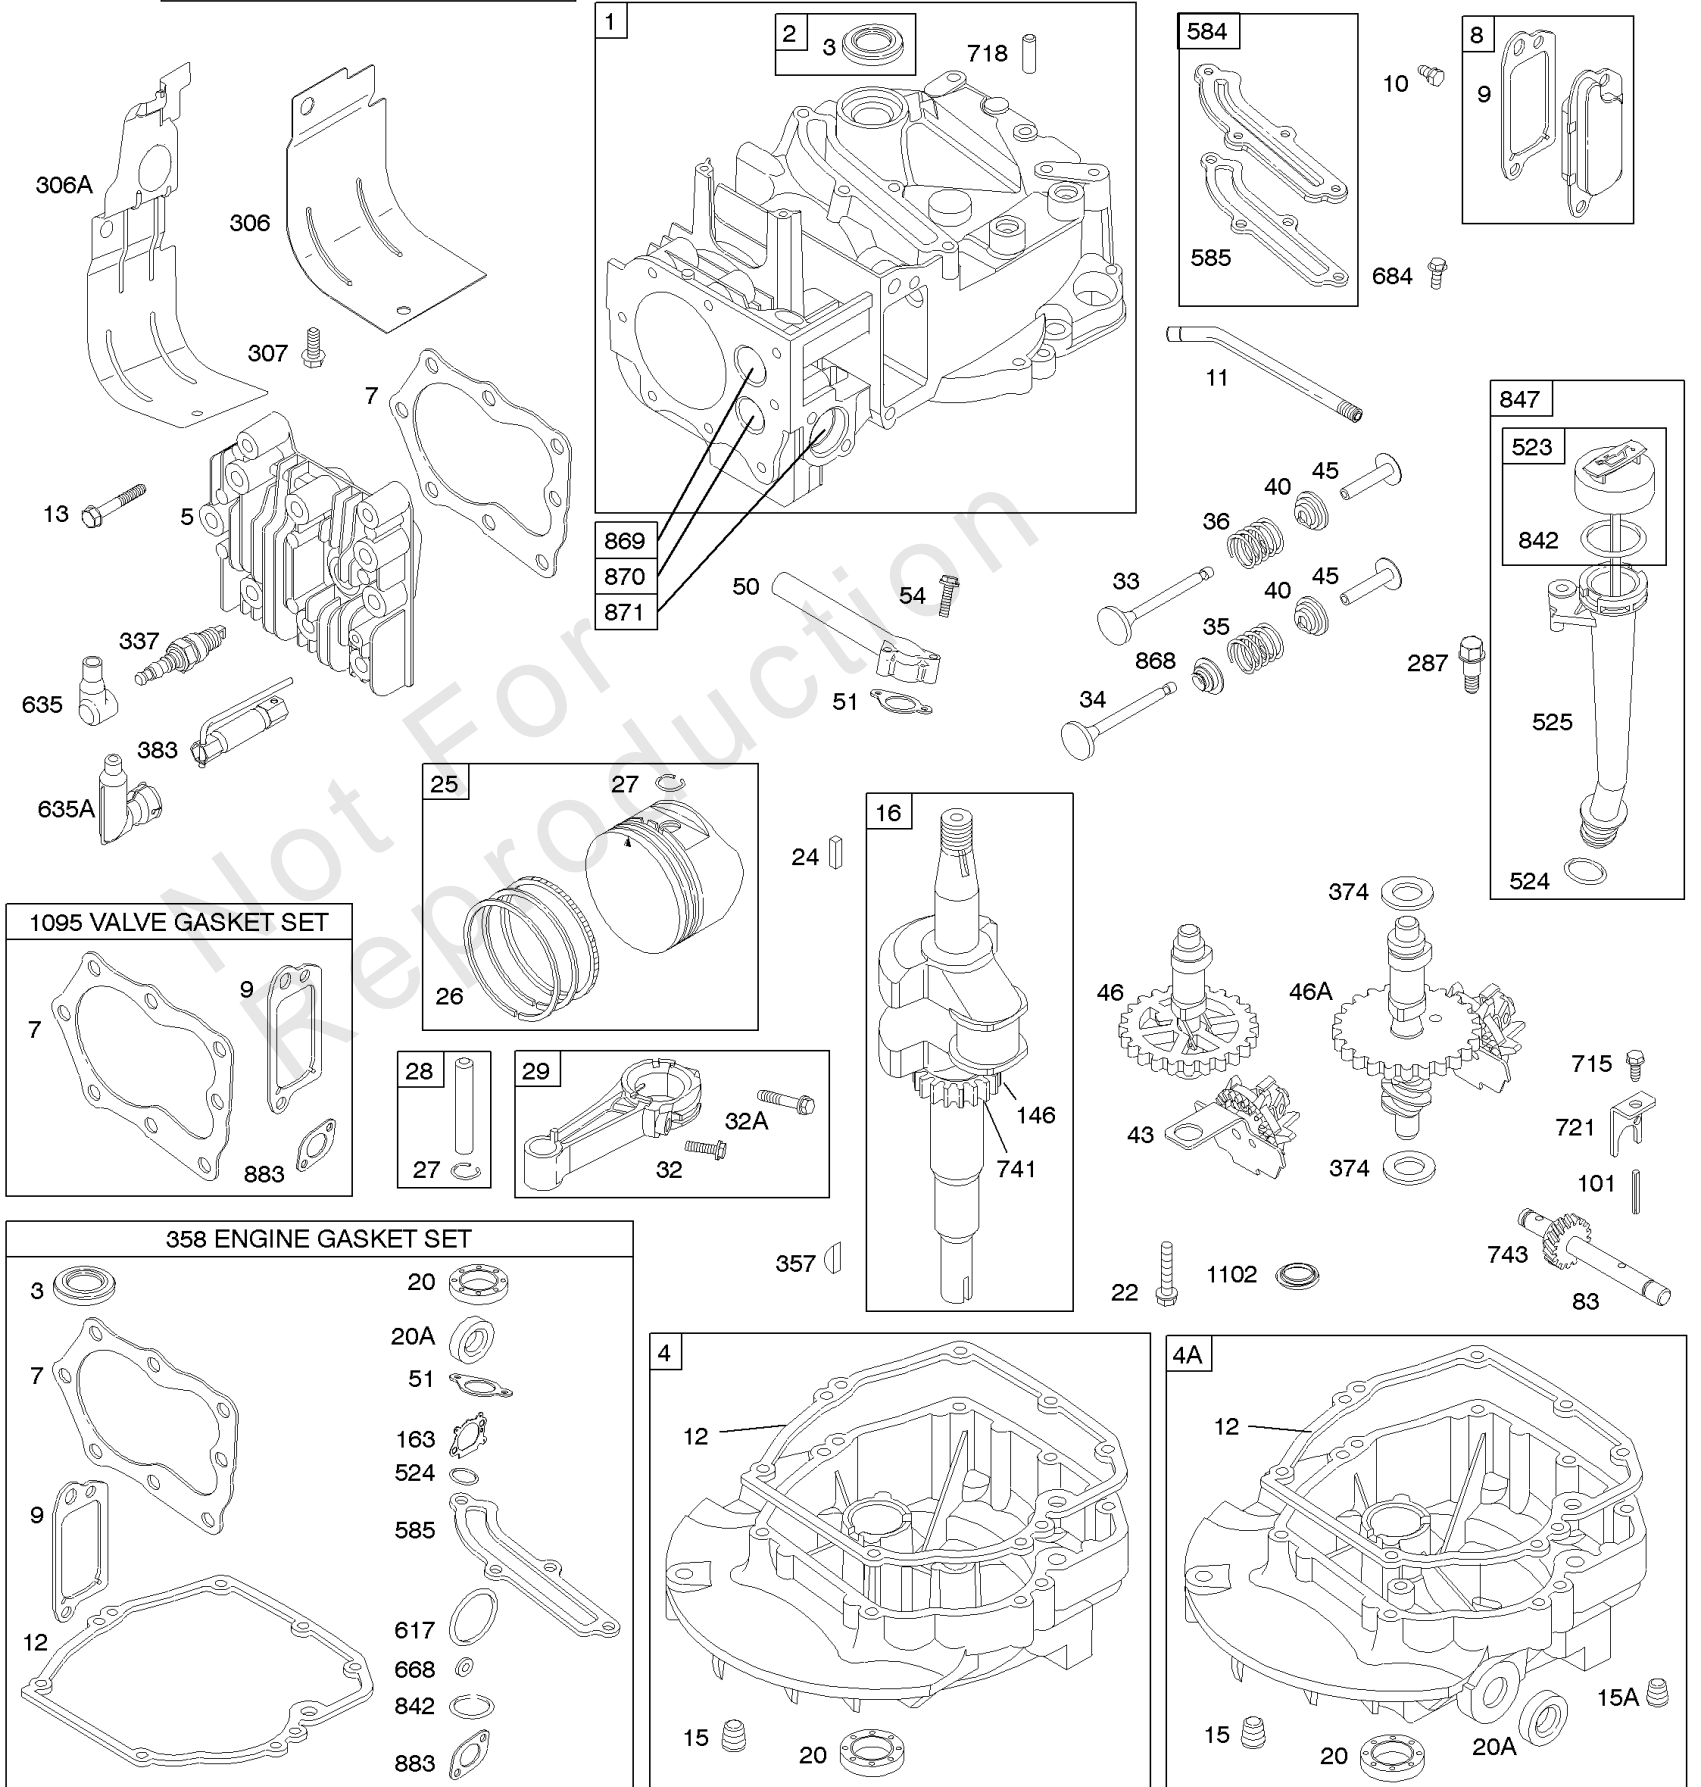

**1095 VALVE GASKET SET**

7, 9, 883

**358 ENGINE GASKET SET**

3, 7, 9, 12, 20, 20A, 51, 163, 524, 585, 617, 668, 842, 883

**4**

 
 
 
 
 
12, 15, 20

**4A**

12, 15, 20, 20A, 15A

## Camshaft, Crankshaft, Cylinder, Engine Sump, Kit/Gaskets, Lubrication, Piston Group,






REF NO	PART NO	QTY	DESCRIPTION
741	797521		Gear-Timing -(Metal) -Used After Code Date 08021700
741	691830		Gear-Timing -(Uses Woodruff Key)
741	790345		Gear-Timing -(Use Without Woodruff Key) -Used Before Code Date 07100100
743	691772		Gear-Drive -(Counterclockwise)
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	692047		Dipstick/Tube Assembly
868	590410		Seal-Valve -Used After Code Date 11063000
868	697338		Seal-Valve -Used Before Code Date 11070100
869	691155		Seat-Valve -(Intake)
870	690380		Seat-Valve -(Exhaust)
871	262001		Bushing-Valve Guide -(Exhaust) -Used Before Code Date 11070100
871	590409		Bushing-Valve Guide -Used After Code Date 11063000
871	63709		Bushing-Valve Guide -(Intake) -Used Before Code Date 11070100
883	691881		Gasket-Exhaust
1019	494256		Kit-Label
1019	790231		Kit-Label -(Touch N Mow)
1058	277039TRI		Operator's Manual -Used Before Code Date 11070100
1058	380567TRI		Operator's Manual -Used After Code Date 11063000
1095	590507		Gasket Set-Valve -Used After Code Date 11063000
1095	498528		Gasket Set-Valve -Used Before Code Date 11070100
1319	794467		LABEL, Warning
1330	270962		Repair Manual

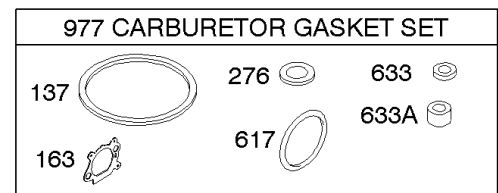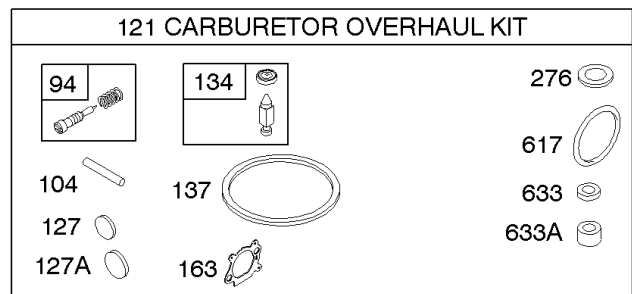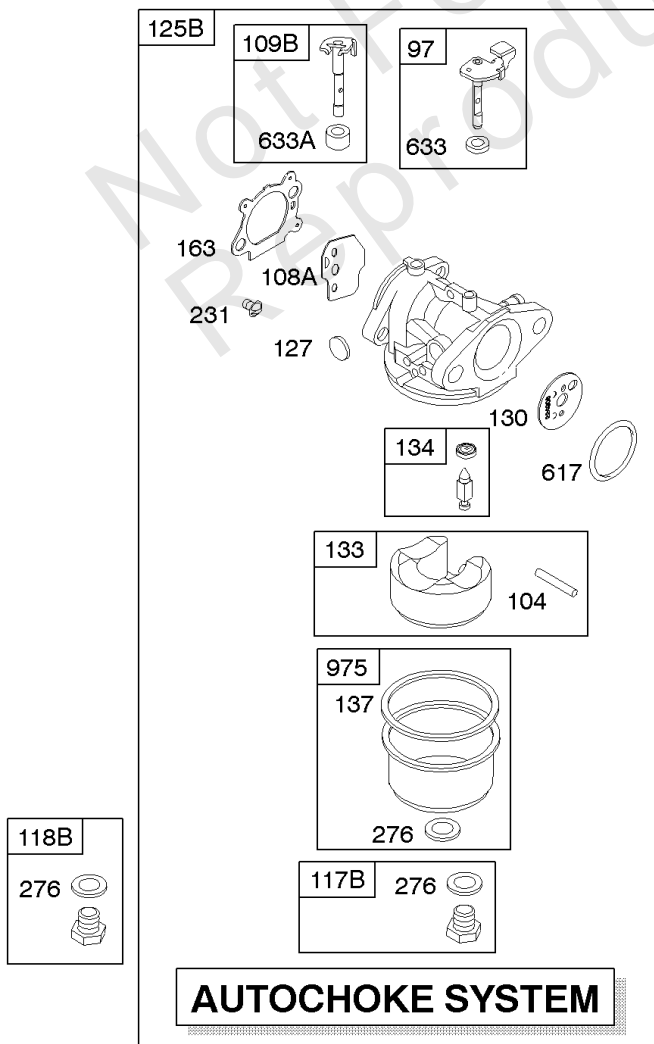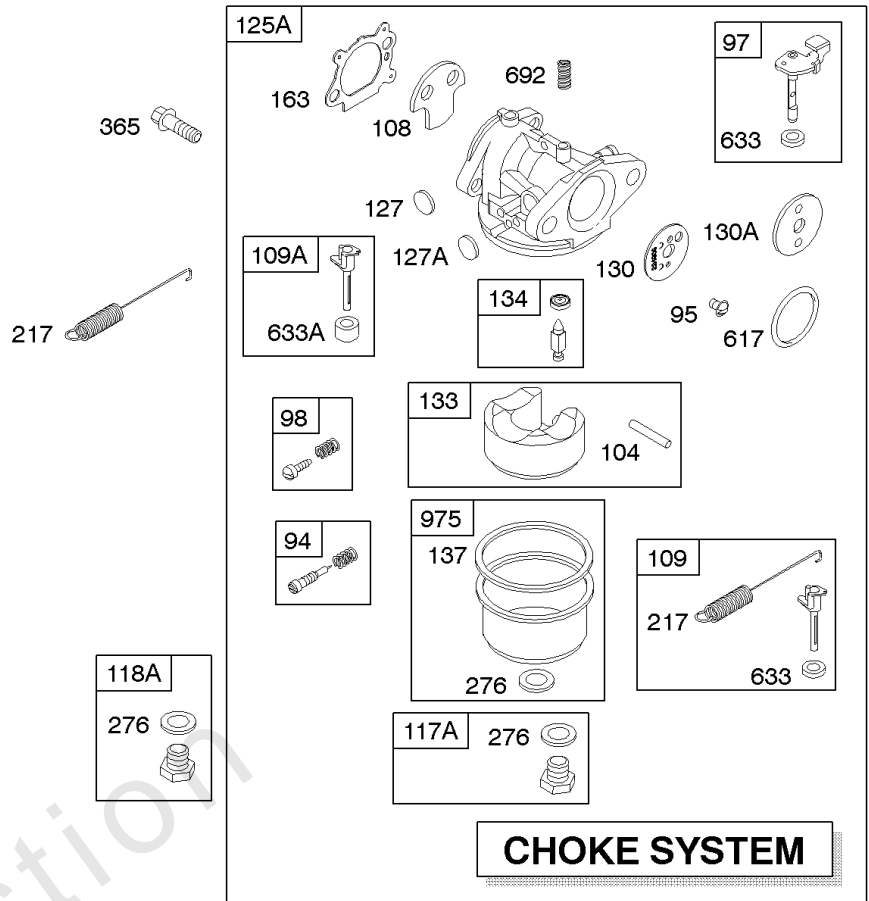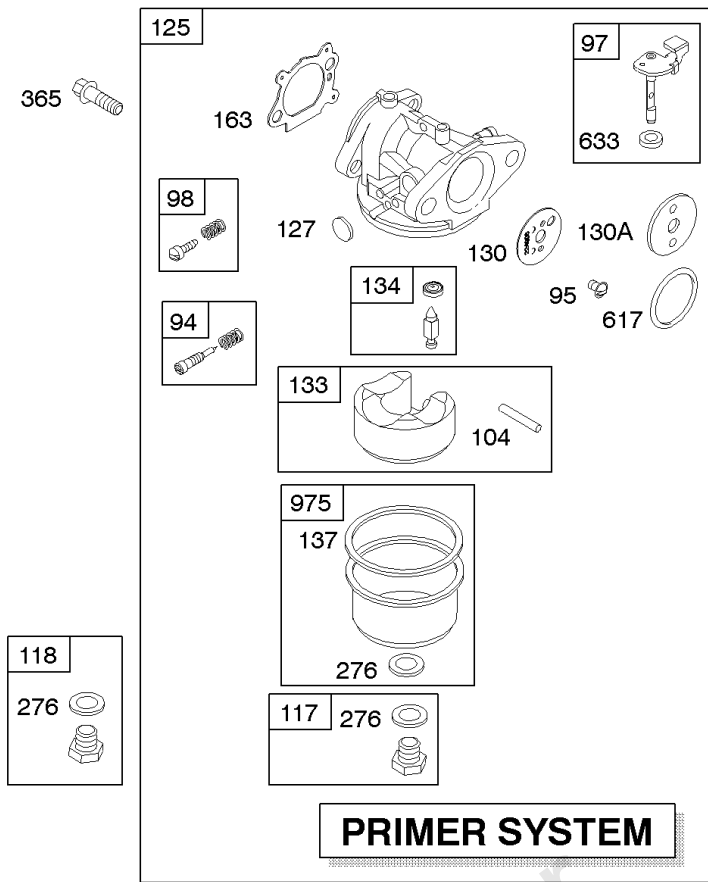

















## Carburator

     REF NO	PART NO	QTY	DESCRIPTION
94	493765		Kit-Idle Mixture
95	691636		Screw -(Throttle Valve)
97	493267		Shaft-Throttle -(Metal)
97	696565		Shaft-Throttle -(Plastic)
98	398185		Kit-Idle Speed
104	691242		Pin-Float Hinge
108	691182		Valve-Choke
108A	795935		Valve-Choke -Used After Code Date 08031200
108A	790844		Valve-Choke -Used Before Code Date 08031300
109	494218		Shaft-Choke
109A	498593		Shaft-Choke
109B	790843		Shaft-Choke -Used Before Code Date 08031300
109B	795936		Shaft-Choke -Used After Code Date 08031200
117	493637		Jet-Main -(Standard) -Used Before Code Date 94070400
117	494870		Jet-Main -(Standard) -Used After Code Date 94070400 -Used Before Code Date 95103000
117	494870		Jet-Main -(Standard) -Used After Code Date 96060200
117	497466		Jet-Main -(Standard) -Used After Code Date 95102900 -Used Before Code Date 96060300
117A	493637		Jet-Main -(Standard) -Used Before Code Date 96060300
117A	498977		Jet-Main -(Standard) -Used After Code Date 96060200
117B	697355		Jet-Main -(Standard)
118	496063		Jet-Main -(High Altitude) -Used Before Code Date 94070400
118	496495		Jet-Main -(High Altitude) -Used After Code Date 95102900 -Used Before Code Date 96060300
118	497315		Jet-Main -(High Altitude) -Used After Code Date 94070300 -Used Before Code Date 95103000
118	498975		Jet-Main -(High Altitude) -Used After Code Date 96060200
118A	494870		Jet-Main -(High Altitude) -Used Before Code Date 96060300
118A	498981		Jet-Main -(High Altitude) -Used After Code Date 96060200

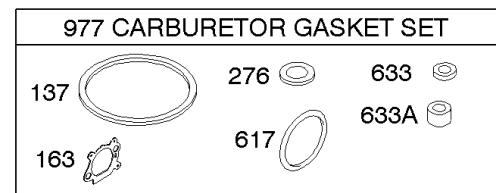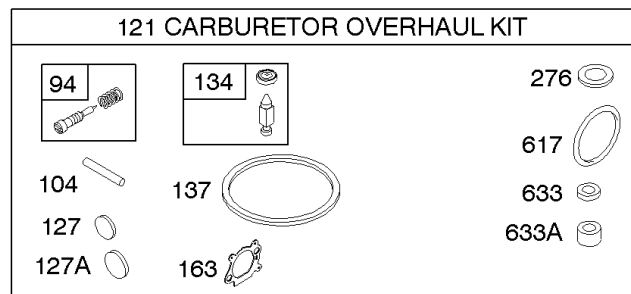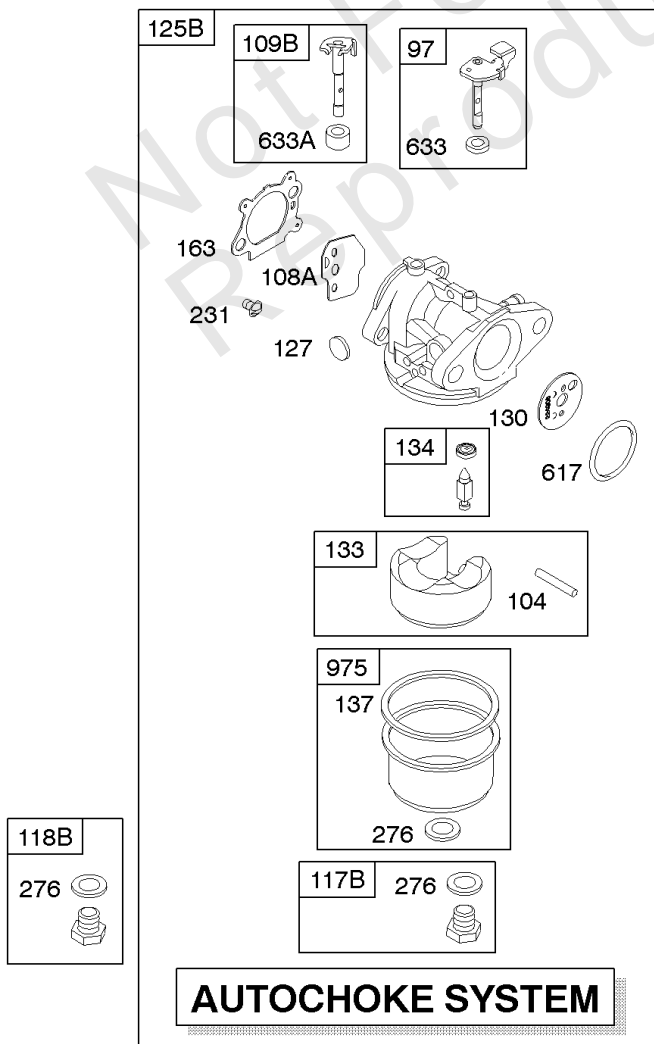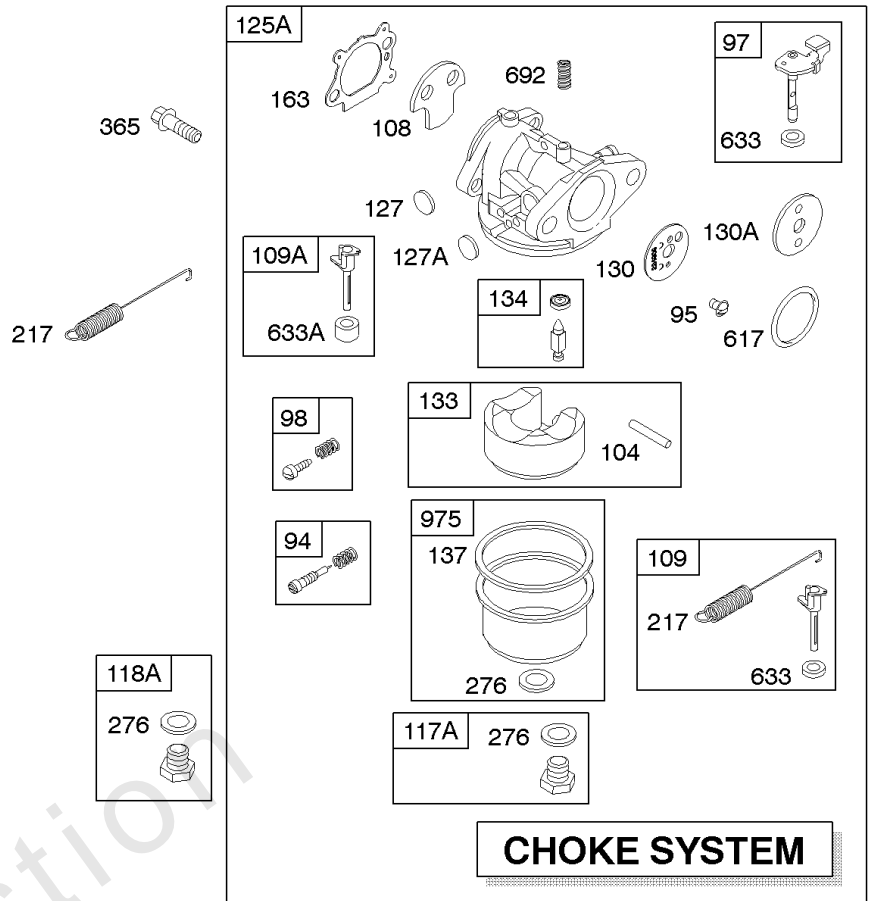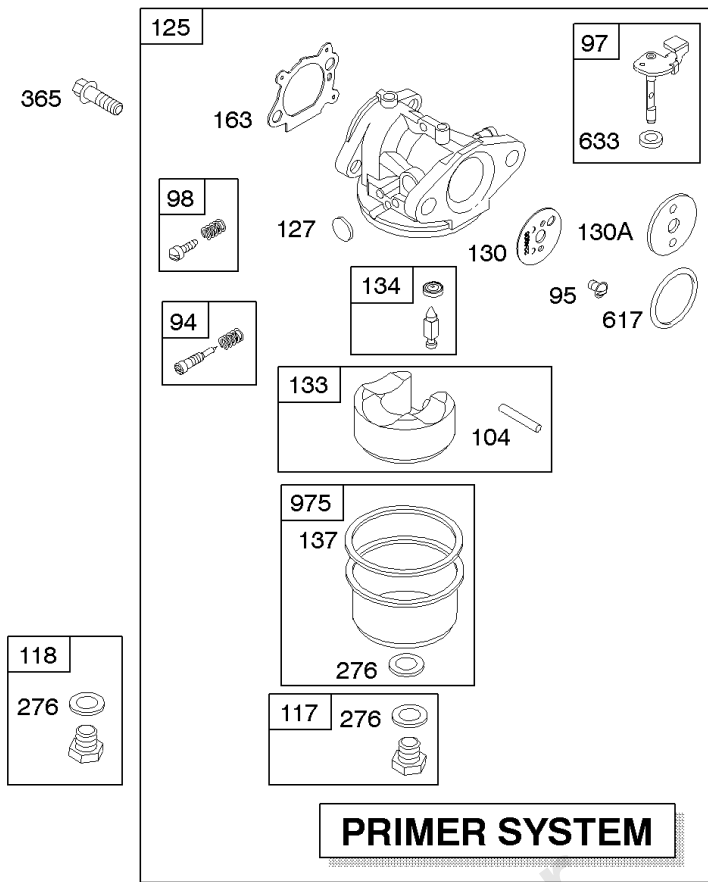




## Carburator

              REF NO	PART NO	QTY	DESCRIPTION
118B	692677		Jet-Main -(High Altitude)
121	498260		Kit-Carb Overhaul
125	498170		Carburetor -(Primer System) -Used After Code Date 96060200
125	498254		Carburetor -(Primer System) -Used Before Code Date 96060300
125A	498965		Carburetor -(Choke System) -Used After Code Date 96060200
125A	497501		Carburetor -(Choke System) -Used Before Code Date 96060300
125B	790845		Carburetor -(Autochoke System)
127	694468		Plug-Welch -(3/8" Diameter)
127A	691739		Plug-Welch -(5/16" Diameter)
130	691203		Valve-Throttle
130	696564		Valve-Throttle -(Primer System) -Used After Code Date 01040800
130A	691181		Valve-Throttle
133	398187		Float-Carburetor
134	398188		Kit-Needle/Seat
137	796610		Gasket-Float Bowl
137	693981		Gasket-Float Bowl -(1/16" Thick)
163	272653S		Gasket-Air Cleaner
217	690354		Spring-Choke Return
231	691636		Screw -(Choke Valve)
276	271716		Washer-Sealing
365	691688		Screw -(Carburetor)
617	270344S		Seal-O Ring -(Intake Manifold)
633	691321		Seal-Choke/Thr Shaft -(Throttle Shaft)
633A	693867		Seal-Choke/Thr Shaft -(Choke)
692	690572		Spring-Detent
975	493640		Bowl-Float
977	498261		Gasket Set-Carburetor

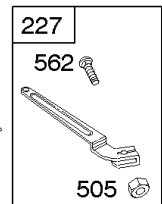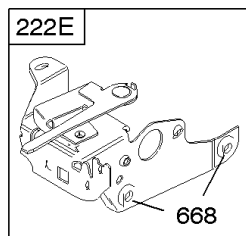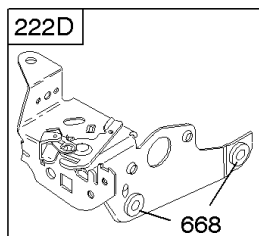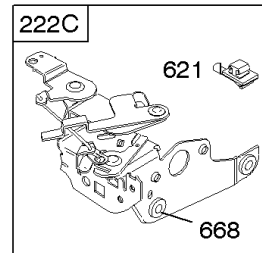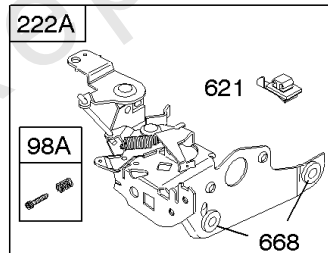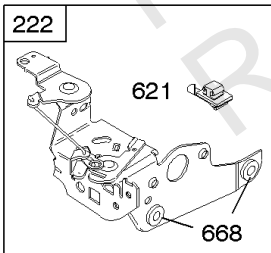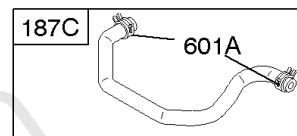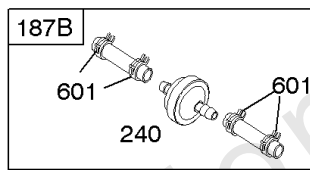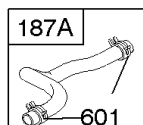
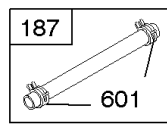
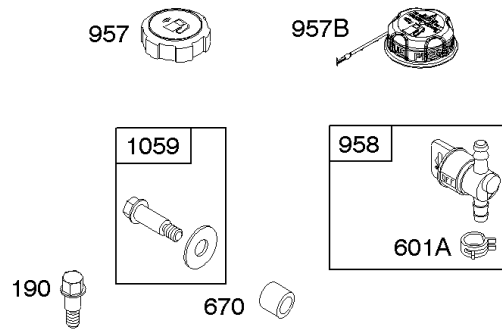
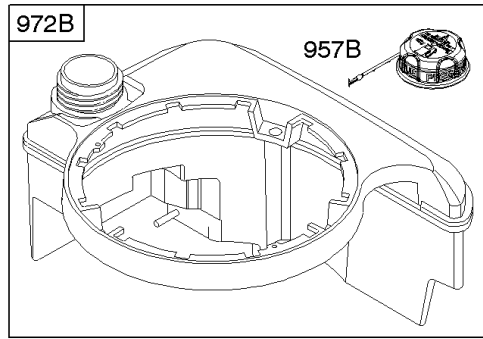


## Controls, Fuel Tank, Governor Spring

   REF NO	PART NO	QTY	DESCRIPTION
98A	493280		Kit-Idle Speed
187	791766		LINE, Fuel -(15" Long)(Cut To Required Length)
187A	791873		Line-Fuel -(Molded)
187C	791875		Line-Fuel -(Molded)
187B	791891		Line-Fuel -(Includes Filter)
188	690877		Screw -(Control Bracket)
190	690940		SCREW -(Fuel Tank)
202	691829		Link-Mechanical Governor
209	691292		Spring-Governor
209A	691835		Spring-Governor
222	790143		Bracket-Control -(Remote/Manual Friction)(Primer)
222A	692021		Bracket-Control -(Remote Choke & Choke-A-Matic)
222C	692150		Bracket-Control
222D	692467		Bracket-Control -(Remote/Manual Friction)(Variable Speed And 5 Position Manual Choke, Without Stop Switch)
222E	692982		Bracket-Control -(Fixed Speed And 5 Position Manual Choke)
227	690783		Lever-Governor Control
240	298090S		Filter-Fuel
265	690798		Clamp-Casing
265A	691024		CLAMP, Casing
267	691044		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		Lever-Control
404	690272		WASHER -(Governor Crank)
505	691251		NUT -(Governor Control Lever)
562	691119		BOLT -(Governor Control Lever)
601	791850		CLAMP, Hose
601A	691038		CLAMP, Hose
615	690340		RETAINER, Governor Shaft
616	698801		Crank-Governor
621	692310		Switch-Stop
668	493823		Spacer -(Includes 2)
670	692294		Spacer-Fuel Tank
843	691884		Sleeve-Lever -(Speed Control)
843A	691895		Sleeve-Lever -(Choke)

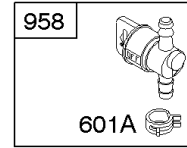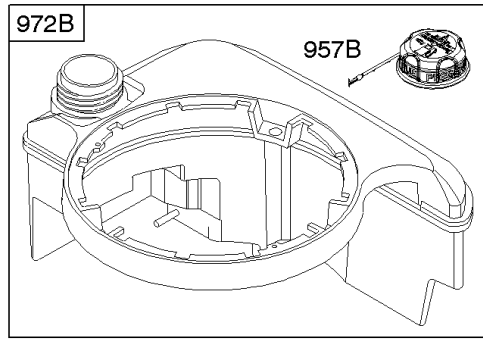







601A

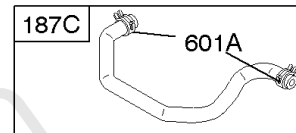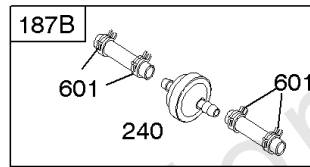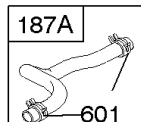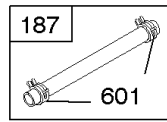    

843

843A

      
188

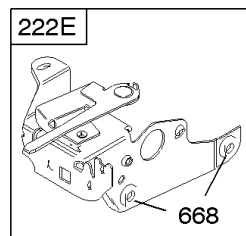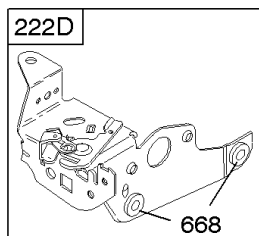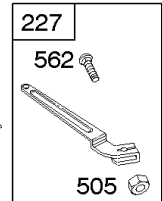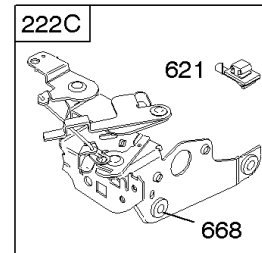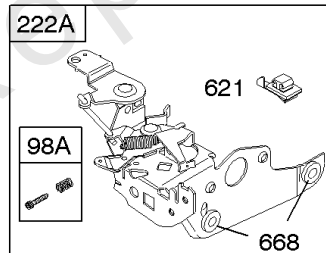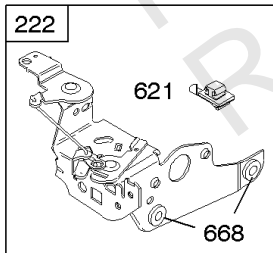

615

404

 616



267

267




265

265A

## ***Controls, Fuel Tank, Governor Spring***

   REF NO	PART NO	QTY	DESCRIPTION
957	397974S		Cap-Fuel Tank -(Plastic)
957B	699985		Cap-Fuel Tank -(Plastic)
958	698183		VALVE, Fuel Shut Off(PLT) -(Plastic)
972B	699374		Tank-Fuel -(Plastic)
1059	692311		Kit-Screw/Washer

Not For  
Reproduction

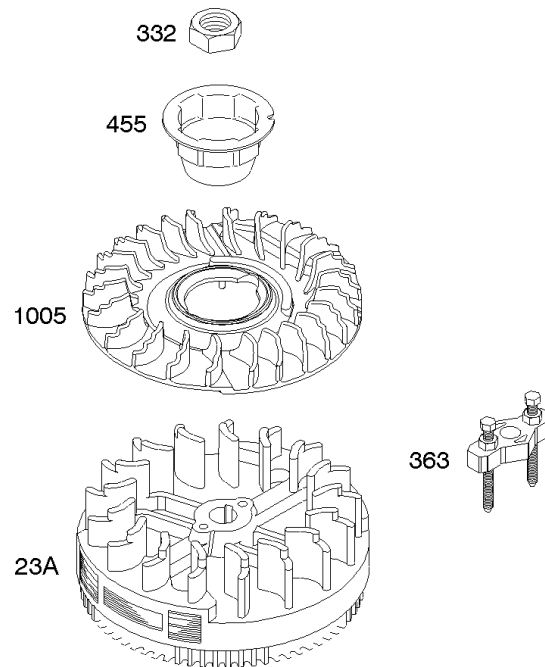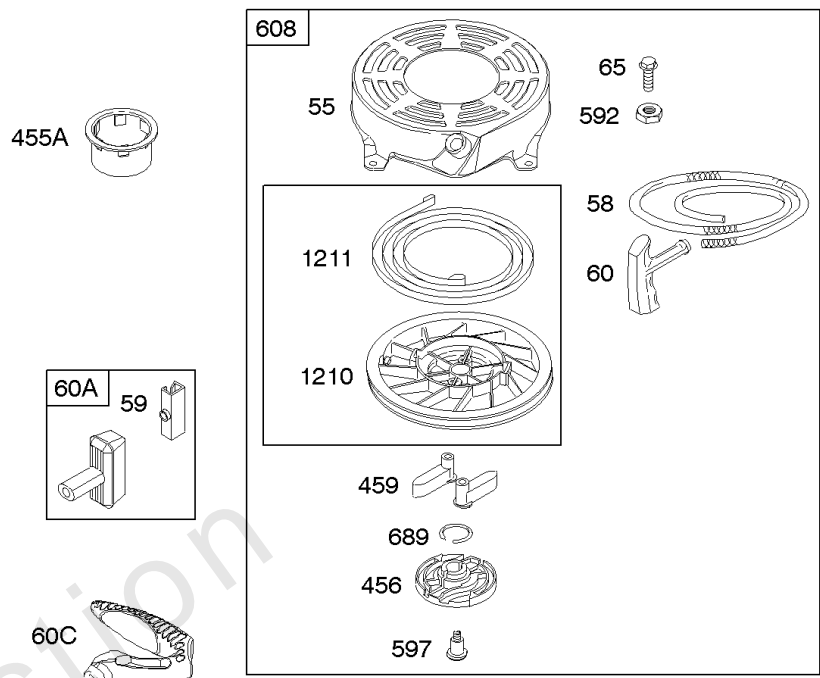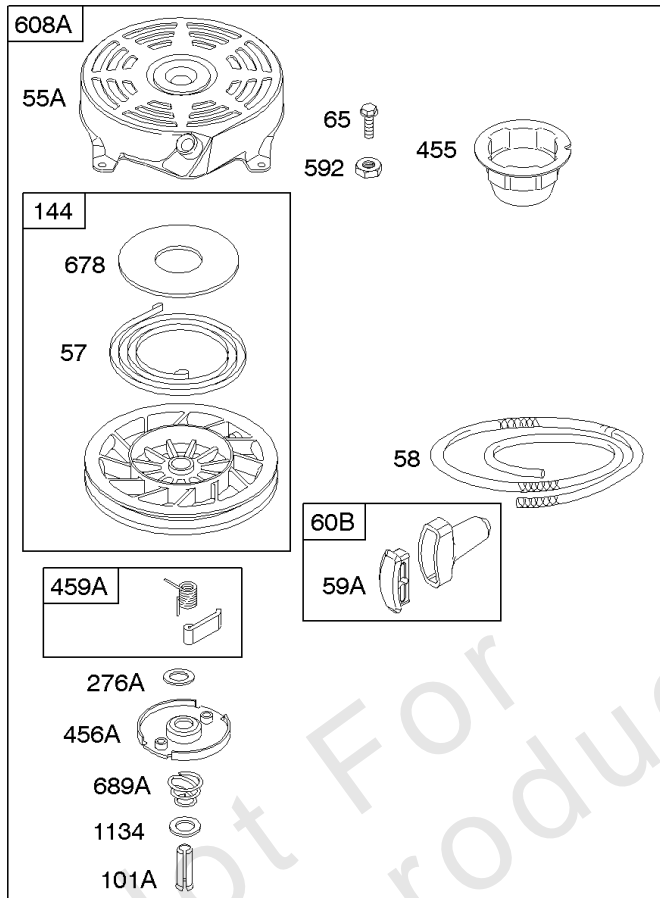



## Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23A	691987		Flywheel
55	691421		Housing-Rewind Starter
55A	492831		Housing-Rewind Starter
57	491889		Spring-Rewind Starter
58	280399S		Rope-Starter -(Cut To Required Length)
59	396892		Insert-Grip
59A	692594		Insert-Grip
60	281434S		Grip-Starter Rope -(Pistol Grip)
60A	393152		Grip-Starter Rope -(2 Piece)
60B	494212		Grip-Starter Rope
60C	799716		Grip-Starter Rope
65	690837		Screw -(Rewind Starter)
101A	262626		Pin-Shaft -(NO LONGER AVAILABLE)
144	493824		Pulley/Spring Assembly
276A	280973		Washer-Sealing
332	690662		Nut -(Flywheel)
363	19069		Puller-Flywheel
455	791960		Cup-Flywheel
455A	224250		Cup-Flywheel
456	692299		Plate-Pawl Friction
456A	224321		Plate-Pawl Friction
459	281505S		PAWL, Ratchet
459A	492833		Pawl-Ratchet
592	690800		Nut -(Rewind Starter)
597	691696		Screw -(Pawl Friction Plate)
608	497680		Starter-Rewind
608A	497598		Starter-Rewind
678	224278		Spacer-Rewind
689	691855		SPRING, Friction
689A	262625		Spring-Friction
1005	691346		Fan-Flywheel
1134	224322		Washer -(Pawl Friction Plate)
1210	498144		Pulley/Spring Assembly -(Pulley) (Pulley)
1211	498144		Pulley/Spring Assembly -(Spring) (Spring)

## Replacement Engine

REF NO	PART NO	QTY	DESCRIPTION
	12J8872981	1	Replacement Engine
	-----		Top No-Load Speed: 3000 -Trim: ALL
	-----		Service Note: Replacement engine listed is not available in the State of California. Repair with individual parts.

Not For  
Reproduction

