



Illustrated Parts List

Model Series

122600

TYPE NUMBERS
0020 through 0468.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Engine Sump	2
Exhaust System	6
Flywheel	7
Flywheel Brake	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets Sets	8
Lubrication	2
Piston Group	2
Rewind Starter	7



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1058 OPERATOR'S MANUAL



1330 REPAIR MANUAL




1319 WARNING LABEL




1019 LABEL KIT



REQUIRED when replacing parts with warning labels affixed.

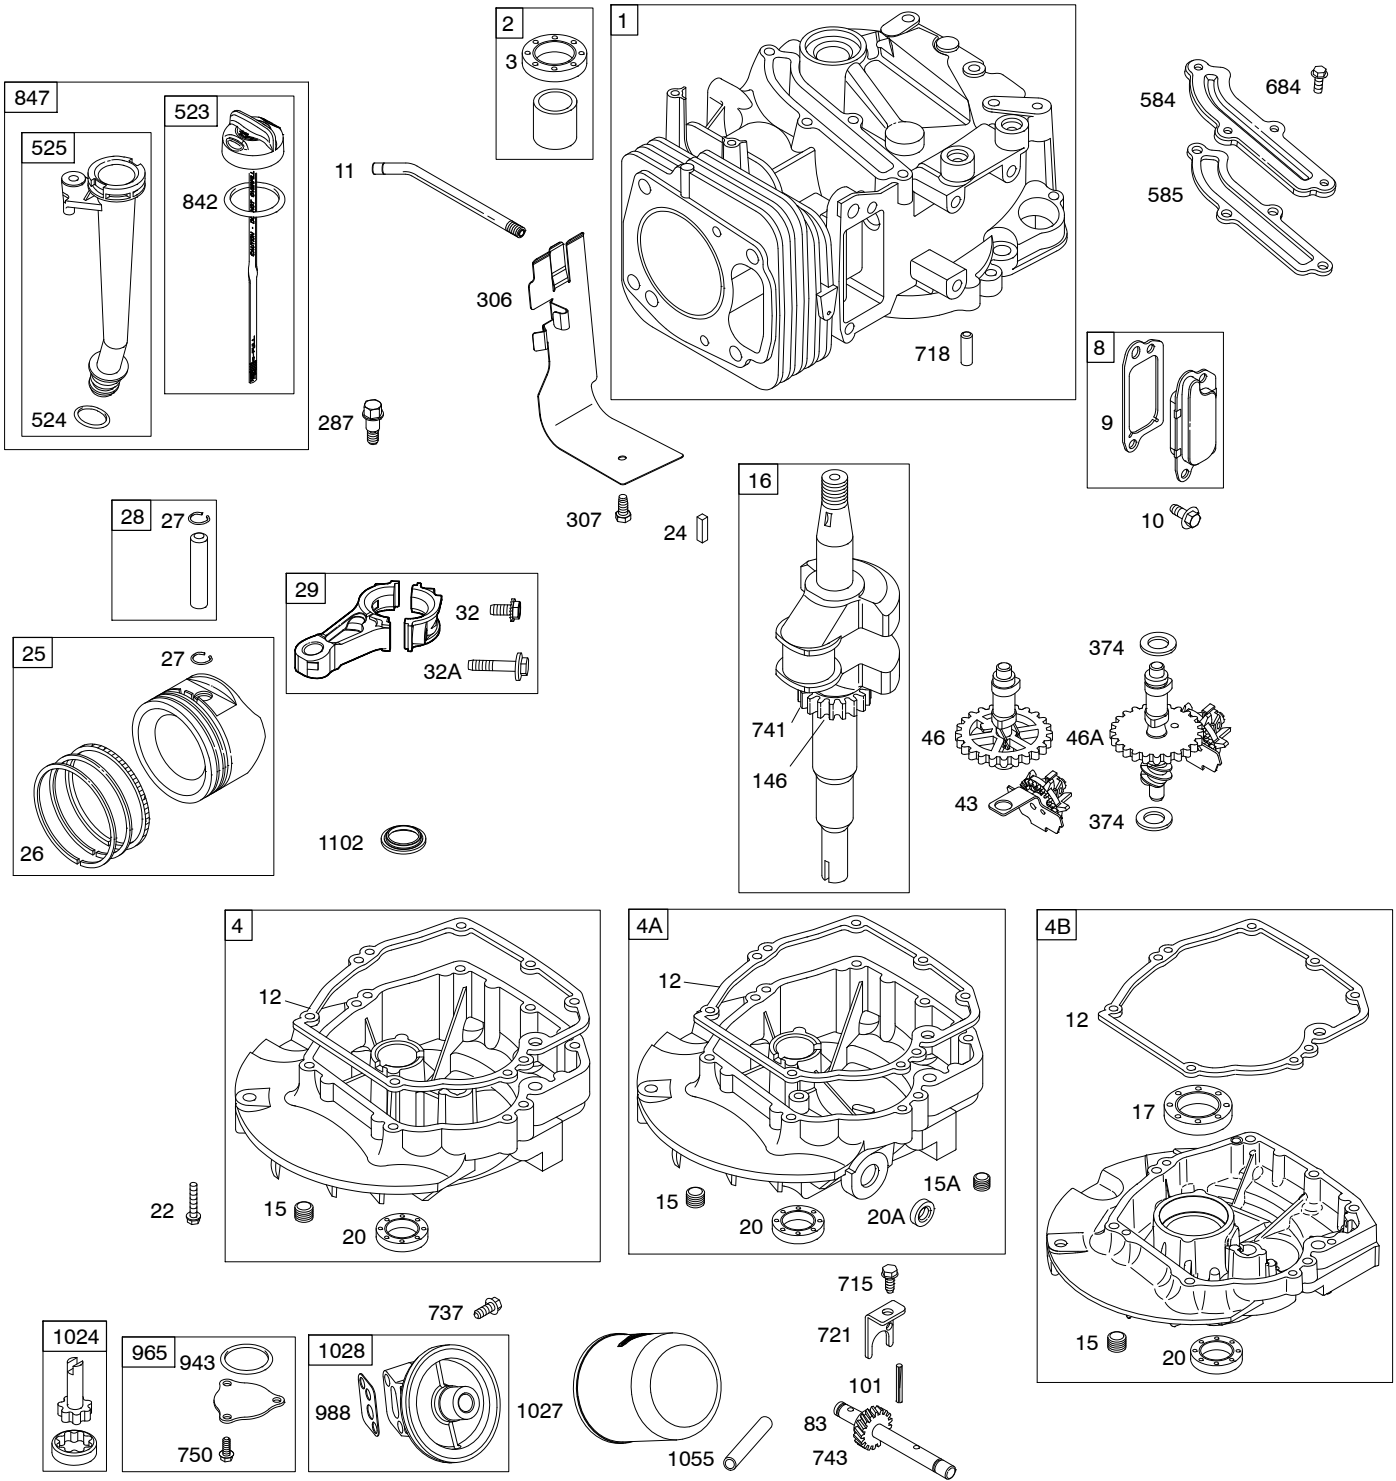


















Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 0998-2 Assemblies include all parts shown in frames. 07/21/2008








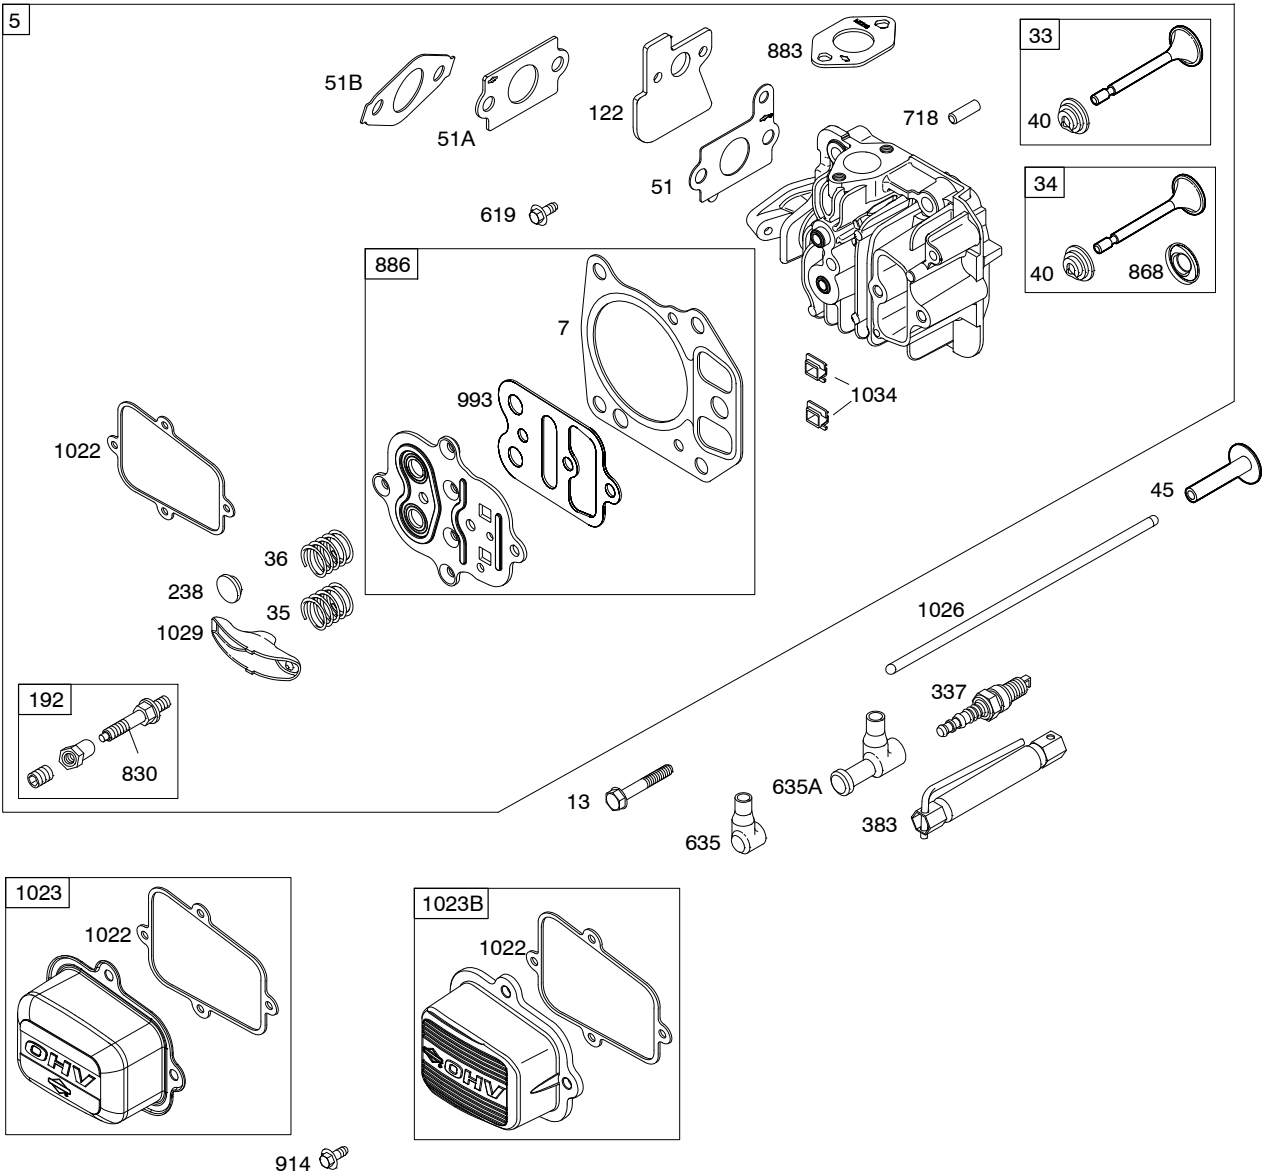


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 0998-3 Assemblies include all parts shown in frames. 07/21/2008





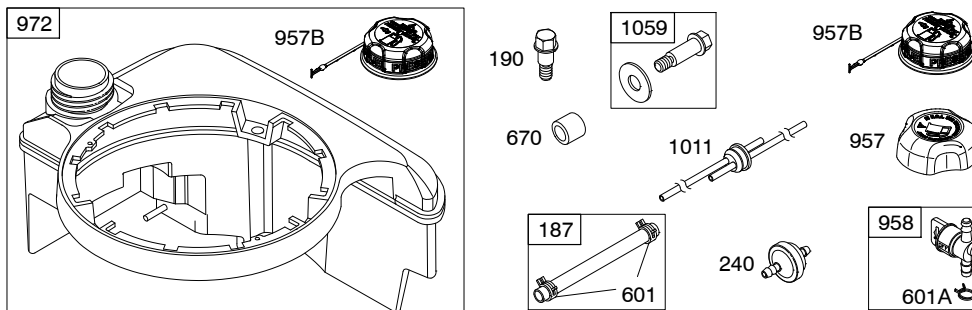
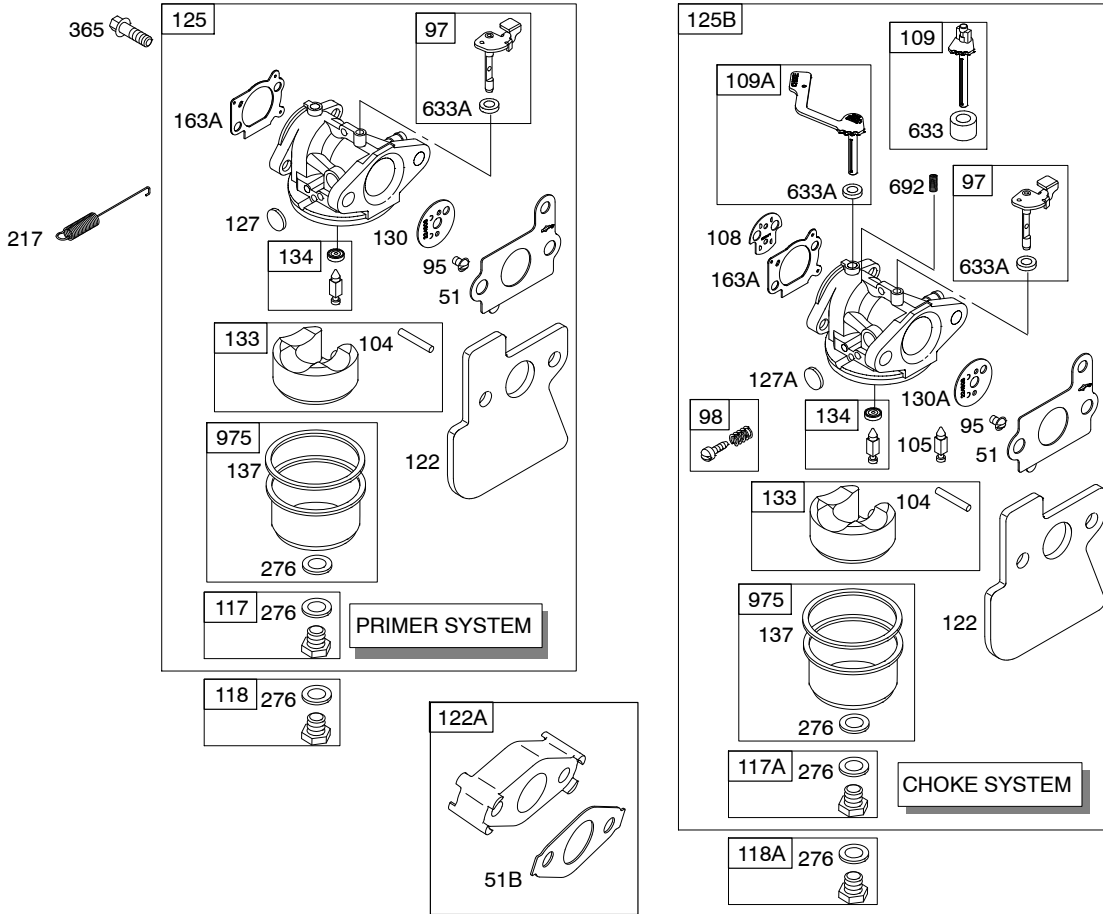


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
0998-4 Assemblies include all parts shown in frames. **07/21/2008**

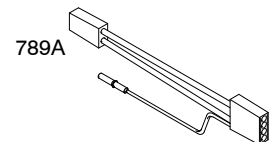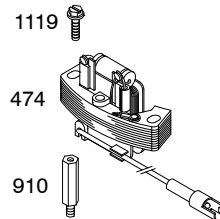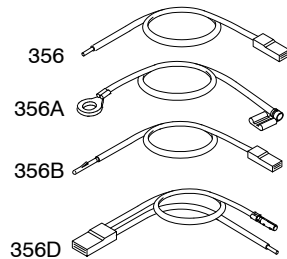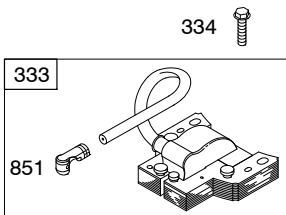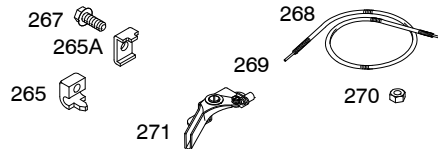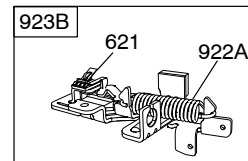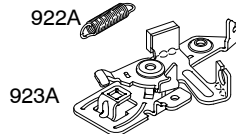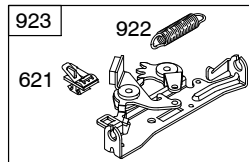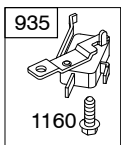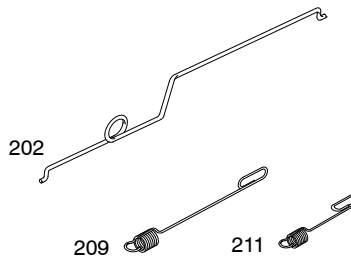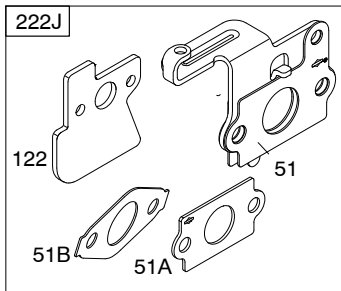
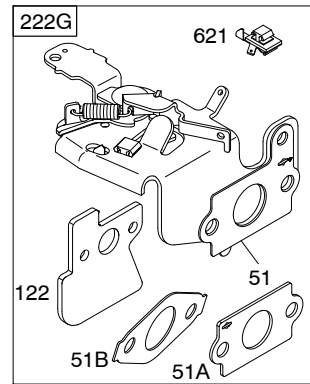
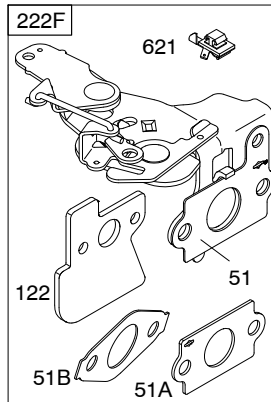
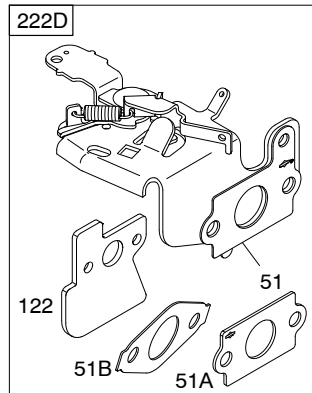
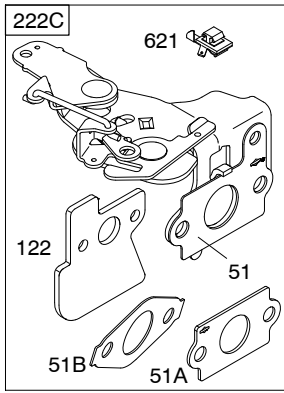


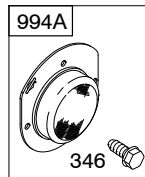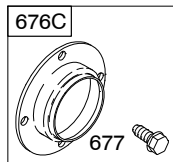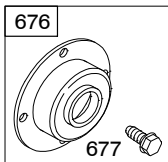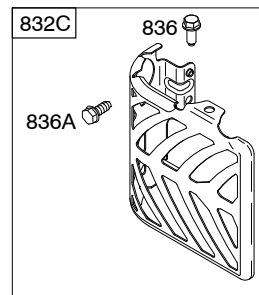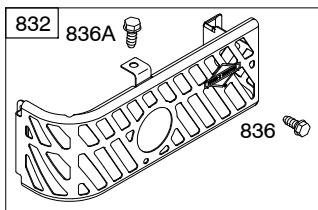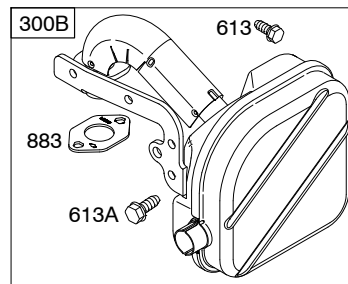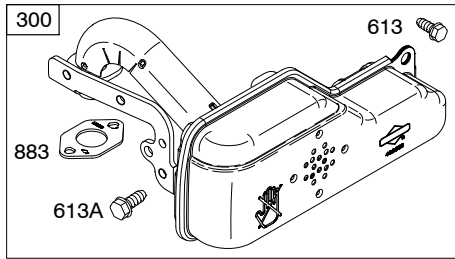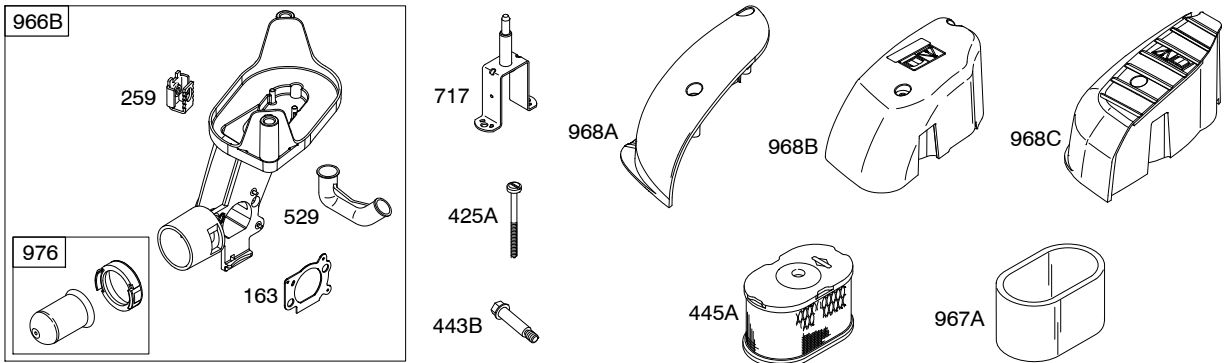





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
0998-6 Assemblies include all parts shown in frames. **07/21/2008**

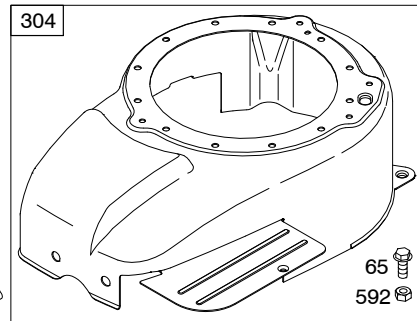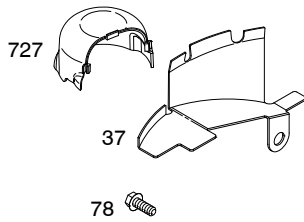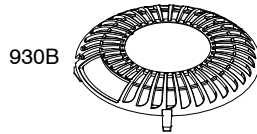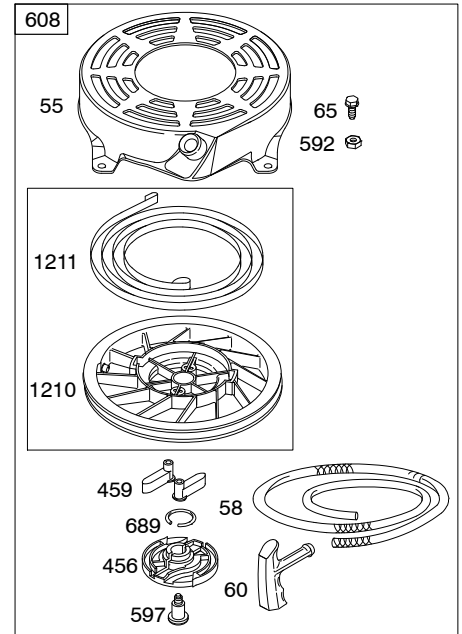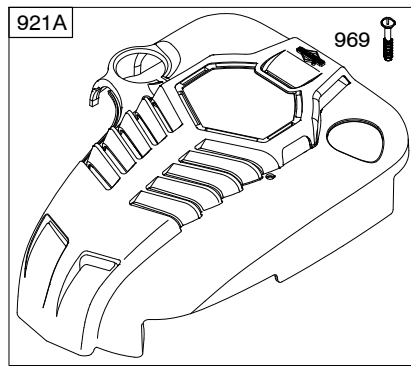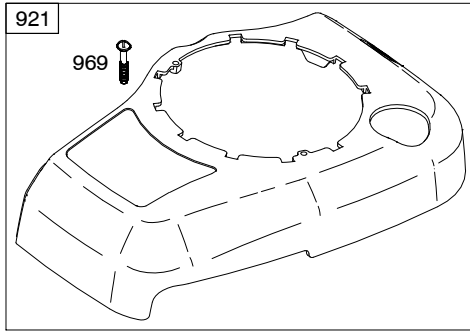

1036 EMISSIONS LABEL

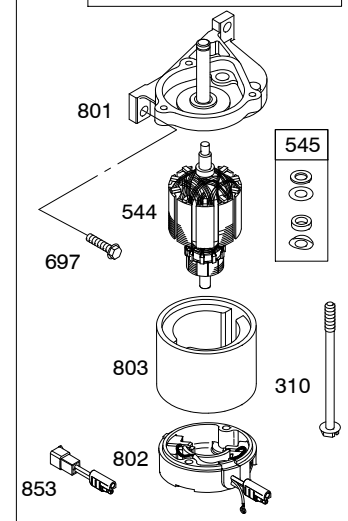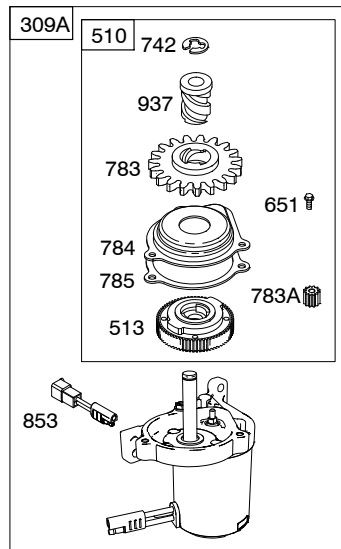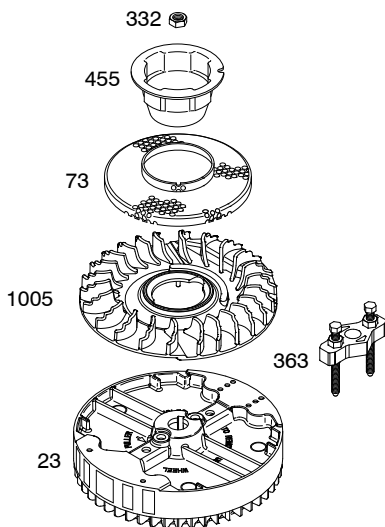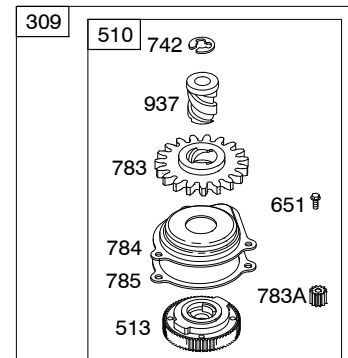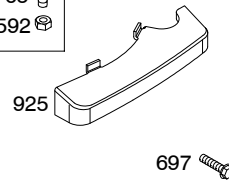

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 0998-7 Assemblies include all parts shown in frames. 07/21/2008

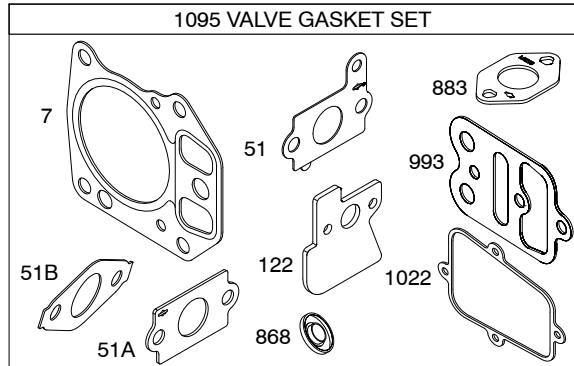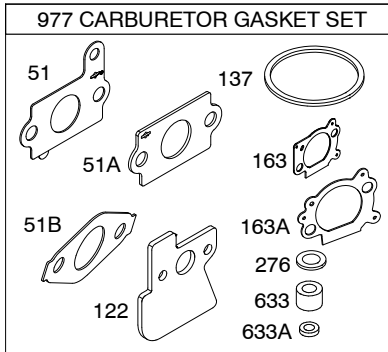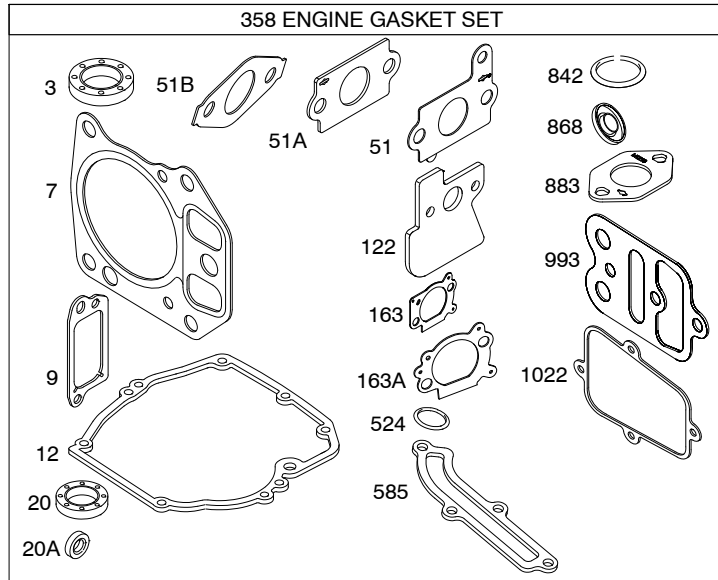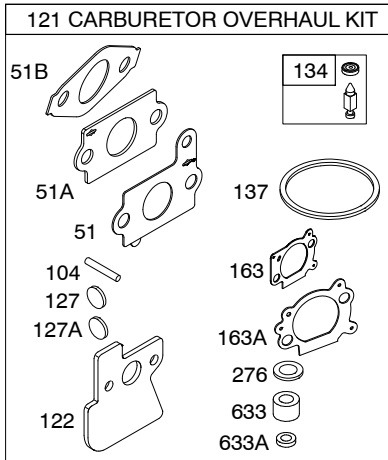

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	790363	Cylinder Assembly (Used After Code Date 04040400). ----- Note ----- 499678 Cylinder-Assembly (Used Before Code Date 04040500). 790363 Cylinder-Assembly (Used After Code Date 04040400). Used on Type No(s). 0135, 0213. 697639 Cylinder-Assembly (Used Before Code Date 04040500). Used on Type No(s). 0213.	8	495786	Breather Assembly	17	692517	Bearing-Ball	
2	399269	Kit-Bushing/Seal (Magneto Side)	9	★699833	Gasket-Breather	20	★399781S	Seal-Oil (PTO Side)	
3	★299819S	Seal-Oil (Magneto Side)	10	691125	Screw (Breather Assembly)	20A	★691952	Seal-Oil (PTO Side) (Auxiliary PTO)	
4	493279	Sump-Engine Used on Type No(s). 0111,0124,0132,0133,0150,0167,0172,0176,0190,0193,0194,0195,0203,0216,0468. ----- Note ----- 498983 Sump-Engine Used on Type No(s). 0121.	11	499675	Tube-Breather	22	691092	Screw (Crankcase Cover/Sump)	
4A	493365	Sump-Engine (Auxiliary PTO)	12	★692232	Gasket-Crankcase	23	697610	Flywheel ----- Note ----- 692693 Flywheel Used on Type No(s). 0107,0121,0124,0132,0134,0138,0142,0149,0151,0154,0156,0159,0161,0174,0176,0180,0181,0182,0184,0189,0204,0210,0214. 697637 Flywheel Used on Type No(s). 0135, 0213. 699488 Flywheel Used on Type No(s). 0133,0190,0194,0205,0206,0215,0217.	
4B	692509	Sump-Engine ----- Note ----- 694298 Sump-Engine Used on Type No(s). 0139,0206.	13	691137	Screw (Cylinder Head)	24	222698S	Key-Flywheel	
5	795501	Head-Cylinder (Used After Code Date 05110100). ----- Note ----- 695276 Head-Cylinder (Used Before Code Date 05110200).	15	691680	Plug-Oil Drain (Square Socket)	25	795429	Piston Assembly (Standard) (Used After Code Date 07090300). ----- Note ----- 792004 Piston Assembly (Standard) (Used Before Code Date 07090400). 795430 Piston Assembly (.020" Oversize) (Used After Code Date 07090300). 791325 Piston Assembly (.020" Oversize) (Used Before Code Date 07090400).	
7	★Δ697230	Gasket-Cylinder Head	15A	691093	Plug-Oil Drain (Hex Socket)				
			16	691457	Crankshaft ----- Note ----- 691456 Crankshaft Used on Type No(s). 0130,0131,0145,0163,0165,0166,0167,0172,0186,0193,0195,0213,0214,0468. 692716 Crankshaft Used on Type No(s). 0132,0133,0174. 692823 Crankshaft Used on Type No(s). 0124. 693291 Crankshaft Used on Type No(s). 0139,0143,0151,0156,0180,0184,0189,0205,0217,0218. 694153 Crankshaft Used on Type No(s). 0150. 695860 Crankshaft Used on Type No(s). 0176,0181,0190,0210,0215. 695950 Crankshaft Used on Type No(s). 0111,0116,0118,0120,0192,0207,0208. 694491 Crankshaft Used on Type No(s). 0216. 790156 Crankshaft Used on Type No(s). 0134,0194.				

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
118	497466	Jet–Main (High Altitude) (Used After Code Date 03110600). ----- Note ----- 498975 Jet–Main (High Altitude) (Used After Code Date 99030700 and Before Code Date 03110700). 497315 Jet–Main (High Altitude) (Used Before Code Date 99020800).	125	790120	Carburetor (Primer System)	133	398187	Float–Carburetor
118A	497466	Jet–Main (High Altitude) (Used After Code Date 02050500). ----- Note ----- 498975 Jet–Main (High Altitude) (Used Before Code Date 02050600). 494870 Jet–Main (High Altitude) Used on Type No(s). 0213.	125B	698056	Carburetor (Choke System) (Used After Code Date 02051200). ----- Note ----- 694205 Carburetor (Choke System) (Used Before Code Date 02051300). 698055 Carburetor (Choke System) (Used After Code Date 02050500). Used on Type No(s). 0121, 0124. 694203 Carburetor (Choke System) (Used Before Code Date 02050600). Used on Type No(s). 0121, 0124. 697914 Carburetor (Choke System) Used on Type No(s). 0176. 790603 Carburetor (Choke System) Used on Type No(s). 0213.	134	●398188	Kit–Needle/Seat
121	792383	Kit–Carburetor Overhaul	127	●694468	Plug–Welch	137	●●693981	Gasket–Float Bowl
122	●●●692799	Spacer–Carburetor	127A	●691739	Plug–Welch	146	690979	Key–Timing
122A	792382	Spacer–Carburetor	130	691203	Valve–Throttle ----- Note ----- 696564 Valve–Throttle (Used With Plastic Throttle Shaft)	163	●◆691894	Gasket–Air Cleaner
			130A	691181	Valve–Throttle ----- Note ----- 691203 Valve–Throttle Used on Type No(s). 0121,0124, 0142, 0213.	163A	●◆692667	Gasket–Air Cleaner
						187	791766	Line–Fuel (Cut to Required Length)
						188	693168	Screw (Control Bracket)
						190	690940	Screw (Fuel Tank)
						192	694543	Adjuster–Rocker Arm
						202	691303	Link–Mechanical Governor

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION												
209	691851	Spring-Governor ----- Note ----- 263039 Spring-Governor Used on Type No(s). 0163,0166,0167,0172. 690319 Spring-Governor Used on Type No(s). 0111,0113,0118,0134, 0139,0143,0149,0150, 0155,0159,0178,0184, 0190,0192,0206,0215, 0216. 691290 Spring-Governor Used on Type No(s). 0124. 692906 Spring-Governor Used on Type No(s). 0107,0110,0130,0131, 0132,0133,0135,0148, 0151,0154,0176,0180, 0181,0182,0194,0218. 691291 Spring-Governor Used on Type No(s). 0128,0145,0175,0186, 0193,0195,0213. 693031 Spring-Governor Used on Type No(s). 0156,0189,0214. 691292 Spring-Governor Used on Type No(s). 0211,0468. 692433 Spring-Governor Used on Type No(s). 0217. 791156 Spring-Governor Used on Type No(s). 0116,0120,0207,0208.	211	692434	Spring-Governed Idle	222G	792397	Bracket-Control (Used After Code Date 05110100). Used on Type No(s). 0020,0121,0124,0138, 0142,0145,0149,0151, 0159,0163,0166,0174, 0184,0190,0204,0205, 0206,0215. ----- Note ----- 692617 Bracket-Control (Used Before Code Date 05110200). 222D	792400	Bracket-Control (Used After Code Date 05110100). Used on Type No(s). 0130,0132,0176,0210, 0218. ----- Note ----- 692722 Bracket-Control (Used Before Code Date 05110200). Used on Type No(s). 0130,0132,0176,0210, 0218. 222J	792404	Bracket-Control (Used After Code Date 05110100). Used on Type No(s). 0111,0116,0118,0120, 0128,0150,0168,0170, 0175,0192,0203,0207, 0208,0213. ----- Note ----- 697614 Bracket-Control (Used Before Code Date 05110200). Used on Type No(s). 0111,0116,0118,0120, 0128,0150,0168,0170, 0175,0192,0203,0213.								
			222C	792398	Bracket-Control (Used After Code Date 05110100). ----- Note ----- 692617 Bracket-Control (Used Before Code Date 05110200). 222D	792400	Bracket-Control (Used After Code Date 05110100). Used on Type No(s). 0130,0132,0176,0210, 0218. ----- Note ----- 692722 Bracket-Control (Used Before Code Date 05110200). Used on Type No(s). 0130,0132,0176,0210, 0218. 222J	792404	Bracket-Control (Used After Code Date 05110100). Used on Type No(s). 0111,0116,0118,0120, 0128,0150,0168,0170, 0175,0192,0203,0207, 0208,0213. ----- Note ----- 697614 Bracket-Control (Used Before Code Date 05110200). Used on Type No(s). 0111,0116,0118,0120, 0128,0150,0168,0170, 0175,0192,0203,0213.											
			222F	792399	Bracket-Control (Used After Code Date 05110100). Used on Type No(s). 0107,0110,0133,0134, 0135,0154,0156,0161, 0180,0181,0182,0189, 0194,0214,0217. ----- Note ----- 692615 Bracket-Control (Used Before Code Date 05110200). Used on Type No(s). 0107,0110,0133,0134, 0135,0154,0156,0161, 0180,0181,0182,0189, 0194,0214,0217.	227	691467	Lever-Governor Control	236	691826	Link-Lockout	238	691300	Cap-Valve	240	298090S	Filter-Fuel	259	691189	Bracket-Casing Clamp

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
265	690798	Clamp-Casing	305	691108	Screw (Blower Housing)	443B	690255	Screw (Air Cleaner Primer Base)
265A	691024	Clamp-Casing	306	691232	Shield-Cylinder	445A	697029	Filter-Air Cleaner Cartridge
267	691044	Screw (Casing Clamp)	307	690345	Screw (Cylinder Shield)	455	791960	Cup-Flywheel
268	691025	Casing-Control Wire (Cut To Required Length)	309	695550	Motor-Starter (Used Before Code Date 07052900).	456	692299	Plate-Pawl Friction
269	691026	Wire-Control (Cut To Required Length)	309A	795092	Motor-Starter (Used After Code Date 07052800).	459	281505S	Pawl-Ratchet
270	691027	Nut (Control Wire Casing)	310	692327	Bolt (Starter Motor)	474	691991	Alternator ----- Note ----- 695730 Alternator Used on Type No(s). 0135, 0213.
271	691028	Lever-Control	332	690662	Nut (Flywheel)	505	691251	Nut (Governor Control Lever)
276	◆271716	Washer-Sealing	333	802574	Armature-Magneto	510	795093	Drive-Starter
287	690940	Screw (Dipstick Tube)	334	691061	Screw (Magneto Armature)	513	692358	Clutch-Drive
300	694248	Muffler (Used After Code Date 99030700). ----- Note ----- 692276 Muffler (Used Before Code Date 99030800). 692275 Muffler (Used Before Code Date 99030800). Used on Type No(s). 0149.	337	692051	Plug-Spark (Resistor) ----- Note ----- 692720 Plug-Spark (EMS)	523	499621	Dipstick
300B	699769	Muffler-Exhaust	346	690661	Screw (Spark Arrestor)	524	★692296	Seal-Dipstick Tube
304	499677	Housing-Blower ----- Note ----- 499676 Housing-Blower Used on Type No(s). 0107,0124,0132,0133, 0134,0135,0142,0145, 0149,0151,0154,0156, 0161,0163,0166,0180, 0181,0182,0184,0186, 0189,0190,0194,0204, 0205,0206,0210,0214, 0215,0217. 695976 Housing-Blower Used on Type No(s). 0113, 0128, 0175, 0203, 0468.	356	692390	Wire-Stop	525	495265	Tube-Dipstick
			356A	499690	Wire-Stop	529	692937	Grommet
			356B	692151	Harness-Wiring	544	690786	Armature-Starter
			356D	695283	Harness-Wiring	545	492919	Washer Set (Starter Motor)
			358	792384	Gasket Set-Engine	562	691119	Bolt (Governor Control Lever)
			363	19069	Flywheel Puller	584	697734	Cover-Breather Passage
			365	691129	Screw (Carburetor) (Used After Code Date 05110100). ----- Note ----- 691136 Screw (Carburetor) (Used Before Code Date 05110200).	585	★691879	Gasket-Breather Passage
			374	691074	Washer (Camshaft)	592	690800	Nut (Rewind Starter)
			383	19374S	Wrench-Spark Plug	597	691696	Screw (Pawl Friction Plate)
			404	690272	Washer (Governor Crank)	601	791850	Clamp-Hose
			425A	690244	Screw (Air Cleaner Cover)	601A	691038	Clamp-Hose
						608	497680	Starter-Rewind
						613	691108	Screw (Exhaust Muffler)
						613A	691140	Screw (Exhaust Muffler)
						615	690340	Retainer-Governor Shaft

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
616	698801	Crank-Governor	742	93941	Retainer-E Ring	832	691466	Guard-Muffler
619	691108	Screw (Cylinder Head Plate)	743	691772	Gear-Drive			(Used After Code Date 99030700).
621	692310	Switch-Stop	745	691648	Screw (Brake)			----- Note -----
633	◆♦691321	Seal-Choke/Throttle Shaft	750	691683	Screw (Oil Pump Cover)			692984 Guard-Muffler (Used Before Code Date 99030800).
633A	◆♦693867	Seal-Choke/Throttle Shaft			----- Note -----	832C	695593	Guard-Muffler Used on Type No(s). 0128, 0172, 0214, 0216.
635	66538S	Boot-Spark Plug			691147 Screw (Oil Pump Cover)			
635A	692927	Boot-Spark Plug			Used on Type No(s). 0130, 0131, 0134, 0135, 0159, 0168, 0175.			
651	691660	Screw (Starter Gear Cover)	783	691918	Gear-Pinion (19 Teeth)	836	691147	Screw (Muffler Guard)
670	692294	Spacer-Fuel Tank			(Starter Drive)	836A	697551	Screw (Muffler Guard)
676	397931	Deflector-Muffler	783A	691269	Gear-Pinion (12 Teeth)	842	★691031	Seal-O Ring (Dipstick Tube)
676C	497682	Deflector-Muffler			Cover-Gear	847	692047	Dipstick/Tube Assembly
677	690661	Screw (Muffler Deflector)	784	795095	Gasket-Starter Cover	851	493880S	Terminal-Spark Plug
684	690345	Screw (Breather Passage Cover)	785	692352	Harness-Wiring (Used After Code Date 00040600).	853	695268	Adapter-Wire
689	691855	Spring-Friction	789A	696546	----- Note -----	868	★△692044	Seal-Valve
692	690572	Spring-Detent			690790 Harness- Wiring (Used Before Code Date 00040700).	883	★△691893	Gasket-Valve
697	691127	Screw (Drive Cap)			Cap-Drive	886	696268	Gasket Kit-Cylinder Head/Plate
715	691147	Screw (Stop Shaft)	801	690782	Cap-End (Used After Code Date 00040600).	910	691094	Stud (Alternator)
717	693462	Bracket-Air Cleaner	802	695267	----- Note -----	914	691108	Screw (Rocker Cover)
718	690959	Pin-Locating			695975 Cap-End (Used Before Code Date 00040700).	921	692695	Cover-Blower Housing (Red)
721	690449	Shaft-Stop	803	695266	Housing-Starter (Used After Code Date 00040600).			----- Note -----
727	692934	Cover-Starter Drive			----- Note -----	921A	699633	Cover-Blower Housing
737	692511	Screw (Oil Filter Adapter)			695975 Housing- Starter (Used Before Code Date 00040700).	922	691831	Spring-Brake
741	794388	Gear-Timing (Use Without Woodruff Key) (Used After Code Date 07093000).	830	694544	Stud-Rocker Arm	922A	692135	Spring-Brake
		----- Note -----						692699 Cover-Blower Housing (Black)
		790345 Gear-Timing (Use Without Woodruff Key) (Used Before Code Date 07100100).						Cover-Blower Housing
		691830 Gear-Timing (Uses Woodruff Key)						Spring-Brake

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
923	691994	Brake	965	692507	Cover–Oil Pump	1029	691230	Arm–Rocker
923A	695891	Brake	966B	690243	Base–Air Cleaner Primer	1034	691343	Guide–Push Rod
		----- Note -----				1036		Label–Emissions (Available From A Briggs & Statton Authorized Dealer)
		695891 Brake (Used Before Code Date 08050100). Used on Type No(s). 0113, 0170, 0203, 0218, 0468.	967A	273356S	Filter–Pre Cleaner	1054	280275	Tie–Cable
923B	796136	Brake (Used After Code Date 08043000). Used on Type No(s). 0113, 0170, 0203, 0218, 0468.	968A	691342	Cover–Air Cleaner	1055	692623	Tube–Oil Pump
			968B	692435	Cover–Air Cleaner	1058	277102	Operator’s Manual
925	795403	Cover–Linkage (Used After Code Date 07072200). ----- Note -----	968C	692692	Cover–Air Cleaner	1059	692311	Kit–Screw/Washer
		690595 Cover– Linkage (Used Before Code Date 07072300).	969	691138	Screw (Blower Housing Cover)	1095	792386	Gasket Set–Valve
930B	692691	Guard–Rewind	972	699374	Tank–Fuel (Plastic)	1102	691255	Pilot–Guide
935	499421	Switch–Interlock	975	493640	Bowl–Float	1119	692979	Screw (Alternator)
937	691325	Spline–Starter	976	694395	Primer–Carburetor			----- Note -----
943	692514	Seal–O Ring (Oil Pump Cover)	977	792385	Gasket Set–Carburetor			691138 Screw (Alternator) Used on Type No(s). 0135, 0213.
957	692046	Cap–Fuel Tank (Plastic)	978	692515	Gasket–Oil Adapter	1160	690345	Screw (Interlock Switch)
957B	699985	Cap–Fuel Tank (Plastic)	993	★△694088	Gasket–Cylinder Head Plate	1210	498144	Pulley/Spring Assembly (Pulley)
958	698183	Valve–Fuel Shut–Off (Plastic)	994A	398067	Arrestor–Spark	1211	498144	Pulley/Spring Assembly (Spring)
			1005	691346	Fan–Flywheel	1319	794467	Label–Warning
			1011	698094	Tube–Vent	1330	272147	Manual–Repair
			1019	695811	Kit–Label			
			1022	★△691890	Gasket–Rocker Cover			
			1023	499624	Cover–Rocker			
			1023B	692694	Cover–Rocker			
			1024	692508	Pump–Oil			
			1026	692045	Rod–Push			
			1027	692513	Filter–Oil			
			1028	692516	Adapter–Oil Filter			
					----- Note -----			
					694632 Adapter–Oil Filter Used on Type No(s). 0107.			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

